

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com




EPSON[®]

User's Guide

PROJECTOR

EMP-821 EMP-81 EMP-61



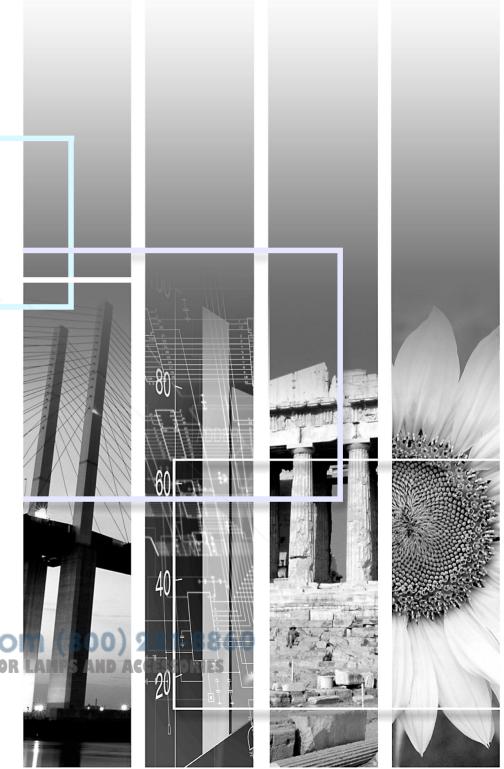

Notations Used in This User's Guide



CAUTION	Indicates procedures which may result in damage or injury if sufficient care is not taken.			
TIP	Indicates additional information and points which may be useful to know regarding a topic.			
Indicates a page where useful information regarding a topic can be found. Click on the page numb display that page.				
Indicates that an explanation of the underlined word or words in front of this symbol appears in the glossary of terms. Click the underlined word or words to display the corresponding entry in the "Glossary" section of the "Appendices". p.94				
Indicates operating methods and the order of operations. The procedure indicated should be carried out in the order of the numbered steps.				
[(Name)]	Indicates the name of the buttons on the control panel or the remote control. And also port names. Example: [Esc] button, [Audio1] port			
" (Menu Name) "	Indicates configuration menu items. Example: "Image"-"Brightness"			

When "unit" or "projector" appears in the text of this *User's Guide*, it may refer to items which are accessories or optional equipment in addition to the main projector unit itself.



Features of the Projector



Colour mode function



The following six preset colour modes are provided so that you can easily obtain the optimum images simply by selecting the image quality. In addition, if projecting onto blackboards rather than projection screens in places such as schools, you can select the "Blackboard" setting to allow images to be projected in their natural tints.

p.43, p.51, p.53

- Dynamic
- Presentation
- Theatre

- Living Room
 - sRGB**
- Blackboard

Presentation



Brightness Control



The brightness of the lamp can be set to one of two settings.

Fine and clear images can be obtained even in a bright room like a conference room and a classroom.

If projecting images in a dark room or onto a small screen and the images are too bright, change the setting to "Low".

Merit of "Low"

- Reduction in power consumption of approximately 20%
- Reduction in operating noise of approximately 17%
- Approximately 1.5 times longer lamp life

 


Automatic keystone correction function





The vertical angle of the projector is detected, so that any vertical keystone distortion in the projected images can be automatically corrected. p.37









Easy to Operate



The accessory remote control can be used to carry out operations such as pausing projection (Freeze function p.47), zooming in on important parts of images (E-Zoom function p.48) and pointing out important parts of images using a pointer icon (Pointer function p.49).

In addition, the remote control can be used to move the pointer around on the computer screen during projection (see "Wireless Mouse Function" \bigcirc p.20).




Password protect function assists administration and theft prevention



Password protection function allows you to limit using and changing the settings of the projector. This means that the projector cannot be used if it is taken without authorisation, and thus serves as a theft-prevention feature.

p.27

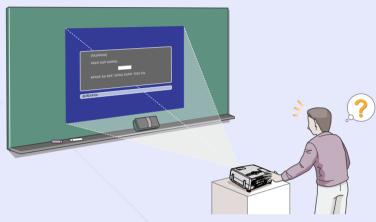





Contents

Notations Used in This User's Guide	1
Features of the Projector	2
Before Using the Projector	
Part Names and Functions	7
Front/Top	7
Control Panel	8
Rear	9
Base	10
Remote Control	11
Before Using the Remote Control	12
Inserting the Batteries	12
Using the Remote Control and Remote Operating Range.	13
Installation	15
Setting Up the Projector	15
Screen Size and Projection Distance	16
Connecting to a Computer	18
Eligible Computers	18
Projecting Images from the Computer	19
Using the Remote Control to Operate the Mouse Pointer	
(Wireless Mouse Function)	
Connecting to an External Monitor	
Connecting to a Video Source	
Projecting Composite Video Images	23
Projecting Composite Video Images	24
Projecting Component Video Images Projecting RGB Video Images. Playing Sound from Video Equipment.	24
Projecting RGB Video Images	25 38 PR
Preventing theft (Password Protect)	
When Password Protect is enabled	
Setting Password Protect	28

Basic Operations

Turning the Projector On	31
Connecting the Power Cable	31
Turning the Power On and Projecting Images	32
Turning the Projector Off	34
Adjusting the Screen Image	36
Adjusting the Image Size (Zoom Function)	36
Focusing the Screen Image	36
Adjusting the Image Angle and Automatic Keystone	
Correction Function	37
Manually Correcting Keystone Distortion	39
Adjusting the Image Quality	40
Adjusting Computer Images and RGB Video Images	40
Selecting the Projection Quality	
(Colour Mode Selection)	43
Adjusting the Volume	44

Advanced Operations

Functions for Enhancing Projection	46
A/V Mute	46
Freeze	47
Wide-screen Projection of Images from Video Equipment	
(Changing the Aspect Ratio)	47
E-Zoom	
Pointer function	49
Using the Configuration Menu Functions	50
List of Functions somes	51
Using the Configuration Menus	





Troub	lesho	oting
--------------	-------	-------

Using the Help	69
Problems Solving	71
Reading the Indicators	71
When the Indicators Provide No Help	74

Appendices

Maintenance	84
Cleaning	84
Replacing Consumables	85
Saving a User's Logo	90
Optional Accessories and Consumables	93
Glossary	94
List of ESC/VP21 Commands	
Command List	
Communication Protocol	96
Cable Layouts	97
USB Connection Setup	
List of Supported Monitor Displays	
Specifications	.100
Appearance	
Index	







Before Using the Projector


This chapter describes the procedures for setting up the projector before use.

Part Names and Functions	7	 Using the Remote Control to Operate the Mouse Point 	
• Front/Top	7	(Wireless Mouse Function)	
• Control Panel		• Connecting to an External Monitor	22
• Rear	9	Connecting to a Video Source	23
• Base	10	Projecting Composite Video Images	23
• Remote Control	11	• Projecting S-Video Images	
Before Using the Remote Control	. 12	• Projecting Component Video Images	
• Inserting the Batteries		• Projecting RGB Video Images	
• Using the Remote Control and Remote		Playing Sound from Video Equipment	26
Operating Range		Preventing theft (Password Protect)	27
•Using the Remote Control		• ,	
•Remote Operating Range	14	• When Password Protect is enabled	
Installation	15	• When "Power ON Protect" is enabled (ON)	
• Setting Up the Projector		• When "User's Logo Protect" is enabled (ON)	
Screen Size and Projection Distance	16	• Setting Password Protect	40
•EMP-821 FixYourDLP.com	16		
•EMP-821 •EMP-81/61 DISCOUNT-METC	16	t com (000) 001 0060	
Connecting to a Computer	18 18	L.COIII (800) 281-8800	
• Eligible Computers		And the state of t	
• Projecting Images from the Computer			
•If the Monitor Port is a Mini D-Sub 15-pin Port (Example)			

Part Names and Functions




Front/Top

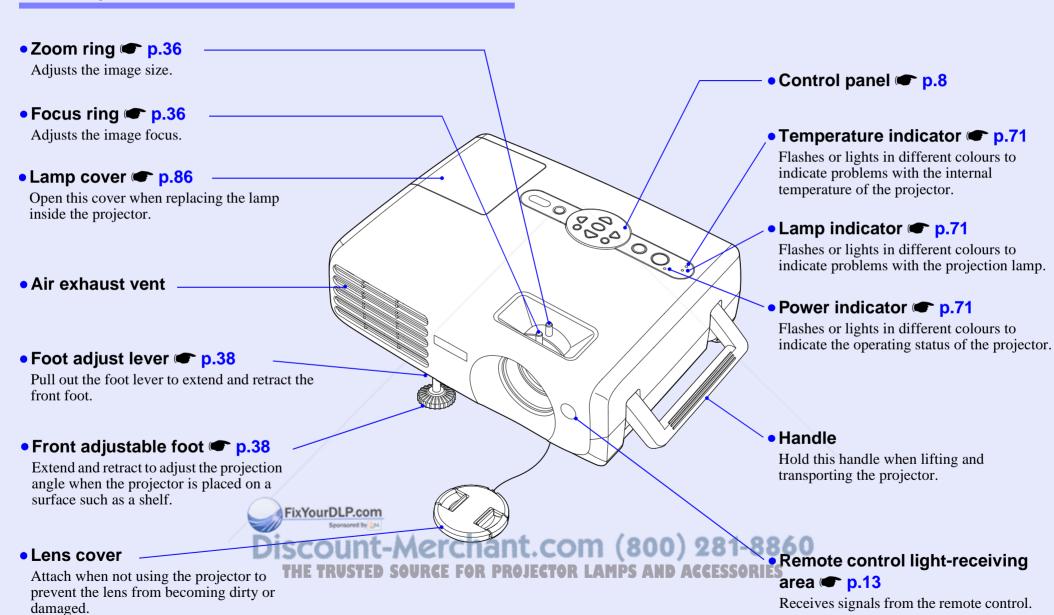



Control Panel

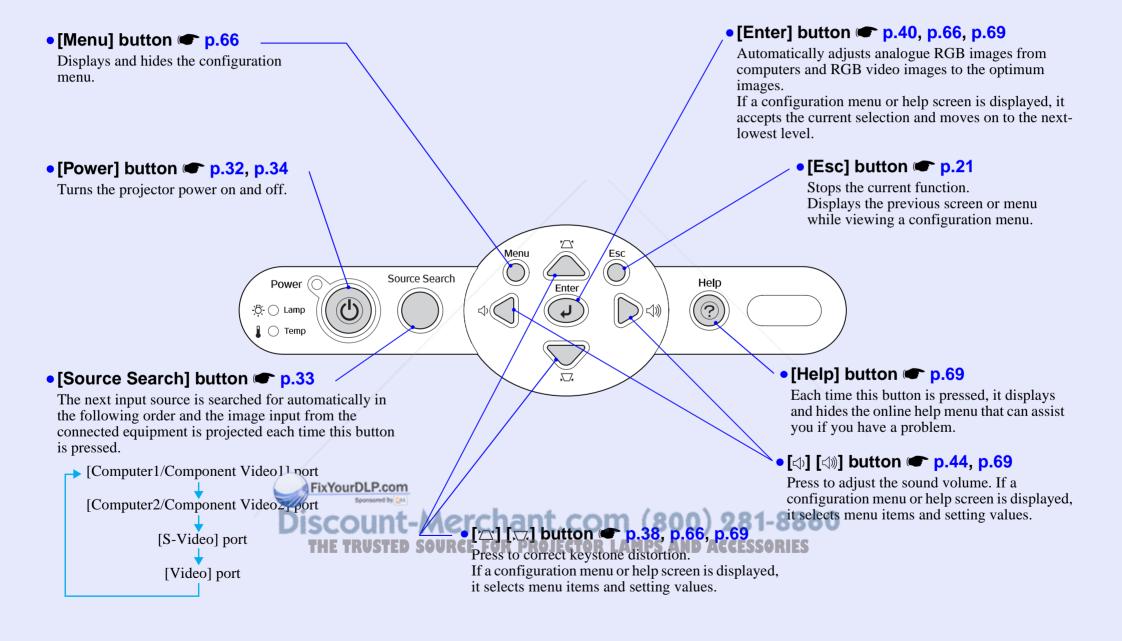

Rear

• [Monitor Out] port 🖝 p.22

Outputs the projected computer's analogue RGB signals or RGB video signals to an external monitor from the source that is connected to the [Computer1/Component Video1] port. This feature is not available for video equipment signals.

• [Audio Out] port

This outputs the audio signals from the currently-selected input source to external speakers.

• [Computer1/Component Video1] port

• [Computer2/Component Video2] port r p.19, p.24, p.25

Input analogue RGB video signals from a computer and RGB video signals and <u>component video</u> signals from other video sources.

• [Audio1] port **p.26**

This is used to input audio signals from the equipment that is connected to the [Computer1/Component Video1] port.

• [Audio2] port **p.26**

This is used to input audio signals from the equipment that is connected to the [Computer2/Component Video2] port.

(1000

Speaker

• Power inlet p.31
Connects to the power cable.

Rear adjustable foot

Rear adjustable foot

• [Video] port **p.23**

Inputs <u>composite video</u> signals t projector from other video sources.

• [Audio] port **p.26**

This is used to input audio signals from the equipment that is connected to the [Video] port. •[S-Video] port 🖝 p.24

Inputs S-Video signals to the projector from other video sources.

• [Audio] port p.26

This is used to input audio signals from the equipment that is connected to the [S-Video] port. • [USB] port **p.20**, p.97

Connects the projector to a computer via the USB cable when using the wireless mouse function.

Computer images cannot be projected by the projector by using the USB cable to connect the computer.

 Remote control light-receiving area p.13

Receives signals from the remote control.

Rear adjustable foot

• Security lock (♠) **©** p.95


Air intake vent p.84

Clean the air intake vent periodically.

• [Control (RS-232C)] port **p.97**

Connects the projector to a computer using an RS-232C cable. This port is for control use and should not normally be used.

Base

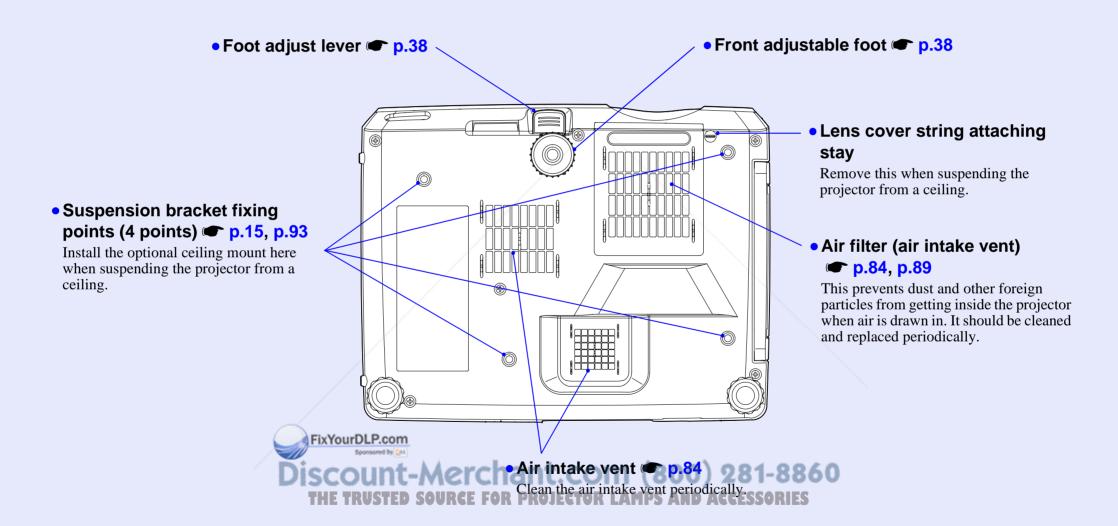

Remote Control

If you position the $\{^{n}\}$ over the button icon or button name, a description of that button will appear.

- [Page down] [Page up] buttons
 p.20
- [E-Zoom] button (⊕) (⊝) **©** p.48
- [Enter] button **p.21**, p.66, p.69
- [Esc] button 🖝 p.21
- [Pointer] button
 p.49
- [A/V Mute] button
 p.46
- [Computer1] button **p.33**
- [Computer2] button p.33
- [S-Video] button
 p.33
- [Video] button p.33
- [Auto] button **p.40**



- Remote control light-emitting area p.13
- [Power] button **p.32**, **p.34**
- [♠] buttons **☞** p.21, p.66, p.69
- [Freeze] button 🖝 p.47
- [Num] button 🖝 p.27
- [Color Mode] button
 p.43
- [Menu] button **p.66**
- [Resize] button 🖝 p.47
- [Help] button p.69
- [Volume] buttons
 p.44
- [Search] button 🖝 p.33
- Numeric buttons
 p.27

Before Using the Remote Control

Inserting the Batteries

The batteries are not already inserted into the remote control at the time the projector is purchased. You will need to insert the batteries that are provided with the projector before the remote control can be used.




CAUTION

Be sure to read the Safety Instructions/World-Wide Warranty Terms before handling the batteries.

2

Insert the batteries.

Check the positions of the (+) and (-) marks inside the battery holder to ensure that the batteries are inserted the correct way.

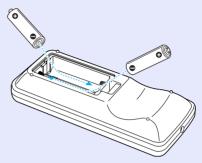






Remove the battery cover.


While pushing the catch of the battery compartment cover, lift the cover up.

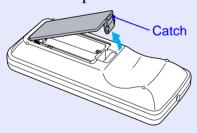



Replace the battery cover.

Press the battery compartment cover until it clicks into place.

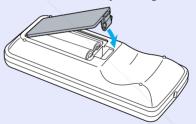





If delays in the responsiveness of the remote control occur or if it does not operate after it has been used for some time, it probably means that the batteries are becoming flat. Have two spare AAA-size alkali batteries ready to use when required.



THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Using the Remote Control and Remote Operating Range

Using the Remote Control

The remote control is used in the following way.

PROCEDURE

Point the remote control light-emitting area toward one of the remote control light-receiving areas on the projector and operate the remote control buttons.





- Do not allow sunlight or light from fluorescent lamps to shine directly onto the projector's remote control light-receiving areas, otherwise it may interfere with the reception of signals from the remote control.
- If delays in the responsiveness of the remote control occur or if it does not operate after it has been used for some time, it probably means that the batteries are getting flat. If this happens, replace the batteries with new ones. p.12
- If any of the buttons on the remote control are pressed down for more than 30 seconds, the remote control stops to send signals (remote control's sleep mode). The purpose of this is to prevent the batteries from being consumed due to something being placed on top of the remote control.

When the button is released, normal remote control operation will resume.




■ Remote Operating Range


Use the remote control within the ranges indicated below. If the distance or angle between the remote control and the remote control light-receiving area is outside the normal operating range, the remote control may not work.

Operating distance	Operating angle		
Approx. 6 m (20 ft.)	Approx. ±30° horizontally Approx. ±15° vertically		


Operating angle (horizontal)

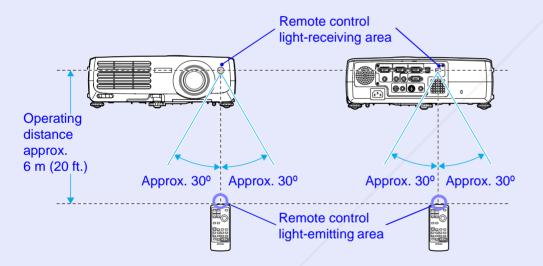

Operating angle (vertical)

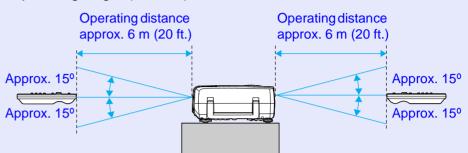

When suspended from the ceiling

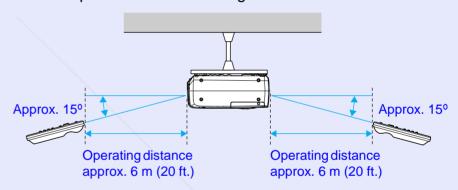

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Installation




Setting Up the Projector

The projector supports the following four different projection methods, allowing you to choose the best method for displaying your images.




Before setting up the projector, be sure to first read the separate Safety Instructions/World-Wide Warranty Terms.


• Front projection (Front projection)

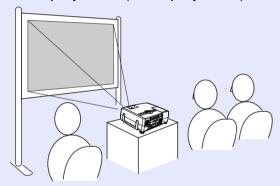


• Rear projection using a translucent screen (Rear projection)

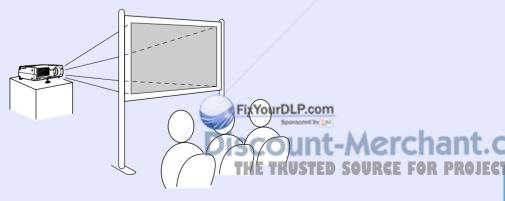

• Front/ceiling projection (Front/Ceiling projection)

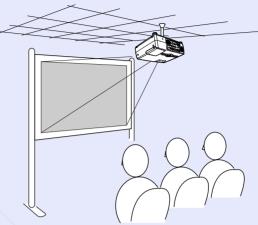

 Rear/ceiling projection using a translucent screen (Rear/Ceiling projection)

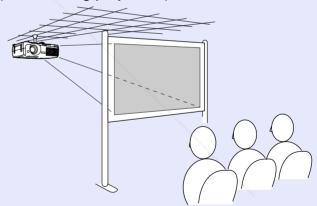

* A special method of installation is required for suspending the projector from the ceiling. Please contact your supplier if you would like to use this installation method. The optional ceiling mount is required when installing the projector on the ceiling. • p.93



When using ceiling projection or projection using a translucent screen, set the "Projection" command in the "Extended" menu to match the installation method. p.62



Screen Size and Projection Distance

The distance between the projector's lens and the screen determines the actual image size.

While referring to the following table, position the projector so that the images are projected onto the screen at the optimum size.

The values should be used as a guide for setting up the projector. The actual values will vary depending on projection conditions and the zoom setting.

EMP-821

300"

 (240.2×181.1)

Recommended distance	86–1473 cm (2.8–48.3 ft.)
----------------------	---------------------------

Units: cm (in.) Units: cm (ft.) Units: cm (in.)

	OTINO: OTT (III.)	OTINO: OTT (TE)	Ormo: orm (mi.)	_		(47.2×33.4)	
1	:3 Screen size	Projection distance @	Distance from centre of lens		80"	160×120 (63.0 × 47.2)	240 (7
_	.3 3016611 3126	Shortest _ Longest (wide) (tele)	to bottom edge of screen B		100"	200×150 (78.7 × 59.1)	301 (9
30"	61×46 (24.0 × 18.1)	86 (2.8)–142 (4.7)	4 (1.6)		200"	410 × 300 (161.4 × 118.1)	608 (19
40"	81×61 (31.9 × 24.0)	117 (3.8)–192 (6.3)	6 (2.2)		300"	$610 \times 460 \\ (240.2 \times 181.1)$	915 (30
50"	100×76 (39.4 × 30.0)	147 (4.8)–241 (5.9)	7 (2.7)				
60"	120×90 (47.2 × 35.4)	178 (5.8)–290 (9.5)	8 (3.3)				
80"	$160 \times 120 \\ (63.0 \times 47.2)$	FISY-389 (P2:8)n Sponsored by GM	11 (4.4)	_			
100"	200×150 (78.7 × 59.1)	300 (9.8)–487 (16.0)	14 (5.5)	t.co	m (800) 281-8	860
200"	410 × 300 (161.4 × 118.1)	604 (19.8)–980 (32.2)	28 (10.9)	JECTOR	R LAMF	'S AND ACCESSOR	ES
300"	610 × 460	909 (20.8) 1473 (48.3)	42 (16 A)				

909 (29.8)-1473 (48.3)

42 (16.4)


EMP-81/61

87–1094 cm (2.9–35.9 ft.)

Units: cm (in.) Units: cm (ft.) Units: cm (in.)

4:3 Screen size		Projection distance (a)	Distance from centre of lens	
		Shortest _ Longest (wide) (tele)	to bottom edge of screen B	
30"	61×46 (24.0 × 18.1)	87 (2.9)–104 (3.4)	4 (1.6)	
40"	81×61 (31.9 × 24.0)	117 (3.8)–141 (4.6)	6 (2.2)	
50"	100×76 (39.4 × 30.0)	148 (4.9)–177 (5.8)	7 (2.7)	
60"	$ \begin{array}{c} 120 \times 90 \\ (47.2 \times 35.4) \end{array} $	179 (5.9)–214 (7.0)	8 (3.3)	
80"	$160 \times 120 \\ (63.0 \times 47.2)$	240 (7.9)–287 (9.4)	11 (4.4)	
100"	200×150 (78.7×59.1)	301 (9.9)–361 (11.8)	14 (5.5)	
200"	$410 \times 300 \\ (161.4 \times 118.1)$	608 (19.9)–728 (23.9)	28 (10.9)	
300"	610 × 460 (240.2 × 181.1)	915 (30.0)–1094 (35.9)	42 (16.4)	



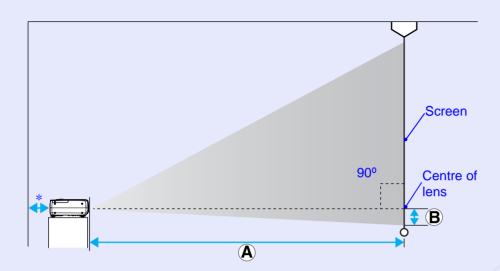

* When installing against a wall, leave a space of about 20 cm (7.9 in.) between the projector and the wall.



• The lens allows a zoom ratio of up to the following ratio.

EMP-821 :Approx. × 1.6 EMP-81/61 :Approx. × 1.2

The projected images can be enlarged up to the following ratio.

EMP-821 :Approx. × 1.6 EMP-81/61 :Approx. × 1.2

• The image size will be reduced when keystone correction is carried out.

FixYourDLP.com





Connecting to a Computer



CAUTION

When connecting the projector to a computer, be sure to check the following.

- Turn off the power for both the projector and the computer before connecting them. If the power for either device is on at the time of connection, damage may result.
- Check the shapes of the cable connectors and the device ports before making the connections. If you try to force a connector to fit a device port with a different shape or number of terminals, damage to the connector or port may result.
- •Do not bind the power cable and the connecting cable together. If the power cable and the connecting cable are bound together, image interference or errors in operation may result.

Eligible Computers

The projector cannot be connected to some types of computer, or projection of images may not be possible even if actual connection is possible. Make sure that the computer you intend to use satisfies the conditions given below.

- Condition 1: The computer must have an image signal output port. Check that the computer has a port such as an "RGB port", "monitor port" or "CRT port" which can output image signals. If the computer has a built-in monitor, or if using a laptop computer, it may not be possible to connect the computer to the projector, or alternatively you may need to purchase a separate external output port. Refer to the documentation for your computer under a heading such as "Connecting an external monitor" or similar for further details.
- Condition 2: The display resolution and frequency of the computer must be listed in the "List of Supported Monitor Displays".
- "Appendices: List of Supported Monitor Displays" p.99. Some computers allow you to change the output resolution, so if necessary, change the resolution to one that matches a setting in the "List of Supported Monitor Displays", while referring to the documentation provided with the computer.





- You may need to purchase a separate adapter depending on the shape of the computer's port. Refer to the documentation provided with the computer for further details.
- •If the computer and projector are too far away from each other for the accessory computer cable to reach, use the optional VGA-HD15 PC cable. The 'Appendices: Optional Accessories' p.93






Projecting Images from the Computer

The shape and specifications of the computer's monitor port will determine what type of cable should be used. Check the following to see which type of port your computer has.

If the Monitor Port is a Mini D-Sub 15-pin Port (Example)

Use the accessory computer cable to make the connection.

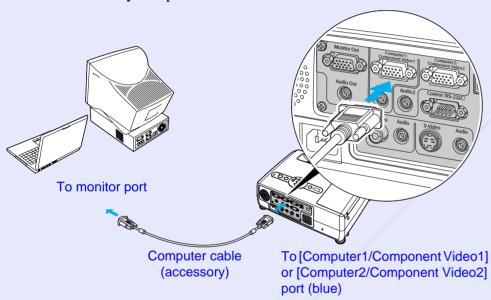



• The input source is determined automatically based on the input signals.

Some computer signals may be oduced with different colours from the original images. If this happens, set the input source to an (800) 281-8860 "Computer1" or "Computer2". p.55


• If more than one input source is connected to the projector at the same time, you can use button operations to select the signals to be projected. p.33



Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse Function)

You can use the remote control as a wireless mouse to control the mouse pointer on the computer screen. To do this, you must use the accessory <u>USB</u> cable to connect the USB port of the computer to the [USB] port at the rear of the projector.

Computer	Mouse used	Applicable cable
Windows 98/2000/Me/ XP Home Edition/ XP Professional	USB mouse	USB cable (accessory)
Macintosh (OS 8.6–9.2/10.0–10.3)	USB mouse	USB cable (accessory)

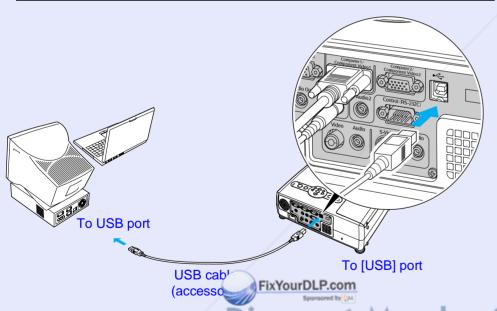



- The USB cable can only be connected to computers with a standard USB interface. If using a computer which is running Windows, the computer must have had a full version of Windows 98/2000/Me/XP Home Edition/XP Professional installed. If the computer is running a version of Windows 98/2000/Me/XP Home Edition/XP Professional that has been upgraded from an earlier version of Windows, correct operation cannot be guaranteed.
- It may not be possible to use the mouse function under some versions of both the Windows and Macintosh operating systems.
- Some computer settings may have to be changed in order for the mouse function to be used. Consult the documentation for the computer for further details.




^{*} When using the remote control as a wireless mouse, the [Page down] and [Page up] buttons on the remote control can be used to scroll back and rojector LAMPS AND ACCESSORIES forth through pages when projecting a PowerPoint presentation.



Once the connection has been made, the mouse pointer can be operated as follows.

Moving the mouse pointer

If you tilt the [\bigcirc] button on the remote control, the mouse pointer will move in the direction of tilt.

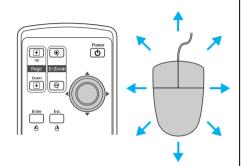


Right click

Press the [Esc] button.

Left click

Press the [Enter] button.

 
If you press the [Enter] button twice in rapid succession, it has the effect of a double-click.






Drag and drop

If you tilt the [�] button while keeping the [Enter] button pressed down, you can carry out drag operations. Press the [Enter] button at the desired location to drop the item being dragged.

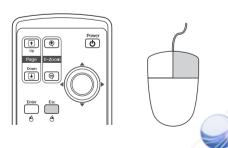

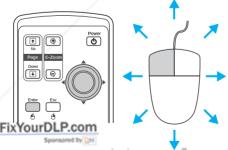



- If the mouse button settings have been reversed at the computer, the operation of the remote control buttons will also be reversed.
- The wireless mouse function cannot be used while the following functions are being used.
- · While a configuration menu is being displayed
- · While a help menu is being displayed
- · While the E-Zoom function is being used
- · While a user's logo is being captured
- · Pointer function
- · While adjusting sound volume

iscount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES






Connecting to an External Monitor

Analogue RGB images and RGB video images from a computer that are being input to the [Computer1/Component Video1] port can be viewed on an external computer monitor at the same time they are being projected by the projector, so that the images can be checked at times such as when giving presentations.

If the images being projected are from a source that is connected to the [Computer2/Component Video2] port, these images cannot be output to an external monitor.

Connect the external monitor using the cable that is provided with the monitor.

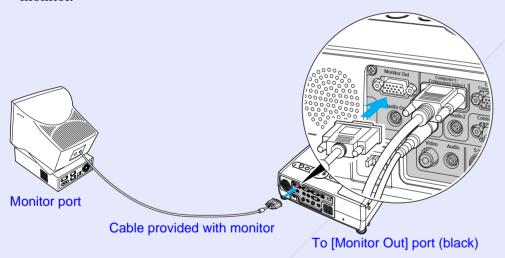



FixYourDLP.com

- Video images cannot be output to an external monitor.
- nant.com (800) 281-8860 • The setting gauge for keystone correction and the configuration menus and help menus are not output to the external monitor.

Connecting to a Video Source






CAUTION

When connecting the projector to video equipments, take the following precautions.

- Turn off the power for both the projector and the video equipments before connecting them. If the power for either device is on at the time of connection, damage may result.
- Check the shapes of the cable connectors and the device ports before making the connections. If you try to force a connector to fit a device port with a different shape or number of terminals, a malfunction or damage to the connector or port may result.
- •Do not bind the power cable and the connecting cable together. If the power cable and the connecting cable are bound together, image interference or errors in operation may result.

Projecting Composite Video[▶] Images

Use a commercially- available A/V cable to make the connection.

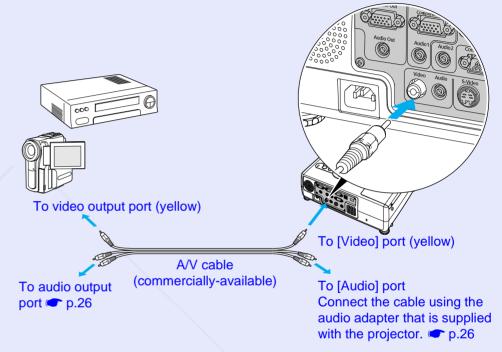




If more than one input source is connected to the projector at the same time, you can use button operations to select the signals to be projected. p.33





Projecting S-Video Images

Use a commercially-available S-Video cable to make the connections.

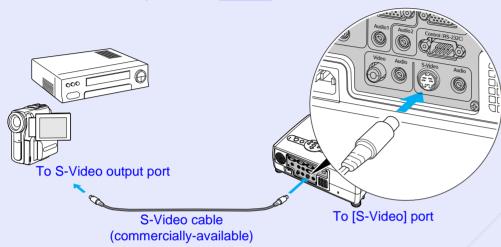




If more than one input source is connected to the projector at the same time, you can use button operations to select the signals to be projected. p.33

FixYourDLP.com Sponsored by M Discount-Merchant.

Projecting Component Video Images

Use the optional <u>component video</u> cable to make the connection. "Appendices: Optional Accessories" p.93

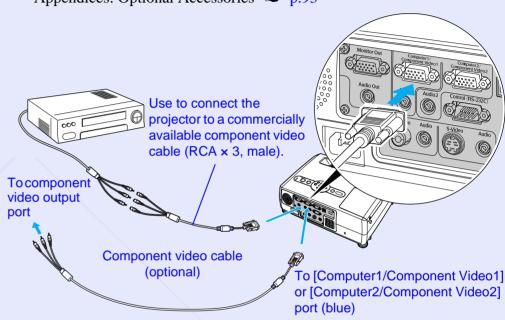



• The input source is determined automatically based on the input signals.


Some video signals may be reproduced with different colours from the original images. If this happens, set the input source to "Component Video1" or "Component Video2". • p.57

•If more than one input source is connected to the projector at the same time, you can use button operations to select the signals to be projected. Tp.33. GESSORIES



Projecting RGB Video Images

Use the accessory computer cable to make the connections.

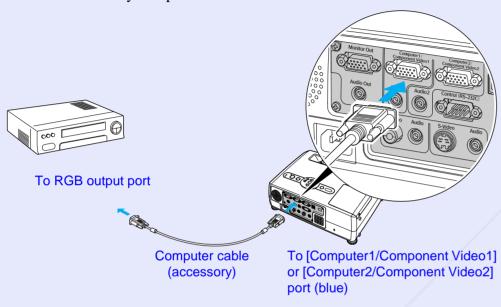



• The input source is determined automatically based on the input signals.

Some video signals may be reproduced with different colours from the original images. If this happens, set the input source to "Computer1" or "Computer2".

p.55

•If more than one input source in the same time, you can use button ations to select the signals to be projected. • p.33

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Playing Sound from Video Equipment



The projector has a built-in speaker with a maximum output of 5 W. You can output sound from connected video equipment (such as a computer or video deck) through the projector's built-in speaker if the video equipment has an audio output port.

The [Audio] port to use is the port that is in the same box as the port being used to input the video signals.

p.9


Select the audio cable that is used for this connection from the following, depending on the shape of the other equipment's port.

- If connecting to a stereo mini jack (such as the audio output port of a computer): Use a commercially-available stereo mini jack audio cable to make the connection.
- If connecting to an RCA pin jack ×2 (red/white) (such as the audio output port of video equipment): Use the audio adapter that is supplied with the projector and a commercially-available A/V cable to make the connection.



- You can adjust the volume after projection has started. Tp.44
- If using a commercially-available 2RCA (L/R)/stereo mini-jack audio cable, use one that is marked as "No resistance".

If the image signals are being input to the [Computer1/Component Video1] port

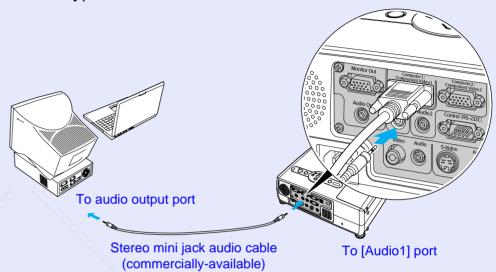

If the video signals are being input to the [Video] port



Preventing theft (Password Protect)




When the Password Protect function is activated, people who do not know the password cannot use the projector to project images when the power is turned on. Furthermore, the user's logo that is displayed on the background of the screen cannot be changed. This is effective against theft.

When Password Protect is enabled

When "Power ON Protect" is enabled (ON)

When the power is turned on, the password entry screen is displayed. If a window asking you to enter a password is displayed, press the [Num] button to switch the buttons shown in the box in the illustration below to numeric keypad mode.



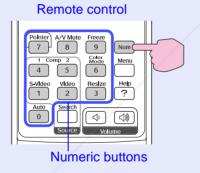

While holding down the [Num] button, press the numeric keypad buttons to enter the password. If the password is entered correctly, projection will then start.

TIP

- If an incorrect password is entered three times in succession, the message "The projector's operation will be locked." will be displayed for approximately five minutes, and then the projector will switch to standby mode. If this happens, disconnect the power plug from the electrical outlet and then reinsert it and turn the projector's power back on. A window requesting you to enter the password will be displayed, so enter the correct password.
- If you happen to forget the password, make a note of the "Request Code: xxxxx" number that appears in the Password screen and contact the nearest address provided in the "International Warranty Conditions" section of the Safety Instructions/World-Wide Warranty Terms booklet.
- If you repeat the above operations ten times resulting in an incorrect password being entered thirty times, the following message will be displayed and the projector will not accept password entries any more.
- "The projector's operation will be locked. Contact the nearest address provided in the "International Warranty Conditions" section of the Safety Instructions/World Wide Warranty Terms booklet."





When "User's Logo Protect" is enabled (ON)

If an attempt is made to carry out any of the following user logo operations, a message is displayed and the setting cannot be changed. To change the setting, set "User's Logo Protect" to "OFF" first.

p.29

- Capturing a user's logo
- When the "Extended" "Display" "Background Color" menu setting is changed from "Logo" to "Black" or "Blue", or changed from "Black" or "Blue" to "Logo".
- When the "Extended" "Display" "Startup Screen" menu setting ("ON" or "OFF") is changed.



Use the following procedure to set Password Protect.


PROCEDURE



Hold down the [Freeze] button for approximately 5 seconds.

The "Password Protect" menu will be displayed. This can also be displayed by pressing the [Menu] button while holding down the [\triangleright] button continuously for about 5 seconds.

Remote control

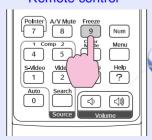





• If Password Protect has already been enabled, the "Password" screen will be displayed.

If the password has been entered correctly, the "Password Protect" menu will be displayed.

- "When Password Protect is enabled" p.27
- •If Password Protect is set to "ON", attach the accessory Password Protect sticker to your preferred position on the projector as a theft-prevention measure.

Turn "Power ON Protect" on.

- (1) Select "Power ON Protect", and then press the [Enter] button.
- (2) Select "ON", and then press the [Enter] button.
- (3) Press the [Esc] button.

In the following "Timer" setting, you can set the time that the projector can be used without needing to enter a password.

If setting the time, continue on to the next step. If not setting the time, continue on to step 5.



TIP

The portion of the length of time set that has already been used can be checked using the "Timer-elapsed" command.

Select "Timer" and then press the [Enter] button.







Enter the setting time as a number of up to 4 digits.

While holding down the [Num] button, use the numeric keypad buttons to enter the setting time within the range of 0 to 9999 hours and then press the [Enter] button. If you make a mistake entering the time, press the [Esc] button and re-enter the time. A message will appear after this.

When you have finished using the "Password Protect" menu, the countdown for the elapsed time will start.



TIP

again.

If the setting time is set to "0", projection will not be possible when the power cord is disconnected from the wall outlet and then reconnected, unless you first enter the password.

Turn "User's Logo Protect" on.

- (1) Selct "User's Logo Protect", and then press the [Enter] button.
- (2) Select "ON", and then press the [Enter] button.
- (3) Press the [Esc] button.
- 6 To set a password, select "Password" and then press the [Enter] button.
- 7 The message "Chang ne password?" will be displayed, so select "Yes" and then press the [Enter] button.

The default setting for the password is "0000", but you should change this to your own desired password. If you select "No", the screen shown at step 1 will be displayed

R Enter a 4-digit password.

While holding down the [Num] button, use the numeric keypad buttons to enter a 4-digit number. The number entered will be displayed as "* * * *".

Once four digits have been entered, the confirmation screen will be displayed.

Re-enter the password that you entered in step 8.

The message "The new password is stored." will be displayed. If you enter the password incorrectly, a message will be displayed prompting you to re-enter the password.

Once the setting is complete, press the [Menu] button.



TIP

- When the time period has elapsed and the password is entered, projection will start again, the "Timer-elapsed" setting will be reset to "0" and the countdown will start again.
- Make a note of the password so that you do not forget it and keep it in a safe place.
- If you lose the remote control, you will not be able to enter the password. Keep the remote control in a safe place at all times.





Basic Operations

This chapter describes basic operations such as turning the projector on and off and adjusting the projected images.

Turning the Projector On	31
• Connecting the Power Cable	31
• Turning the Power On and Projecting Images	32
Turning the Projector Off	34
Adjusting the Screen Image	36
• Adjusting the Image Size (Zoom Function)	36
• Focusing the Screen Image	36
• Adjusting the Image Angle and Automatic Keystone Correction Function	37
• Manually Correcting Keystone Distortion	39

Adjusting the Image Quality	40
• Adjusting Computer Images and RGB Video I	mages 40
Automatic Setup	40
Adjusting the Tracking	41
• Adjusting the Sync	42
• Selecting the Projection Quality (Colour Mode Selection)	43
Adjusting the Volume	44



Turning the Projector On



Turn on the power to start projecting images.



Be sure to read the separate Safety Instructions/World-Wide Warranty Terms before projecting images.

Connecting the Power Cable

 


When the "Extended" - "Operation" - "Direct Power ON" menu item is set to "ON", a confirmation buzzer sounds and the projector's power turns on as soon as the power plug is inserted into the electrical outlet, and projection then starts. \bigcirc p.62


The power for the equipment that is connected to the projector should be turned on beforehand.

PROCEDURE

- Check that the power is turned off for the projector and all components connected to the projector.
- Connect the computer or other video source to the projector. p.18, p. FixYourDLP.com




Check that the power cable connector is facing the same way as the power inlet on the projector, and then insert the power cable connector securely into the projector.

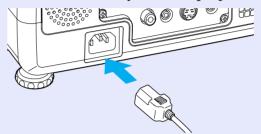

5 Connect the other end of the power cable to an earthed electrical outlet.

The Power indicator will light orange.

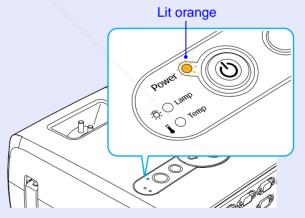

Remove the lens cover. THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES
Hold the lens cover by the knob in the middle of the cover and remove it.



Turning the Power On and Projecting Images




The Password Protect setting may cause the password entry screen to be displayed each time the power is turned on.

If this happens, enter the password.

p.27

PROCEDURE

1 Check that the Power indicator has stopped flashing and is lit orange.

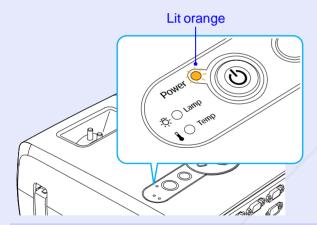


2 Turn on the power for all equipment connected to the projector. FixYourDLP.com

For a video source, press the [Play] button at the video source to start playback if necessary.

Press the [Power] button on either the projector's control panel or the remote control to turn on the power for the projector.

A beep will sound to indicate that the projector is starting up. The Power indicator starts to flash green as the projector warms up, and an image begins to appear.

Changes from flashing to lit green

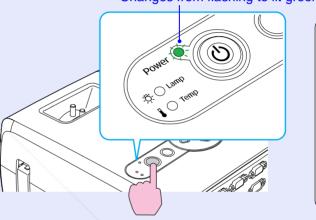



Remote control



- If the Power indicator is flashing green, operation of the [Power] buttons is disabled.
- •Depending on the settings, the message "No Signal." may appear.

 "Extended" "Display" "Message" p.61
- •If the "Setting" "Operation Lock" menu setting is set to "ON", none of the buttons on the projector's control panel will work except for the [Power] button.

 p.59

Use the remote control buttons at such times.







4

If more than one external device is connected to the projector, use the remote control or projector control panel buttons to select the image source to be projected while referring to the following table.

The input source can also be searched for automatically by pressing the [Source Search] button. Images from the connected equipment will be projected in turn.

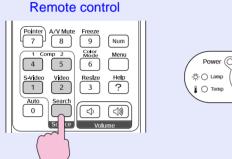

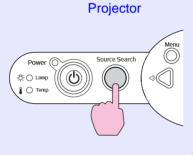

Port	Remote control button selected	Display at top-right of screen
Computer1/ Component Video1	Computer1	Computer1 (Auto)* Computer1* Component Video1*
Computer2/ Component Video2	Computer2	Computer2 (Auto)* Computer2* Component Video2*
S-Video	S-Video	S-Video
Video	Video	Video

* The signal name that has been price "Computer 1 Input" and "Computer 2 Input" in the "Signal menu will be displayed.



ant.com (800) 281-8860

- If only one signal source has been connected, the signals from that source will be projected without needing to press any of the buttons on the remote control or the projector's control panel.
- If the "No Signal." message does not disappear, check the connections again.
- If a laptop computer or a computer with an LCD screen has been connected to the projector, the images may not be projected straight away. After starting projection, check that the computer has been set up to output signals externally.

The following table shows examples of how to toggle output settings. For details, refer to the section of the documentation provided with your computer under a heading such as "External output", "Connecting an external monitor" or similar.

NEC	Panasonic	Toshiba	IBM	Sony	Fujitsu	Macintosh
[Fn]+[F3]	[Fn]+[F3]	[Fn]+[F5]	[Fn]+[F7]	[Fn]+[F7]	[Fn]+[F10]	Set mirror setting or display detection.

• If the same still picture is projected for a long period of time, the projected image may become burned into the screen. You should avoid leaving the same image displayed for long periods.



Turning the Projector Off



Follow the procedure below to turn off the power of the projector.


PROCEDURE

1 Turn off the power for the signal sources that are connected to the projector.


Check that the power for all connected components has been turned off.

Press the [Power] button.


Remote control

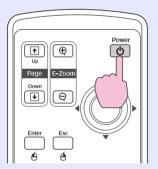

Projector

 

 The following confirmation message will appear.



If you do not want to turn power off, press any button except the [Power], [Page down], [Page up] and [Num] button.

If you do not press any button, the message will disappear automatically after seven seconds. (The power will not turn off JECTOR LAMPS AND ACCESSORIES at this time.)

CAUTION

If the message "The projector is over heating. Make sure nothing is blocking the air vent, and clean or replace the air filter." appears on the screen, press the [Enter] button on either the projector's control panel or on the remote control to turn the power the air filters.

p.84


Press the [Power] button once more.

The lamp will switch off. The Power indicator will flash orange and cool-down will start.

The cool-down period lasts for about 20 seconds.

When the cool-down is complete, a "pip-pip" confirmation buzzer will sound, and the Power indicator will change to light orange.

Stops flashing and lights orange

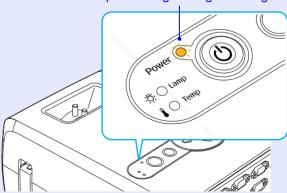










 - If the Power indicator is flashing orange, operation of the [Power] buttons is disabled. Wait until the indicator lights continuously.
- •If "Standby Mode" in the configuration menu is set to "Network ON", fans will continue operating. This is normal and does not indicate a problem.





CAUTION

Do not disconnect the power cable from the outlet while the Power indicator is still flashing orange, otherwise it may result in errors in projector operation and reduce the lamp unit operating life.

Attach the lens cover.

Attach the lens cover to the lens when not using the projector, in order to prevent the lens from getting dusty or dirty.





Adjusting the Screen Image



These functions correct and adjust the projected images so that optimum images can be obtained.

Adjusting the Image Size (Zoom Function)

The size of the projected image is basically determined by the distance from the projector to the screen.
p.16

The following procedures explain how to adjust the screen image once the projector itself has been set up.



The E-Zoom function lets you enlarge parts of the image. p.48

PROCEDURE

Adjust by turning the zoom ring.

The maximum zoom ratio of the EMP-821 is \times 1.6, and that of the EMP-81/61 is \times 1.2.




Focusing the Screen Image

PROCEDURE

Turn the focus ring to adjust the image focus.

If keystone correction or Sharpness settings have been made, it may not be possible to adjust the focus correctly.

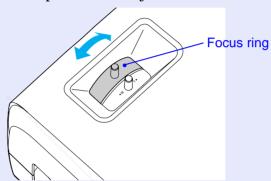



- If the surface of the lens is dirty or misted over as a result of condensation, it may not be possible to adjust the focus correctly. If this happens, clean or de-mist the lens. p.77, p.84
- If the distance from the lens to the screen is not within the recommended distance, it is impossible to bring the lens into focus. If you have trouble obtaining the correct focus, check the projection distance.

 p.16


If you would like to enlarge the image further, move the projector further away from the screen.
p.16



Adjusting the Image Angle and Automatic Keystone Correction Function

The projector should be set up so that it is as perpendicular to the screen as possible.

Seen from the side

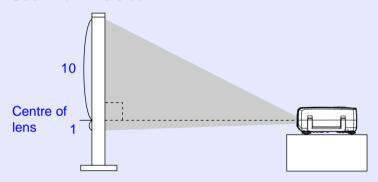


If it is not possible to set up the projector so that it is perpendicular to the screen, it can be set up at a slight vertical angle instead. You can adjust the upward projection angle of the projector to a maximum of 12° and the downward projection angle to a maximum of 4° by extending and retracting the front adjustable foot and rear adjustable feet.



CAUTION

Do not tilt the projector at more than the maximum angle. Doing so may cause the projector to fall down or fall off a desk and may result in injury.

Seen from above

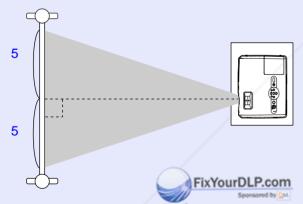

iscount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES




PROCEDURE

While pulling the foot adjust lever at the front of the projector, lift up the front of the projector to extend the front adjustable foot.

Extend the front adjustable foot until the desired angle is obtained, and then release the foot adjust lever.

To retract the front adjustable foot, gently push down on the projector while pulling the foot adjust lever.

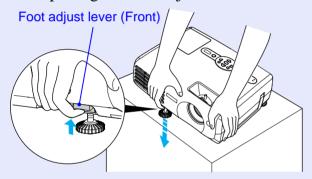



If the projector is tilted vertically or horizontally, turn the bases of the rear adjustable feet to make fine adjustments to the height of the projector. When the projector is tilted horizontally, the correction may not be carried out correctly. \bigcirc p.38



When the projector is tilted vertically, it will cause keystone distortion to appear in the image. However, the projector is equipped with an automatic keystone correction function that can automatically correct this keystone distortion as long as the vertical angle of tilt is within a range of approximately 15° *. Automatic keystone correction is carried out approximately one second after the projector is tilted vertically while the power is on.



* This value applies when the zoom ring is turned to the maximum "T" setting. If the zoom ring is turned to the "W" setting, the available angle of tilt for automatic adjustment will be less.



- Automatic keystone correction is not carried out when the "Projection" command in the "Extended" menu is set to "Front".
- If you would like to make further fine adjustments after automatic keystone correction has been carried out, press the [□] and [□] buttons on the projector's control panel.

 p.39
- When keystone correction is carried out, the projected image will become smaller.
- •If the images become uneven in appearance after keystone correction is carried out, decrease the sharpness setting.

 p.51, p.53
- •If automatic keystone correction is not required, set "Auto Keystone" in the "Setting" menu to "OFF". p.59






Manually Correcting Keystone Distortion

The projector is provided with an automatic keystone correction function which detects the vertical angle of the projector and carries out keystone correction automatically. If you would like to make further fine adjustments to the results of automatic keystone correction, press the $[\[\] \]$ and $[\[\] \]$ buttons.

PROCEDURE

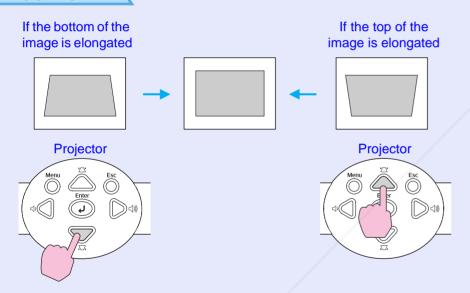



- When keystone correction is carried out, the projected image will become smaller.
- If the text part of the image is blurred after keystone correction is carried out, decrease the sharpness setting. p.51, p.53
- •Keystone correction can also be carried out using the configuration menu. p.59
- If the value displayed in the gauge on the screen stops changing when keystone correction is being carried out, it indicates that the limit for keystone correction has been reached. Check that the projector has not been set up at an angle which exceeds the proper limit.

Adjusting the Image Quality

The quality of the screen images can be adjusted as follows.

Adjusting Computer Images and RGB Video Images

Automatic Setup

Automatic setup detects analogue RGB signals coming from a connected computer, and automatically adjusts these signals so that the optimum images can be obtained.

Automatic setup involves adjustment of the following three items: Tracking, Position and Sync (synchronisation).






•If "Auto Setup" in the "Signal" menu is set to "OFF" (the default setting for this item is "ON"), automatic setup is not carried out. In this case, press the [Auto] button on the remote control or the [Enter] button on the projector's control panel to make the adjustment while computer or RGB video images are being projected.

Remote control



Projector

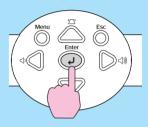

When you press the [Auto] button, the screen will turn to solid black colour for a moment and then return to a previous image. The auto adjustment is still in progress even after returning to the previous image. Wait about 3 seconds before pressing any other buttons.

 
- If you press the [Auto] button on the remote control while any of the following functions are in use, the function in use will be cancelled and then the adjustment will be carried out.
 - · E-Zoom function · Configuration menu display
 - · Freeze function · Help menu display

If you press the [Enter] button on the projector's control panel while any of the following functions are in use, the function in use will be cancelled and then the adjustment will be carried out.

- · E-Zoom function
- Freeze function
- Freeze junction
 Sometimes the signals may not be adjusted correctly depending on the type of computer or RGB video signals being output. In such cases, use the configuration menu commands to adjust the tracking and sync settings manually.
 p.41, p.42

Adjusting the Tracking

If vertical stripes appear in the projected computer or RGB video images, and this cannot be fixed using automatic setup, you will need to adjust the Tracking manually using the following procedure.



PROCEDURE

Press the [Menu] button on the remote control or the projector's control panel, and then select "Tracking" from the "Signal" configuration menu.

 
For details on this operation, refer to "Using the Configuration Menus".

p.66



Tilt the [♠] button on the remote control or press the [♠] and [▷] buttons on the projector's control panel to adjust the tracking value until the vertical stripes disappear from the images.

The tracking value increases or decreases each time a button is pressed.



After making the adjustment, press the [Menu] button to exit the configuration menu.

 


The image will flash when continuous tracking adjustment is carried out, but this is normal.

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Adjusting the Sync

If flickering, fuzziness or interference appear in computer or RGB video images, and this cannot be fixed using automatic setup, you will need to adjust the Sync (synchronisation) manually using the following procedure.



PROCEDURE

Press the [Menu] button on the remote control or the projector's control panel, and then select "Sync." from the "Signal" configuration menu.

For details on this operation, refer to "Using the Configuration Menus".

p.66



Tilt the [♠] button on the remote control or press the [♠] and [♠] buttons on the projector's control panel to adjust the synchronisation value until the flickering, fuzziness or interference disappears from the images.

The sync value increases or decreases each time a button is pressed.



After making the adjustment, press the [Menu] button to exit the configuration menu.



- If you adjust the sync without adjusting the tracking first, it will not be possible to get the best adjustment results. Incorrect tracking adjustment may not be noticeable with some types of picture. However, pictures with lots of lines and shading will tend to show incorrect tracking adjustments more clearly, so be sure to check the tracking adjustment first.
- Flickering and fuzziness may also occur when the brightness, contrast, sharpness and keystone correction settings are adjusted.

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Selecting the Projection Quality (Colour Mode Selection)

The following six preset colour modes are available for use depending on the characteristics of the images that are being projected. You can easily obtain the optimum image quality simply by selecting the colour mode that corresponds to the projected images. The brightness of the images will vary depending on which colour mode is selected.

Mode	Application
Dynamic	Brightness is emphasised, so that images are fresher and have greater modulation than in Presentation mode.
Presentation	Brightness is emphasised to produce images that are ideal for presentations.
Theatre	Movie images are optimised using natural tints.
Living Room	Brightness is emphasised to produce images that are ideal for projecting TV images, etc. in bright rooms.
<u>sRGB</u> [▶]	Images conform to the sRGB colour standard. If the connected source has a sRGB mode, set both the projector and the connected signal source to sRGB.
Blackboard	Images with natural tints can be obtained when projecting onto a blackboard (green).

The default setting for the colour mode is as follows. When computer or RGB video images are being input: "Presentation" When other images are being input: "Dynamic"

PROCEDURE


The colour mode changes as follows each time the [Color Mode] button is pressed.



Remote control



The current setting appears in the top-right corner of the screen each time the colour mode is changed.

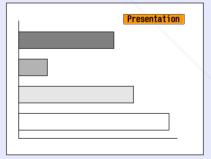



The colour mode can also be set using the "Color Mode" command in the "Image" menu. p.51, p.53

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Adjusting the Volume



The volume of the projector's built-in speaker can be adjusted as follows.

PROCEDURE


Press the [Volume] buttons on the remote control or the [4] and [4] buttons on the projector's control panel to adjust the volume.

When the button is pressed to the [<1)) side, the volume increases, and when it is pressed to the $[\ \ \]$ side, the volume decreases. The volume gauge appears on the screen when the volume is being adjusted.

Remote control



Projector

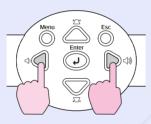



[◆ ◆测]:Adjust



- If the value displayed in the gauge on the screen stops changing at indicates that the limit for when the volume is being adjusvolume adjustment has been reached.
- The volume can also be adjusted using the configuration menu.

p.59

• Volume adjustments are stored separately for each input source. and t. Com (800) 281-8860



Advanced Operations

This chapter describes functions for enhancing the projection of images, and how to use the configuration menus.

Functions for Enhancing Projection	46
• A/V Mute	46
• Freeze	
• Wide-screen Projection of Images from Video Eq (Changing the Aspect Ratio)	
• E-Zoom	
• Pointer function	

Using the Configuration Menu Functions	50
• List of Functions	51
• "Image" Menu	51
• "Signal" Menu	
• "Setting" Menu	59
• "Extended" Menu	61
•"Info" Menu	64
• "Reset" Menu	65
Using the Configuration Menus	66



Functions for Enhancing Projection



This section describes the various useful functions that can be used to enhance presentations.

A/V Mute

This function momentarily pauses the image and sound.

For example, it can be used when you do not want to show details of operations such as selecting different files while computer images are being projected.

However, if you use this function when projecting moving images, the images and sound will still continue to be played back by the source, and you cannot return to the point where the mute function was activated.

PROCEDURE


Press the [A/V Mute] button.

The image and sound will then be paused.

Projection starts again when the [A/V Mute] button on the remote control is pressed.

You can also continue normal projection by pressing the [Esc] button.


Remote control

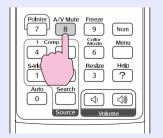



You can use the "Extended" - "Display" - "Background Color" menu setting to select the screen status when video and audio are paused from the following three options. p.61



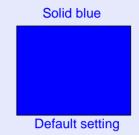





- The default user's logo is the EPSON logo. To change the user's logo, you need to record your own logo.

 p.90
- When the A/V Mute function is being used, the "Brightness Control" setting in the "Setting" menu to will automatically change to "Low". When the A/V mute function is cancelled, the "Brightness Control" setting will return to the original setting.



Freeze

This function pauses only the projected images. The sound keeps playing without pausing.

The image source will still be playing back the images even while projection is paused, and so it will not be possible to resume projection from the point where it was paused.


PROCEDURE

Press the [Freeze] button.

The images will then be paused.

To cancel the pause, press the [Freeze] button once more. You can also cancel it by pressing the [Esc] button.

Remote control

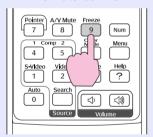




- Pressing the [Freeze] button also clears configuration menu displays and help messages.
- The freeze function still works whethe E-Zoom function is being used.

Wide-screen Projection of Images from Video Equipment (Changing the Aspect Ratio)

This function changes the <u>aspect ratio</u> of images from 4:3 to 16:9 when <u>component video</u> images, <u>S-Video</u> or <u>composite video</u> images are being projected.

Images which have been recorded in digital video or onto DVDs can be viewed in 16:9 wide-screen format.

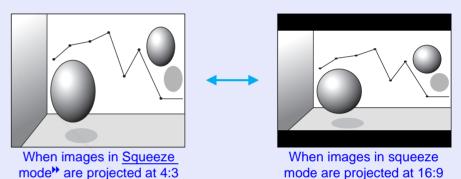

PROCEDURE

The aspect ratio changes each time the [Resize] button is pressed.

Remote control



TIP

You can also make this setting using the "Resize" command in the "Signal" menu.

E-Zoom

This function lets you enlarge and reduce a part of projected images such as graphs and tables.


PROCEDURE



Press the [E-Zoom ⊕] button.

A cursor (cross) indicating the centre point for the area to be enlarged will appear on the screen.

Remote control

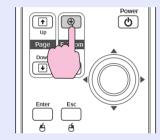


Move the cross to the area of the image that is to be enlarged or reduced.

Tilt the [💿] button on the remote control to move the cross.

When the [⊕] button is pressed, the image is enlarged with the cross at its centre. When the [⊖] button is pressed, the enlarged image is then reduced.

The enlargement ratio will appear on the screen. You can scroll the screen by tilting the $[\diamondsuit]$ button.

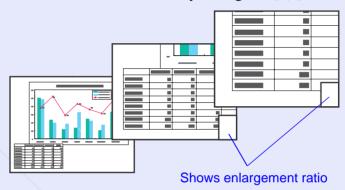

To cancel the E-Zoom, press the [Esc] button.



The selected area can be enlarged to between 1–4 times, in 25 steps of $\times 0.125$.





Pointer function

This function lets you use the remote control to move a pointer icon around on the images being projected.

This function can be used to emphasise parts of an image that you want to draw attention to.

Use the remote control to carry out pointer function operations.



TIP


You can use the "Pointer Shape" command in the "Setting" menu to change the shape of the pointer to one of three different shapes.



2

Tilt the [⋄] button to move the pointer icon.

To cancel the Effect function, press the [Pointer] button. The pointer icon will then disappear from the screen.

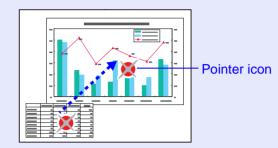

PROCEDURE




Press the [Pointer] button.

The pointer icon will appear in the middle of the projection area.

 Remote control






Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Using the Configuration Menu Functions



The configuration menus can be used to carry out a variety of settings and adjustments.

The menus have a hierarchical structure, with a main menu that is divided into sub-menus, which are further divided into other sub-menus. Refer to "Using the Configuration Menus" p.66 for details on using the menus.

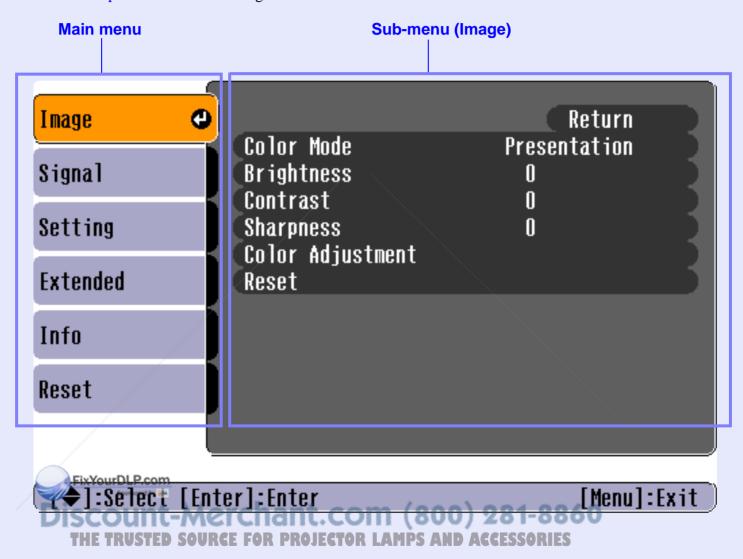



List of Functions

■ "Image" Menu

- None of the settings can be adjusted if no signals are being input.
- The commands displayed in the "Image" menu change depending on the input sinal that is being projected.

 Menu commands that do not apply to the current input signal cannot be adjusted.

Computer/RGB video



Sub-menu	Function	Default
Color Mode	Corrects the vividness of the image colour. The settings can be saved separately for each type of source (computer or video source). You can select from six different quality settings depending on the surroundings. •Dynamic : Brightness is emphasised, so that images are fresher and have greater modulation than in Presentation mode. •Presentation : Brightness is emphasised to produce images that are ideal for presentations. •Theatre : Images are optimised using natural tints. It emphasises colour gradations (differences between light and dark) when projecting images that are very dark or very light and bright, to make such images easier to see. •Living Room: Brightness is emphasised to produce images that are ideal for projecting TV images, etc. in bright rooms. •sRGB** : Images conform to the sRGB standard. If set to "sRGB", the Abs. Color Temp. for the "Color Adjustment" command in the "Image" menu will be set to 6500K. •Blackboard : Images with natural tints can be obtained when projecting onto a blackboard (green).	Presentation
Brightness	Adjusts the image brightness.	Median value (0)
Contrast	Adjusts the difference between light and shade in the images.	Median value (0)
Sharpness	Adjusts the image sharpness.	Median value (0)

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES






Sub-menu	Function	Default
Color Adjustment	Adjusts the absolute colour temperature and the intensity of	Abs. Color Temp.: 7500K Red: Median value (0) Green: Median value (0) Blue: Median value (0)
Reset	Resets all adjustment values for the "Image" menu functions to their default settings. •Press the [Enter] button on the remote control or on the projector's control panel. •To return all settings such as the "Image" and "Signal" menu settings to their default values, select "Reset All" from the "Reset" menu. • p.65	-







Component video → Composite video → S-Video →

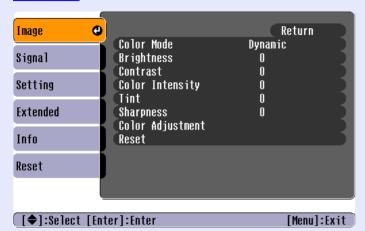

	Sub-menu	Function	Default
	Color	Corrects the vividness of the image colour. The settings can	Dynamic
	Mode	be saved separately for each type of source (computer or video source). You can select from six different quality	
		settings depending on the surroundings.	
		•Dynamic : Brightness is emphasised, so that images are	
		fresher and have greater modulation than in Presentation mode.	
		•Presentation: Brightness is emphasised to produce images	
		that are ideal for presentations.	
		•Theatre : Images are optimised using natural tints. It emphasises colour gradations (differences	
		between light and dark) when projecting	
		images that are very dark or very light and	
		bright, to make such images easier to see.	
		•Living Room: Brightness is emphasised to produce images that are ideal for projecting TV images, etc.	
		in bright rooms.	
		• <u>sRGB</u> • : Images conform to the sRGB standard.	
		If set to "sRGB", the <u>Abs. Color Temp.</u> for the "Color Adjustment" command in the	
		"Image" menu will be set to 6500K.	
		•Blackboard : Images with natural tints can be obtained	
	.	when projecting onto a blackboard (green).	
	Brightness	Adjusts the image brightness.	Median value (0)
	<u>Contrast</u>	Adjusts the difference between light and shade in the images.	Median value (0)
	Color	Adjusts the colour intensity for the images.	Median value
	Intensity		(0)
•	chant.	(Adjustment is only possible when component video or NTSC signals are being input.)	Median value (0)
	FOR PROJE	Adjust the image tint. Accessories	. ,
	Sharpness	Adjusts the image sharpness.	Median value (0)







Sub-menu	Function	Default
Color Adjustment	Abs. Color Temp.*: Lets you adjust bright colours within a range from reddish tinges to bluish tinges. If the colour temperature is lower, colours appear reddish and color tones appear softer. If the colour temperature is higher, colours appear bluish and colour tones appear sharper.	Abs. Color Temp.: 6500K
	Red: Adjust the intensity of the red components. Green: Adjusts the intensity of the green component. Blue: Adjusts the intensity of the blue component. (This item cannot be selected if "sRGB" has been selected as the "Color Mode" setting in the "Image" menu.)	Red: Median value (0) Green: Median value (0) Blue: Median value (0)
Reset	Resets all adjustment values for the "Image" menu functions to their default settings. •Press the [Enter] button on the remote control or on the projector's control panel. •To return all settings such as the "Image" and "Signal" menu settings to their default values, select "Reset All" from the "Reset" menu. • p.65	-








Signal" Menu

- The "<u>Tracking</u>", "<u>Sync.</u>", "Position" and "Resize" settings can not be adjusted if no signals are being input.
- The items displayed in the "Signal" menu change depending on the input signal that is being projected. Menu commands that do not apply to the current input signal cannot be adjusted.

Computer/RGB video

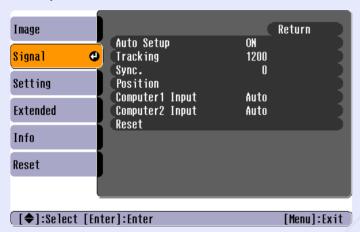

FixYourDLP.com

Sub-menu	Function	Default
Auto Setup	Selects whether the automatic adjustment function for automatically optimising images when the input source is changed is turned "ON" or "OFF".	ON
<u>Tracking</u>	Adjusts computer images when vertical stripes appear in the images.	Depends on connection
Sync.**	Adjusts computer images when flickering, fuzziness or interference appear in the images. •Flickering and fuzziness may also appear when the brightness, contrast , sharpness or keystone settings are adjusted. •You can obtain the best results if you adjust the tracking first and then adjust the sync.	Depends on connection
Position	Moves the image display position vertically and horizontally. •Press the [Enter] button on the remote control or on the projector's control panel and then make the adjustment using the display position adjustment screen that appears.	Depends on connection
Computer1 Input	Selects the input signal in accordance with the equipment that is connected to the [Computer1/Component Video1] port. If set to "Auto" the input signal is set automatically in accordance with the connected equipment. If you select "Auto", and the colours appear unnatural, select "Computer1".	Auto
Computer2 Input	Selects the input signal in accordance with the equipment that is connected to the [Computer2/Component Video2] port. If set to "Auto" the input signal is set automatically in accordance with the connected equipment. If you select "Auto", and the colours appear unnatural, select "Computer2".	Auto








Sub-menu	Function	Default
Reset	Reset all adjustment values for the "Signal" menu functions to their default settings except for "Computer1 Input" and "Computer2 Input". • Press the [Enter] button on the remote control or on the projector's control panel. • To return all settings such as the "Image" and "Signal" menu settings to their default values, select "Reset All" from the "Reset" menu. • p.65	-







Component video[▶]

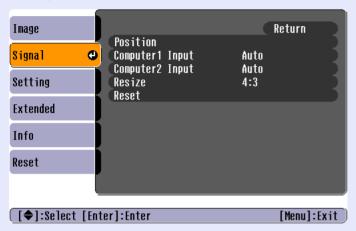

Composite video[▶]/ S-Video[▶]



Sub-menu	Function	Default
Position	Moves the image display position vertically and horizontally. •Press the [Enter] button on the remote control or on the projector's control panel and then make the adjustment using the display position adjustment screen that appears.	Depends on connection
Computer1 Input	(Adjustment is only possible when component video signals are being input.) Selects the input signal in accordance with the equipment that is connected to the [Computer1/Component Video1] port. If set to "Auto" the input signal is set automatically in accordance with the connected equipment. If you select "Auto", and the colours appear unnatural, select "Component Video1".	Auto
Computer2 Input	(Adjustment is only possible when component video signals are being input.) Selects the input signal in accordance with the equipment that is connected to the [Computer2/Component Video2] port. If set to "Auto" the input signal is set automatically in accordance with the connected equipment. If you select "Auto", and the colours appear unnatural, select "Component Video2".	Auto
Video Signal	 (Adjustment is only possible when composite video/S-Video signals are being input.) Sets the video signal format. Press the [Enter] button on the remote control or on the projector's control panel and then make the selection from the video signal format selection menu that appears. When set to "Auto", the video signal format is set automatically. 	Auto
Resize	Sets the aspect ratio for projected images.	Depends on connection

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





Sub-menu	Function	Default
Reset	Returns "Position", "Video Signal" and "Resize" in the "Signal" menu to their default setting. • Press the [Enter] button on the remote control or on the projector's control panel. • To return all settings such as the "Image" and "Signal" menu settings to their default values, select "Reset All" from the "Reset" menu. • p.65	-





Using the Configuration Menu Functions



Setting" Menu



FixYourDLP.com

Sub-menu	Function	Default
Keystone	Corrects vertical keystone distortion in images. •When keystone correction is carried out, the projected image will become smaller. •If the images become uneven in appearance after keystone correction is carried out, decrease the sharpness setting.	Median value (0)
Auto Keystone	Sets the function for automatically detecting the projector angle and correcting keystone "ON" or "OFF" when the projector is tilted vertically. This function is only enabled when the "Projection" command in the "Extended" menu is set to "Front". If it is set to something other than "Front", this menu cannot be selected.	ON
Operation Lock	When set to "ON", the operation of all buttons on the projector's control panel except for the [Power] button will be disabled. •When "Operation Lock" is set to "ON", the operation lock function can be cancelled by holding down the [Enter] button on the projector's control panel for approximately 7 seconds. •If you change the setting, the new setting will take effect after exiting the configuration menu.	OFF
Pointer Shape	The shape of the pointer icon that appears when you press the [Pointer] button on the remote control can be selected from the following three shapes. Pointer 1: Pointer 2: Pointer 3:	Pointer 1
Brightness Control	This lets you set the lamp brightness to one of two settings. Select "Low" if the images being projected are too bright such as when projecting images in a dark room or onto a small screen. When "Low" is selected, the brightness of the images is reduced, the amount of electricity consumed and noise produced during projection are reduced and the lamp's operating life is extended.	High
Volume	Adjusts the volume.	Median value (10)





Sub-menu	Function	Default
Reset	Resets all adjustment values for the "Setting" menu functions to their default settings. •Press the [Enter] button on the remote control or on the projector's control panel. •To return all settings such as the "Image" and "Signal" menu settings to their default values, select"Reset All" from the "Reset" menu. p.65	-








"Extended" Menu

• The "User's Logo" setting can not be adjusted if no signals are being input.

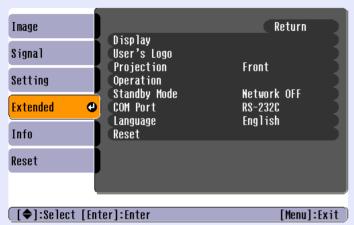

Sub-menu	Function	Default
Display	This lets you make settings related to the projector's display. Message: Sets whether display of the following messages is turned	Message: ON
	 "ON" or "OFF". Signal name when the video signal is switched Colour mode name when the colour mode is switched When no image signals are being input When an incompatible signal is input When the air filter needs replacing Background Color: Sets the screen status when the [A/V Mute] button on the remote control is being pressed or when no image signals are being input to "Black", "Blue" or "Logo". To change the user's logo, you need to record your own logo. p.90 If the "User's Logo Protect" function of Password Protect has been set to "ON", the "Logo" setting cannot be changed from "Logo" to "Black" or "Blue", or from "Black" or "Blue" to "Logo". Cancel the Password 	Background Color: Blue
	Protect function before changing these settings. p.29 Startup Screen: Sets whether the startup screen is displayed or not. To change the user's logo, you need to record your own user's logo. p.90 This cannot be changed from enabled ("ON") to disabled ("OFF") if the "User's Logo Protect" function of Password Protect has been set to "ON". Cancel the Password Protect function before changing the setting. p.29	Startup Screen: ON
User's Logo Chant. FOR PROJE	 Records a user's logo. p.90 Press the [Enter] button on the remote control or on the projector's control panel and then follow the instructions that appear on the screen. A user's logo cannot be recorded if the "User's Logo Protect" function of Password Protect has been set to "ON". Cancel the Password Protect function before recording a user's logo. p.29 	EPSON logo





Sub-menu	Function	Default
Projection	Sets the projection position for the projector. • Front : Select when the projector is in front of the screen. • Front/Ceiling: Select when the projector is in front of the screen and suspended from the ceiling. • Rear : Select when the projector is behind the screen. • Rear/Ceiling : Select when the projector is behind the screen and suspended from the ceiling.	Front
Operation	This lets you make settings related to projector operation. Direct Power ON: When the projector's power cable is connected, projection starts without needing to press the [Power] button. * When "Direct Power ON" is set to "ON", turn the power off by pressing the [Power] button, then wait for the cooldown period to finish and then disconnect the power cable. If the power cable is left connected to the wall outlet when "Direct Power ON" is set to "ON", the projector will turn on if a power outage occurs and then the power is restored. Sleep Mode: Sets the energy saving operation when no signal is being input. • When set to "ON", projection stops automatically and then after the cool-down period is finished, the projector changes to sleep mode if no operations are carried out for 30 minutes while the "No Signal." message is being displayed. (The Power indicator lights orange.) • Projection starts again when the [Power] button is pressed.	Direct Power ON: OFF Sleep Mode: OFF



FixYourDLP.com
Sponsored by M



Using the Configuration Menu Functions



* EMP Monitor: Allows you to monitor multiple projectors on the network and control them all at once using functions such as turning the power on and off and switching input sources.

To use the EMP Monitor, an adapter and cable for conversion are required. The followings are available products. (As of May, 2004)

For details on the products, visit LANTRONIX's website.

Adapters:

UDS100, UDS200 (LANTRONIX)

Cables:

For the UDS100

RS-232C cable (straight, mini D-Sub9pin female/mini

D-Sub25pin male)

For the UDS200

 $RS\text{-}232C\ cable\ (cross,\,mini\ D\text{-}Sub9pin\ female/mini}$

D-Sub9pin female)

For the detailed and current information about the software, please visit the following website.

http://www.epson.co.uk/support/download/

	Sub-menu	Function	Default
	Standby Mode	Set to "Network ON" to use network monitoring and control functions and the standby monitor out function while the projector is in standby mode. If you change the setting, the new setting will be enabled after the power is turned off. •We provide softwares* for network monitoring and controlling projectors. •When set to "Network ON", the Power indicator will flash orange and then remain orange after disconnecting the power plug and reinserting it into the electrical outlet.	Network OFF
•	COM Port	This can be set to either "RS-232C" or "USB", depending on the port that is being used for communication with a computer. If you change the setting, the new setting will be enabled after the power is turned off.	RS-232C
	Language	Sets the language for message displays. •Press the [Enter] button on the remote control or on the projector's control panel and then make the selection.	English (Varies depending on country of purchase)
	Reset	Returns "Display" and "Operation" settings in the "Extended" menu to their default settings. However, if "Background Color" has been set to "Logo" or if "Startup Screen" has been set to "OFF", the settings will not be returned to their defaults if "User's Logo Protect" is set to "ON". p.29 • Press the [Enter] button on the remote control or on the projector's control panel. • To return all settings such as the "Image" and "Signal" menu settings to their default values, select "Reset All" from the "Reset" menu. p.65	-

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





Info" Menu

- The "Info" menu shows the setting details for the current image source.
- The "Lamp Hours" item appears as 0H for 0–10 hours, and after that, it appears in units of 1 hour.

Computer/RGB Video/Component video



Composite video[▶]/ S-Video[▶]




Sub-menu	Function	Default
Lamp Hours	Displays the cumulative lamp operating time for both "High Brightness" and "Low Brightness". •When the lamp warning period is reached, the display characters appear in red.	ОН
Source	Displays the input source which is currently being projected.	
Input Signal	Displays the input signal settings. (Does not appear when the input source is composite video or S-video.)	
Resolution	Displays the input resolution. (Does not appear when the input source is composite video or S-video.)	-
Video Signal	Shows the video signal format. (Not displayed for computer, RGB video or component video images)	-
Refresh Rate	Displays the refresh rate. (Does not appear when the input source is composite video or S-video.)	-
Sync. Info	Informations in this menu may be required in case that you ask for service to your dealer or the nearest address provided at "International Warranty Conditions" section of the <i>Safety Instructions/World Wide Warranty Terms</i> booklet. (Does not appear when the input source is composite video or S-video.)	-

-Merchant.com (800) 281-8860 source for projector LAMPS AND ACCESSORIES



Reset" Menu

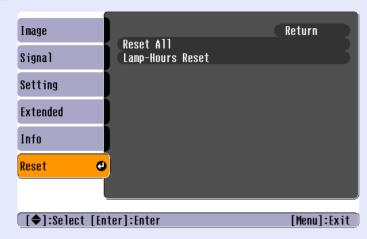

Sub-menu	Function	Default
Reset All	 Resets all items in all menus to their default settings. Press the [Enter] button on the remote control or on the projector's control panel. To reset settings such as "Image" or "Signal", select "Reset" from the respective sub menus. The "Computer1 Input", "Computer2 Input", "Video Signal", "User's Logo", "Lamp Hours" and "Language" settings will not be reset to their defaults. However, if "Background Color" is set to "Logo" or "Startup Screen" is set to "OFF", these settings will not be returned to their defaults when "User's Logo Protect" is set to "ON". p.29 	-
Lamp- Hours Reset	Initialises the lamp operating time. When this command is selected, the cumulative lamp operating time is reset to the initial default value.	-



Using the Configuration Menus

The configuration menus can be operated using either the remote control or the projector's control panel.

PROCEDURE



 
Press the [Menu] button.

The configuration menu appears.

Remote control



Projector



Select a menu item.

Tilt the $[\diamondsuit]$ button on the remote control up and down or press the $[\triangle]$ and $[\bigtriangledown]$ buttons on the projector's control panel to move to the item to be set.




-Merchant.com (800) 281-8860 SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

[♦]:Select [Enter]:Enter [Menu]:Exit

Confirm the selection.

Press the [Enter] button to confirm the selection of a menu item.

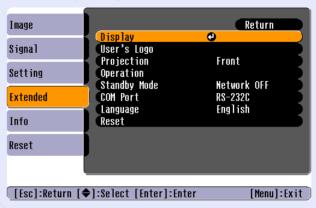








Select a sub-menu item.

Tilt the $[\diamondsuit]$ button on the remote control up and down or press the $[\triangle]$ and $[\bigtriangledown]$ buttons on the projector's control panel to move to the sub-item to be set, and then press the [Enter] button.

The items that are displayed in the "Image" menu, "Signal" menu and "Info" menu vary depending on the input source that is being projected.

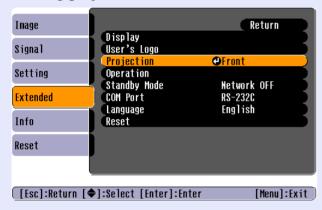



Change the setting.

- •Tilt the $[\diamondsuit]$ button on the remote control or press the $[\triangle]$, $[\bigtriangledown]$, $[\lhd]$ and $[\triangleright]$ buttons on the projector's control panel to change the setting.
- : Current setting value
- 0 : Currently-selected setting item
- •If you press the [Enter] button when at items with a ⊙ displayed, the setting screen for that item will be displayed. After making the setting, press the [Enter] button to accept the setting. The will change to green.





Close the menu.

Press the [Menu] button.



Refer to "List of Functions" for details on the functions of each menu item. • p.51







Troubleshooting

This chapter describes how to identify problems and what to do if a problem is found.

Using the Help	69	
Problems Solving	71	
•Abnormal		
• Reading the Indicators	71	
Power indicator lights red	71	
•Warning		
•Lamp or Temp indicator flashes orange	72	
•Normal		
 Power indicator lights green or orange/ 		
flashes green or orange		
• When the Indicators Provide No Help	74	
Problems relating to images		
• Problems when projection s Fixyour DLP.com	81	
• Other problems Sponsored by DM	82	
Problems when projection s Other problems Sponsored by DM DISCOUNT-	werchant.com (800) 281-8860
THE TRUSTED S	OURCE FOR PROJECTOR LAMP	S AND ACCESSORIES

Using the Help



If a problem occurs with the projector, the Help function uses on-screen displays to assist you in solving the problem. It uses a series of menus in a question and answer format.

PROCEDURE




Press the [Help] button.

The help menu will be displayed.

Remote control




Projector

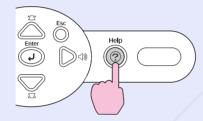


2 Select a menu item.


Tilt the $[\diamondsuit]$ button on the remote control or press the $[\triangle]$ and $[\bigtriangledown]$ buttons on the projector's control panel to select an item.

Remote control

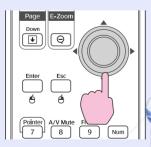

Projector

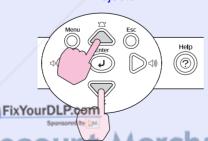


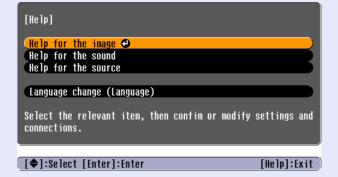


Confirm the selection.

Press the [Enter] button to confirm the selection of a menu item.

Remote control

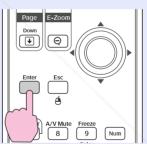

Projector

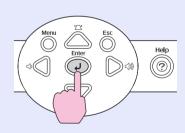

Discount-Merchant.com (800) 281-8860







Repeat the operations in steps 2 and 3 to proceed through the menu to more detailed items.

The help menu is cleared when the [Help] button is pressed.





If the Help function does not provide a solution to the problem, refer to ''Problem Solving'' p.71






Problems Solving



If you are having a problem with the projector, first check the projector's indicators and refer to "Reading the Indicators" below. If the indicators do not show clearly what the problem might be, refer to "When the Indicators Provide No Help". p.74

Reading the Indicators

The projector is provided with the following three indicators which indicate the operating status of the projector.

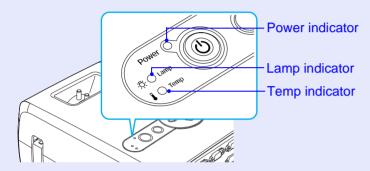

The following tables show what the indicators mean and how to remedy problems that they indicate.

If all indicators are switched off, check that the power cable is connected correctly and that power is being supplied normally.

Power indicator lights red Abnormal

Status	Cause	Remedy or Status
Power Red Red Red	Internal error	Stop using the projector, disconnect the power cable from the electrical outlet, and contact your dealer or the nearest address provided in the "International Warranty Conditions" section of the Safety Instructions/World-Wide Warranty Terms booklet.
Power Red	Fan related error/ Sensor er FixYourDLP.com	Stop using the projector, disconnect the power cable from the electrical outlet, and contact your dealer or the nearest address provided in the "International Warranty Conditions" section of the Safety Instructions/World-Wide Warranty Terms booklet.

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





● : lit - : flashing ○ : off

Status	Cause	Remedy or Status
Power Red	Internal temperature error (overheating)	The lamp will turn off automatically and projection will stop. Wait for about 5 minutes. After about 5 minutes the projector will switch to standby mode, so check the following two points. After checking, press the [Power] button to turn the power back on. •Check that the air filter and air exhaust vent are clear, and that the projector is not positioned against a wall. p.17 •If the air filters are blocked, clean or replace them. p.84, p.89 If this does not solve the problem and the projector continues to overheat or the indicators continue to show a problem when the power is turned on, stop using the projector, disconnect the power cable from the wall outlet, and contact your dealer or the nearest address provided in the "International Warranty Conditions" section of the Safety Instructions/World-Wide Warranty Terms booklet.
Power Red Lamp timer failure/Lamp out	Take out the lamp and check if it is broken. p.86 If the lamp is not broken, put it back in and then turn the power on. If the lamp still does not turn on, replace it with a new lamp. If this does not solve the problem, stop using the projector and disconnect the power cable from the electrical outlet. Then contact your dealer or the nearest address provided in the "International Warranty Conditions" section of the Safety Instructions/World-Wide Warranty Terms booklet If the lamp is broken replace it with a new lamp, or contact your local dealer for further advice. If replacing the lamp yourself, be careful to avoid pieces of broken glass.	
	/	(Projection cannot be carried out until the lamp is replaced.)
		Check that the lamp and the lamp cover are securely installed. If the lamp or lamp cover is not securely installed, the lamp will not switch on.

■ Lamp or Temp indicator flashes orange Warning

.amp or Temp indicator flashes orange Warning ○ : lit • : flashing ○ :		
Status	Cause	Remedy or Status
Power - Red	High-speed cooling in progress FixYourDLP.com Sponsored by DM	 (This is not an abnormality, but if the temperature rises too high again, projection will stop automatically.) •Check that the air filters and air exhaust vent are clear and that they are not up against a surface such as a wall. p.17 •If the air filters are clogged, clean or replace them. p.84, p.89





● : lit - : flashing ○ : off

• . lit 'd' . flaching • . off

Status	Cause	Remedy or Status
Power Orange		Replace the lamp with a new one. p.86 If you continue to use the lamp after it has passed the replacement period, the possibility that the lamp may break will increase. Replace the lamp with a new one as soon as possible. The Power indicator status will vary depending on the projector status at the time.

Status	ghts green or orange/flashes Cause	s green or orange Normal
Power Orange	Standby condition	Projection starts again when the [Power] button is pressed. You can disconnect the power plug from the electrical outlet when the status light is in this condition.
Power - Green	Warm-up in progress	Warm-up time is approximately 40 seconds. After warm-up is complete, the indicator stops flashing.
Power Green	Projection in progress	
Power - Orenge	Cool-down in progress	Please wait. •The cool-down period lasts about 20 seconds. •The [Power] button will not operate if it is pressed while cool-down is in progress. When the cool-down period is finished and the confirmation buzzer has sounded and the indicator changes to light orange, repeat the operation.



FixYourDLP.com

- •If the projector is not operating properly even though the indicators are all showing normal, refer to "When the Indicators Provide No Help" on the following page.
- •If an indicator is showing a status which does not appear in the previous tables, contact your dealer or the nearest address provided in the "International Warranty Conditions" section of the Safety Instructions/World-Wide Warranty Terms booklet.



When the Indicators Provide No Help

If any of the following problems occur and the indicators do not offer a solution, refer to the pages given for each problem.

Problems relating to images

- No images appear p.75
 Projection does not start, the projection area is completely black, the projection area is completely blue, etc.
- Can not switch projection to a video source by pressing the [Source Search] button p.75
- Projection stops automatically p.76
- ■The message "Not Supported." is displayed p.76
- ■The message "No Signal." is displayed p.77
- Images are fuzzy or out of focus p.77
- Interference or distortion appear in images p.78
 Problems such as interference, distortion or black & white checked patterns appear.
- Image is truncated (large) or small p.79
 Only part of the image is displayed.
- Image colours are not right p.80

 The whole image appears purplish or greenish, images are black & white, colours appear dull, etc.

 (Computer monitors and LCD screens have different colour reproduction performance, so that the colours projected by the projector and the colours appropriate monitor may not necessarily match, but this is a sign of a problem.)

Problems when projection starts

■ Power does not turn on p.81

Other problems

- No sound can be heard or the sound is faint p.82



• Images appear dark • p.81 is count-Merchant.com (800) 281-8860

Nothing appears on the external monitor



■ Problems relating to images

■ No images appear

Check	Remedy
Was the [Power] button pressed?	Press the [Power] button to turn the power on.
Are both indicators switched off?	The power cable is not connected correctly or power is not being supplied normally. Connect the projector's power cable correctly. p.31 Check that your power supply socket is working.
Is A/V Mute mode active?	Press the [A/V Mute] button on the remote control to cancel the mute. • p.46
Has "Message" been set to "OFF"?	If the "Message" command is set to "OFF", set it to "ON" so that messages can be displayed. When a message is displayed, refer to the item that it indicates. "Extended" - "Display" - "Message" p.61
Have the configuration menu settings been made correctly?	Reset all of the settings. "Reset" - "Reset All" p.65
Is the projected image completely black?	Some input images, such as screen savers, may be completely black.
Only when projecting computer images	
Are the image signal format settings correct? Only when projecting images from a video source	If a <u>composite video</u> or <u>S-Video</u> source is connected to the projector, use the "Video Signal" menu command to select the signal format. "Signal" - "Video Signal" p.57

■ Can not switch projection to a video source by pressing the [Source Search] button

Check	Remedy
Is the image signal output from the video	Press the [Play] button of the video equipment. Or press one of the source buttons on the remote control ([Computer1], [Computer2], [S-Video] or
Spensored by DM	[Video] button) to switch to the desired source.
Only when projecting images from a video source	Merchant.com (800) 281-8860
2 database and a	URCE FOR PROJECTOR LAMPS AND ACCESSORIES



■ Projection stops automatically

Check	Remedy
Is "Sleep Mode" set to "ON"?	When the "Sleep Mode" menu command has been set to "ON", the lamp turns off automatically if no operations are carried out for about 30 minutes while no video signal is being input. The Power indicator will flash orange at this time. Press the [Power] button to turn the power on. If you do not want sleep mode to be used, change the "Sleep Mode" setting to "OFF". "Extended" - "Operation" - "Sleep Mode" p.62

■ The message "Not Supported." is displayed

Check	Remedy
Are the image signal format settings correct?	If a <u>composite video</u> or <u>S-Video</u> source is connected to the projector, use the "Video Signal"
Only when projecting images from a video source	menu command to select the signal format. "Signal" - "Video Signal" p.57
Does the mode match the frequency and resolution of the image signals?	Refer to the documentation provided with your computer for details on changing the resolution and frequency of the image signals being output from the computer.
Only when projecting computer images	"List of Supported Monitor Displays" p.99



■ The message "No Signal." is displayed

Check	Remedy
Are the cables connected correctly?	Check that all of the cables required for projection are securely connected. • p.18–p.25
Has the correct video input port been selected?	Press the [Computer1], [Computer2], [S-Video] or [Video] button on the remote control or the [Source Search] button on the remote control or the projector's control panel to change the image. p.33
Is the power for the computer or video source turned on?	Turn the power on for the devices.
Are the image signals being output to the projector? Only when projecting images from a laptop computer or computer with a built-in LCD screen	If the image signals are only being output to the computer's LCD monitor or to the accessory monitor, you need to change the output to an external destination as well as the computer's own monitor. For some computer models, when the image signals are output externally, they no longer appear on the LCD monitor or accessory monitor. Computer documentation, under a title such as "External output" or "Connecting an external monitor" If the connection is made while the power is already turned on, the function [Fn] key that switches the computer's video signal to external output may not work. Turn the power for the projector and the computer off and then back on again. p.32, p.34

■ Images are fuzzy or out of focus

Check	Remedy
Has the focus been adjusted correctly?	Turn the focus ring on the projector to adjust the focus. p.36
Is the lens cover still attached?	Remove the lens cover. p.31
Is the projector at the correct distance?	The recommended projection distance range of the EMP-821 is 86–1473 cm (2.8–48.3 ft.) and that of the EMP-81/61 is 87–1094 cm (2.9–35.9 ft.). Set the projector up so that it is within this range. p.16
Is the keystone adjustment value too large?	Decrease the projection angle to reduce the amount of keystone correction. p.39
Has condensation formed Discount-I	If the projector is suddenly taken from a cold environment to a warm environment or if sudden ambient temperature changes occur, condensation may form on the surface of the lens, and this may cause the images to appear fuzzy. Set the projector up in the room approximately one hour before it is to be used. If condensation forms on the lens, turn the power off and wait for the condensation to disappear.



■ Interference or distortion appear in images

Check	Remedy	
Are the image signal format settings correct?	If a <u>composite video</u> or <u>S-Video</u> source is connected to the projector, use the "Video Signal" menu command to select the signal format. "Signal" - "Video Signal" p.57	
Only when projecting images from a video source		
Are the cables connected correctly?	Check that all of the cables required for projection are securely connected. • p.18–p.25	
Is an extension cable being used?	If an extension cable is used, electrical interference may affect the signals. Use the accessory cables and check if this helps.	
Has the correct resolution been selected?	Set the computer so that the signals that are output are compatible with this projector.	
Only when projecting computer images	"List of Supported Monitor Displays" p.99 Computer documentation	
Have the "Sync." and "Tracking" settings been adjusted correctly?	Press the [Auto] button on the remote control or the [Enter] button on the projector's control panel to carry out automatic adjustment. If the images have not been adjusted correctly after using automatic	
Computer and RGB video signals only	adjustment, you can make the adjustments using the "Sync." and "Tracking" menus. p.41, p.4	



■ Image is truncated (large) or small

Check	Remedy	
Has the "Resize" been set correctly?	Press the [Resize] button on the remote control. p.47	
Is the image still being enlarged by the E-Zoom function?	Press the [Esc] button on the remote control to cancel the E-Zoom function. • p.48	
Has the "Position" setting been adjusted correctly?	If analogue RGB images from a computer or RGB video images are being projected, press the [Auto] button on the remote control or the [Enter] button on the projector's control panel to carry out automatic adjustment. If the images have not been correctly adjusted after using the automatic setup function, adjust the setting manually using the "Position" menu command. If signals other than analogue RGB images from a computer or RGB video images are being input, adjust the setting manually using the "Position" menu command. "Signal" - "Position" • p.55, p.57	
Has the computer been set for dual display? Only when projecting computer images	If dual display has been activated in the Display Properties of the computer's Control Panel, the projector will only project about half of the image on the computer screen. To display the whole of the image on the computer screen, turn off the dual display setting. Computer video driver documentation	
Has the correct resolution been selected? Only when projecting computer images	Set the computer so that the signals that are output are compatible with this projector. "List of Supported Monitor Displays" p.99 Computer documentation	



■ Image colours are not right

Check	Remedy	
Do the input signal settings match the signals from the connected device?	If you connect a computer or RGB video to the [Computer1/Component Video1] or [Computer2/Component Video2] port, and select "Component Video1" or "Component Video2" for "Computer1 Input" or "Computer2 Input" in the configuration menu, the projected image is tinged with purplish red. If you connect a component video to the [Computer1/Component Video1] or [Computer2/Component Video2] port, and select "Computer1" or "Computer2" for the "Computer1 Input" or "Computer2 Input" in the configuration menu, the projected image is tinged with green. "Signal" - "Computer1 Input", "Computer2 Input" p.55, p.57	
	If a <u>composite video</u> or <u>S-Video</u> source is connected to the projector, use the "Video Signal" menu command to select the video signal format. "Signal" - "Video Signal" p.57	
Has the image brightness been adjusted correctly?	Use the "Brightness" menu command to adjust the brightness. "Image" - "Brightness" p.51, p.53	
Are the cables connected correctly?	Check that all of the cables required for projection are securely connected. • p.18–p.25	
Has the image contrast been adjusted correctly?	Use the "Contrast" menu command to adjust the contrast. "Image" - "Contrast"	
Has the colour been adjusted correctly?	Use the "Color Adjustment" menu command to adjust the colour. "Image" - "Color Adjustment" p.52, p.54	
Have the colour intensity and tint been adjusted correctly?	Use the "Color Intensity" and "Tint" menu commands to adjust the colour and tint. "Image" - "Color Intensity", "Tint" p.53	
Only when projecting images from a video source		



■ Images appear dark

Check	Remedy	
Have the image brightness and luminance been adjusted correctly?	Use the "Brightness" and "Brightness Control" menu commands to adjust the brightness and luminance. "Image" - "Brightness" p.51, p.53 "Setting" - "Brightness Control" p.59	
Has the image contrast been adjusted correctly?	Use the "Contrast" menu command to adjust the contrast. "Image" - "Contrast"	
Is the lamp due for replacement?	When the lamp is nearly due for replacement, the images will become darker and the colour quality will become poorer. When this happens, the lamp should be replaced with a new one. p.86	

■ Nothing appears on the external monitor

Check	Remedy
projected?	The only images that can be displayed on an external monitor are those from the [Computer1/Component Video1] port. The [Computer2/Component Video2] port cannot be used for an external monitor, and images from a video equipment cannot be send to the external monitor regardless of the port. p.22

■ Problems when projection starts

■ Power does not turn on

Check	Remedy	
Have you pressed the [Power] button?	Press the [Power] button to turn the power on.	
Are all of the indicators switched off? FixYourDLP.com Sponsored by DM	The power cable is not connected correctly or power is not being supplied. Connect the power cable to the projector correctly. p.31 Alternatively, check the circuit breaker to see if power is being supplied.	
	There is probably a poor contact in the power cable, or the power cable may be defective. Reinsert the power cable. If this does not solve the problem, stop using the projector, disconnect the power cable from the wall outlet and contact the nearest address provided in the "International Warranty Conditions" section of the <i>Safety Instructions/World-Wide Warranty Terms</i> booklet.	



Other problems

■ No sound can be heard or the sound is faint

Check	Remedy	
Is the audio source connected correctly?	Check that the cable is connected to the correct [Audio] port. p.26	
Has the volume been adjusted to the minimum setting? Adjust the volume so that sound can be heard. p.44		
Is A/V Mute mode active?	Press the [A/V Mute] button on the remote control to cancel the A/V mute function. • p.46	

■ The remote control does not work

Check	Remedy	
Is the remote control light-emitting area facing towards the remote control light-receiving area when it is operated?	Face the remote control towards the remote control light-receiving area. The operating angle for the remote control is approximately $\pm 30^{\circ}$ horizontally and approximately $\pm 15^{\circ}$ vertically. \bigcirc p.14	
Is the remote control too far from the projector?	The operating range for the remote control is approximately 6m. p.14	
Is direct sunlight or strong light from fluorescent lamps shining onto the remote control light-receiving area?	g onto the remote receiving area.	
Are the batteries dead, or have the batteries been inserted correctly?	Insert new batteries, while making sure that they are inserted the correct way around. p.12	

■ The fans do not stop when power is turned off

Check	Remedy
to "Notwork ON"2	If the menu is set to "Network ON", the fans will continue to operate after the cool-down period has finished. "Extended" - "Standby Mode" p.63

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Appendices

This chapter provides information on maintenance procedures to ensure the best level of performance from the projector.

Maintenance	84 List of ESC/VP21 Commands	96
Cleaning	.84 • Command List	96
•Cleaning the Projector's Surface	• Communication Protocol	96
•Cleaning the Lens		97
•Cleaning the Air Filters and Air Intake Vent		
• Replacing Consumables	•USB connection	97
Lamp Replacement Period	• USB Connection Setup	98
•Replacing the Lamp •Resetting the Lamp Operating Time	I IST AT SUMMARIAN WIANITAR I JISHIQVS	99
• Replacing the Air Filter	Computer/DCD Video	99
	•Component Video/RGB Video	
Saving a User's Logo	•Composite Video/S-Video	99
Optional Accessories and Consumables	93 Specifications	
Optional Accessories FixYourDLP.com Consumables	93 Appearance	102
Glossary THE TRUSTED SOURCE FOR		103

Maintenance



This section describes maintenance tasks such as cleaning the projector and replacing consumable parts.

Cleaning

You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.



CAUTION

Be sure to read the separate Safety Instructions/World-Wide Warranty Terms before cleaning.

Cleaning the Projector's Surface

Clean the projector's surface by wiping it gently with a soft cloth. If the projector is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the projector's surface. Then wipe it again with a soft, dry cloth.



CAUTION

Do not use volatile substances such as wax, alcohol or thinner to clean the projector's surface. These can cause the projector to warp and make the coating finish peel off.

Cleaning the Lens

Use a commercially-available aigently wipe the lens.

as it can easily become damaged.







Do not rub the lens with harsh materials or subject the lens to shocks,

Cleaning the Air Filters and Air Intake Vent

If dust collects on the air filter or the air outlet, it can cause the internal temperature of the projector to rise, and this can lead to problems with operation and shortening of the optical engine's service life. It is recommended that you clean these parts at least once every three months. Clean them more often than this if using the projector in particularly dusty environments.

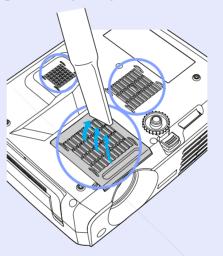

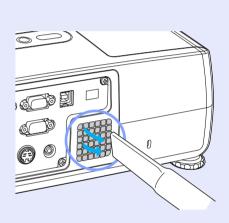



If the air filters are broken or if the warning message reappears after they have been cleaned, they should be replaced. Replace with a new air filter. See "Appendices: Optional Accessories".

p.93



Replacing Consumables

This section describes how to replace the lamp and the air filters.


Lamp Replacement Period

It is time to replace the lamp when:

• The message "Replace the Lamp." appears on the screen when projection starts.



• When the Lamp indicator is flashing orange.

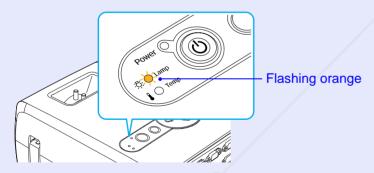

• The projected image gets da FixYourDLP.com or starts to deteriorate.



- The lamp replacement message is set to appear after the following periods of time in order to maintain the initial brightness and quality of the projected images.
- · When used continuously at high brightness: Approx. 1900 hours
- · When used continuously at low brightness: Approx. 2900 hours "Brightness Control" p.59
- If you continue to use the lamp after this period, the possibility of the lamp breaking becomes greater. When the lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.
- •Depending on the characteristics of the lamp and on the way it has been used, the lamp may become darker or stop working before the lamp warning message appears. You should always have a spare lamp ready in case it is needed.
- Contact your dealer for a spare lamp.

SCOUNT-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Replacing the Lamp



CAUTION


- If you are replacing the lamp because it has stopped working, it is possible that the lamp is broken.
- If replacing the lamp of a projector which has been installed on a ceiling, you should always assume that the lamp is broken and be extremely careful when removing the lamp cover.
- Wait until the lamp has cooled down sufficiently before removing the lamp cover. It takes a further one hour after the <u>cool-down</u> period has finished for the lamp to be cool enough.

PROCEDURE



Turn off the projector's power, wait until the cooldown period has ended and a "pip-pip" confirmation buzzer sounds, and then disconnect the power cable.

The cool-down period lasts for about 20 seconds.

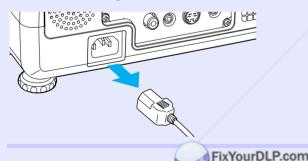


Wait until the lamp has cooled down, then remove the lamp cover from the base of the projector.

It takes approximately one hour for the lamp to cool down by itself after the cool-down period has finished.


Loosen the lamp cover fixing screw with the screwdriver that is supplied with the spare lamp (or your own cross head screwdriver).

Then slide the lamp cover straight forward and lift it to remove.

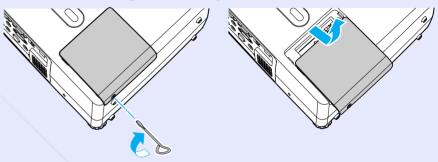

Coosen the two lamp fixing screws.

Loosen the two lamp fixing screws with the screwdriver that is supplied with the spare lamp (or your own cross head screwdriver).

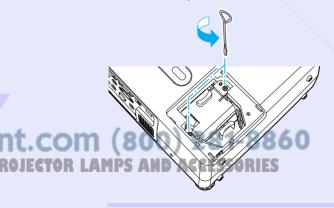





Take out the lamp.

Hold the lamp as shown in the illustration below and lift it up and out of the projector.

If the lamp is broken replace it with a new lamp, or contact your local dealer for further advice. If replacing the lamp yourself, be careful to avoid pieces of broken glass.





Install the new lamp.

Insert the new lamp so that the lamp fits the place correctly and once it is fully inserted, tighten the two screws.



Install the lamp cover.


Slide the lamp cover and tighten the cover fixing screws.





TIP

- •Install the lamp securely. If the lamp cover is removed, the lamp turns off automatically as a safety precaution. Moreover, the lamp will not turn on if the lamp or the lamp cover is not installed correctly.
- The lamp contains mercury. Dispose of used lamps properly in accordance with your local regulations.

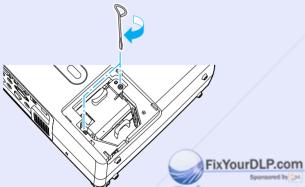

iscount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





88

Resetting the Lamp Operating Time

The projector has a built-in counter which keeps track of the lamp operating time. When the cumulative operating time reaches a certain point, it causes the replacement warning message to be displayed. Therefore, the counter needs to be reset after the lamp has been replaced with a new one. You can do this using the configuration menu.



Do not reset the lamp operating time except after the lamp has been replaced, otherwise the lamp replacement period will not be indicated correctly.

PROCEDURE

 
Connect the power cable, turn on the projector's power, and then press the [Menu] button.

The configuration menu will be displayed.










2 Select "Lamp-Hours Reset" from the "Reset" menu and then press the [Enter] button.

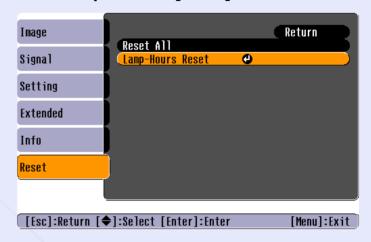

3 Select "Yes" and then press the [Enter] button.

The lamp operating time will then be reset.





SCOUNT-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Replacing the Air Filter


If the air filters are broken or if the warning message reappears after they have been cleaned, they should be replaced.

The air filter can be replaced even if the projector is installed on a ceiling.

PROCEDURE

Turn off the projector's power, wait until the <u>cooldown</u> period has ended and a "pip-pip" confirmation buzzer sounds, and then disconnect the power cable.

The cool-down period lasts for about 20 seconds.

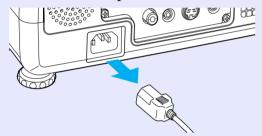


Remove the air filter.

Put your finger into the recess of the air filter and slide it forward to remove it.



Install the new air filter.

Slide the air filter covers in from the outside and push them in until they click into place.

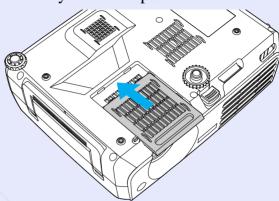



Dispose of used air filters properly in accordance with your local regulations.

Air filter frame: Polycarbonate, ABS plastic

Air filter: Polyurethane foam



Saving a User's Logo



You can record the image that is currently being projected as a user's logo.



When a user's logo is recorded, the previous user's logo will be erased.

PROCEDURE

 
1

Project the image that you would like to use as a user's logo, and then press the [Menu] button.

Remote Control



Projector



2 Select "User's Logo" from the "Extended" menu, and then press the [Enter] button.





- •If the "User's Logo Protect" function of "Password Protect" is set to "ON", a message is displayed and the user's logo can not be recorded. To record a user's logo, set "User's Logo Protect" to "OFF" first.

 p.29
- If keystone correction or E-Zoom have been carried out, they will be cancelled when the "User's Logo" menu is selected.



 


3 Select "Yes" in the sub-menu, then press the [Enter] button.






When you press the [Enter] button on either the remote control or the projector's control panel, the image signal will be displayed at their original resolution, so if a signal with a resolution that is different from the panel resolution of the projector is projected, or if a video image is being projected, the display size will change.



Tilt the $[\diamondsuit]$ button on the remote control or press the $[\triangle]$, $[\bigtriangledown]$, $[\circlearrowleft]$ and $[\triangleright]$ buttons on the projector's control panel to select the area of the image to use as the user's logo, and then press the [Enter] button.

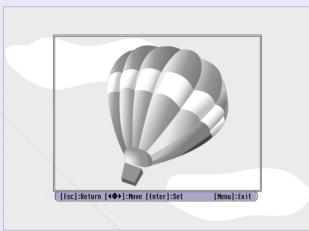




User's logos can be saved at up to 480×360 dots in size.








Select "Yes" at the confirmation screen, and then press the [Enter] button.

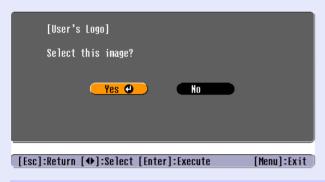

6 Select the zoom rate in the Zoom rate setting screen, and then press the [Enter] button.

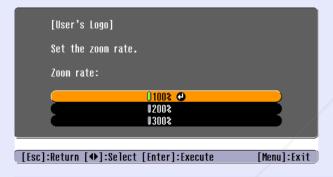

7 Select "Yes" at the confirmation screen, and then press the [Enter] button.

The image will then be saved. Once the image has been saved, the message "Completed." will be displayed.





- Saving the user's logo may take a few moments (about 15 seconds). Do not use the projector or any other sources which are connected to the projector while the user's logo is being saved, otherwise it may result in errors in projector operation.
- Once a user's logo has been saved, the logo setting cannot be returned to the factory default.





Optional Accessories and Consumables



The following optional accessories are available for purchase if required. This list of optional accessories is current as of June, 2004. Details of accessories are subject to change without notice.

Optional Accessories

Soft carrying case ELPKS27

Use this case if you need to carry the projector by hand.

60" screen ELPSC07

80" screen ELPSC08

100" screen ELPSC10

A portable roll-type screen. (Aspect ratio 4:3)

50" portable screen ELPSC06

A compact screen which can be carried easily. (Aspect ratio 4:3)

VGA-HD15 PC cable ELPKC02

(1.8 m (6 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin)

This is the same computer cable as the projector's accessory computer cable.

VGA-HD15 PC cable ELPKC09

(3 m (9.8 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin)

VGA-HD15 PC cable ELPKC10

(20 m (65.6 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin)

Use this extension cable if the accessory computer cable is too short.

Component video cable ELPKC19

(3 m (9.8 ft.) - for mini D-Sub 15-pin/RCA male \times 3)

Component video cable ELPKC27

 $(0.35 \text{ m} (1.15 \text{ ft.}) - \text{for mini D-Sub } 15-\text{pin/RCA female} \times 3)$

Use to connect a component video source.

Ceiling mount * ELPMB07

Use when installing the project

FixYourDLP.com

Ceiling plate* ELPFC03

Pipe 370 (370 mm (14.57 in.)/silver)* ELPFP04

Pipe 570 (570 mm (22.44 in.)/silver)* ELPFP05

Pipe 770 (770 mm (30.31 in.)/silver)* ELPFP06

Use when installing the projector on a high ceiling or a ceiling with veneer panels.

Image presentation camera ELPDC04

Use to project books, OHP films and slides.

* A special method of installation is required in order to suspend the projector from the ceiling. Please contact your dealer if you would like to use this installation method.

Consumables

Spare lamp ELPLP30

Use as a replacement for used lamps.

Filter kit ELPAF06

(2 air filters)

Use as a replacement for used air filters.

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Glossary



The following is an explanation of some of the terms used in this guide which may be unfamiliar or which are not explained in the text of this guide itself. Further information can be obtained by referring to other commercially-available publications.

Abs. Color Temp.	The temperature of an object which is emitting light. If the absolute colour temperature is high, the colours tend to take on a bluish tinge. If the absolute colour temperature is lower, the colours tend to take on a reddish tinge.	
Aspect ratio	The ratio between an image's length and its height. HDTV images have an aspect ratio of 16:9 and appear elongated. The aspect ratio for standard images is 4:3.	
Component video	Video signals which have the video brightness signals and colour signals separated, in order to provide better image quality. In high-definition TV (HDTV), it refers to images which consist of three independent signals: Y (luminance signal), and Pb and Pr (colour difference signals).	
Composite video	Video signals which have the video brightness signals and colour signals mixed together. The type of signals commonly used by household video equipment (NTSC, PAL and SECAM formats). The carrier signal Y (luminance signal) and chroma (colour) signal which are contained in the colour bar are overlapped to form a single signal.	
Contrast	The relative brightness of the light and dark areas of an image can be increased or decreased in order to make text and graphics stand out more clearly, or to make them appear softer. Adjusting this particular property of an image is called "contrast adjustment".	
Cool-down	This is the process by which the projector's lamp is cooled down after it has become hot through use. Cool-down is carried out automatically when the [Power] button is pressed to turn off the power. Do not disconnect the power cable while cool-down is in progress, otherwise the cool-down process will not work properly. If the cool-down period is not allowed to finish normally, the projector's lamp and internal components will remain at high temperatures, and this may shorten the operating life of the lamp or cause problems with the operation of the projector.	
Dolby Digital	A sound format developed by Dolby Laboratories. Normal stereo is a 2-channel format which uses two speakers. Dolby Digital is a 6-channel (5.1-channel) system which adds to this a centre speaker two rear speakers and a sub-woofer.	
HDTV	An abbreviation for High-Definition Television. It refers to high-definition systems which satisfy the following conditions. • Vertical resolution of 750p or 1125i or greater (p = progressive scanning) • Screen aspect ratio • Dolby Digital audio reception and playback (or output)	
Interlaced scanning	A method of image scanning whereby the image data is divided into fine horizontal lines which are displayed in sequence starting from left to right and then from the top to the bottom of the screen. The even-numbered lines and odd-numbered lines splayed alternately.	
Progressive scanning	A method of image scanning whereby the image data from a single image is scanned sequentially from top to bottom to create a single image.	
Refresh rate	The light-emitting element of a display maintains the same luminosity and colour for an extremely short time. Because of this, the image must be scanned many times per second in order to refresh the light-emitting element. The number of refresh operations per second is called the "refresh rate", and is expressed in hertz (Hz).	



Resize display	This function is used to allow images that have a resolution more than or less than the projector's panel resolution to be projected so that they fill the whole of the projection area.
SDTV	An abbreviation for Standard Definition Television. It refers to standard television systems which do not satisfy the conditions for High-Definition Television.
Security lock	A device consisting of a projector case with a hole in it that a commercially-available theft-prevention cable can be passed through in order to secure the device to a table or pillar. This projector is compatible with the Microsaver Security System manufactured by Kensington.
Squeeze mode	In this mode, wide-screen images in 16:9 mode are compressed in the horizontal direction so that they are stored on the recording medium as 4:3 images. When these images are played back by the projector in squeeze mode, they are restored to their original 16:9 format.
sRGB	An international standard for colour intervals that was formulated so that colours which are reproduced by video equipment can be handled easily by computer operating systems (OS) and the Internet.
SVGA	A type of video signal with a resolution of 800 (horizontal) × 600 (vertical) dots which is used by IBM PC/AT-compatible computers.
S-Video	A video signal which has the luminance component and colour component separated in order to provide better image quality. It refers to images which consist of two independent signals: Y (luminance signal), and C (colour signal).
SXGA	A type of video signal with a resolution of 1280 (horizontal) × 1024 (vertical) dots which is used by IBM PC/AT-compatible computers.
Sync (synchronisation)	The signals output from computers and RGB video equipment have a specific frequency. If the projector frequency does not match this frequency, the resulting images will not be of a good quality. The process of matching the phases of these signals (the relative position of the crests and troughs in the signal) is called "synchronisation". If the signals are not synchronized, problems such as flickering, blurriness and horizontal interference can occur.
Tracking	The signals output from computers and RGB video equipment have a specific frequency. If the projector frequency does not match this frequency, the resulting images will not be of a good quality. The process of matching the frequency of these signals (the number of crests in the signal) is called "tracking". If tracking is not carried out correctly, wide vertical stripes will appear in the projected images.
USB	An abbreviation for Universal Serial Bus. USB is an interface for connecting personal computers to peripheral devices which only support relatively low data transmission speeds.
UXGA	A type of video signal with a resolution of 1600 (horizontal) × 1200 (vertical) dots which is used by IBM PC/AT-compatible cuters our DLP.com
VGA	A pe of video signal with a resolution of 640 (horizontal) × 480 (vertical) dots which is used by IBM PC/AT-compatible computers.
XGA	A type of video signal with a resolution of 1024 (horizontal) × 768 (vertical) dots which is used by IBM PC/AT-compatible computers.

List of ESC/VP21 Commands



Command List

When a power on command is sent to the projector, the power will turn on and the projector will change to warm-up mode. When the power has turned on, a colon ":" (3Ah) will be returned.

When the projector executes a command, it returns a ":" and waits for the next command to be sent.

If command processing terminates with an error, the projector outputs an error message and then returns the ":" code.

	Item	Command
Power ON/OFF	ON	PWR ON
FOWER ON/OFT	OFF	PWR OFF
	Computer1 (Auto)	SOURCE 1F
	Computer1	SOURCE 11
	Component Video1	SOURCE 14
Cional calcation	Computer2 (Auto)	SOURCE 2F
Signal selection	Computer2	SOURCE 21
	Component Video2	SOURCE 24
	Video	SOURCE 41
	S-Video	SOURCE 42
A/MAN A ONLOGE	ON	MUTE ON
A/V Mute ON/OFF	OFF	MUTE OFF
A/V Mute Selection	Black	MSEL 00
	Blue	MSEL 01
	User's Logo	MSEL 02

Standard baud rate : 9600 bpsData length : 8 bitsParity : None

•Stop bit : 1 bit

•Flow control : None

Connector shape : D-Sub 9-pin (male)Projector input port : Control (RS-232C)

iscount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Communication Protocol

^{*} When issuing any of the above mands, tack a Carriage Return (CR) code (0Dh) on to the end.

 


Cable Layouts

 
Serial connection

• Connector shape : D-Sub 9 pin (male) • Projector input connector : Control (RS-232C)

<At projector>









USB connection

•Connector shape : USB (type B)





Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



USB Connection Setup

In order to control the projector using ESC/VP21 commands via a USB connection, the following preparations must be carried out.

PROCEDURE

1 Download the USB driver (USB-COM Driver) from the EPSON website to your computer.

The URL is as follows. http://www.epson.co.uk/support/download/index.htm

- 2 Install the downloaded USB driver on your computer.
 Read the instructions displayed on the download screen.
- Change the "COM Port" setting in the "Extended" menu to "USB".
- Turn the projector's power off.
- Wait until the <u>cool-down</u> period has ended and a "pip-pip" confirmation buzzer sounds, and then turn on the power.

 FixYourDLP.com

Once the projector's power has turned back on, communication via a USB Connection will then be possible.

CAUTION

If you disconnect the power cable before the cool-down period has ended and a "pip-pip" confirmation buzzer sounds, the communication port will not change.

List of Supported Monitor Displays

■ Computer/RGB Video

Signal	Refresh rate** (Hz)	Resolution (dots)	Resolutions for resize display [№] (dots)		
	(112)	(uots)	EMP- 821/81	EMP-61	
<u>VGA</u> →	60	640×480	1024×768	800×600	
VGAEGA		640×350	1024×560	800×438	
VESA	60/72/75/85,iMac*	640×480	1024×768	800×600	
SVGA [▶]	56/60/72/75/ 85,iMac*	800×600	1024×768	800×600	
XGA [▶]	60/70/75/85,iMac*	1024×768	1024×768	800×600	
<u>SXGA</u> [▶]	70/75/85	1152×864	1024×768	800×600	
SXGA	60/75/85	1280×960	1024×768	800×600	
SXGA	60/75/85	1280×1024	960×768	750×600	
<u>UXGA</u> ▶	60	1600×1200	1024×768	-	
MAC13"		640×480	1024×768	800×600	
MAC16"		832×624	1024×768	800×600	
MAC19"		1024×768	1024×768	800×600	
MAC19"	60	1024×768	1024×768	800×600	
MAC21"		1152×870	1016×768	794×600	
<u>SDTV</u> (625i)	50	720×576	1024×768	800×600	
SDTV(525i)	60	720×480	1024×768	800×600	
SDTV(525p)	60	640×480	1024×768	800×600	
<u>HDTV</u> → (750p)	60	1280×720	1024×576	800×450	
HDTV(1125i)	60	1920×1080	1024×576	800×450	

^{*} Connection is not possible if the uipment does not have a VGA output port.

■ Component Video/RGB Video

		Resolutions (dots)					
	Refresh	EMP-8	321/81	EMP-61			
Signal	rate [*] (Hz)	Aspect ratio + 4:3	Aspect ratio 16:9	Aspect ratio 4:3	Aspect ratio 16:9		
<u>SDTV</u> (525i) (D1)	60	1024×768	1024×576	800×600	800×450		
SDTV (625i)	50	1024×768	1024×576	800×600	800×450		
SDTV (525p) (D2)	60	1024×768	1024×576	800×600	800×450		
HDTV**(750p) 16:9 (D4)	60	1024×768	1024×576	800×600	800×450		
HDTV (1125i) 16:9 (D3)	60	1024×768	1024×576	800×600	800×450		

■ Composite Video/S-Video

		Resolutions (dots)					
	Refresh	EMP-8	321/81	EMP-61			
Signal	rate* (Hz)	Aspect ratio [→] 4:3	Aspect ratio 16:9	Aspect ratio 4:3	Aspect ratio 16:9		
TV (NTSC)	60	1024×768	1024×576	800×600	800×450		
TV (PAL, SECAM)	50	1024×768	1024×576	800×600	800×450		

The projection of some signals not listed in the table may still be possible.

However, not all functions may be supported? USTED SOURGE FOR PROJECTOR LAMPS AND ACCESSORIES

Specifications

	Z,				
Я	e	g	F		
ç		٠		Z	

Multimedia Projector EMP-821/81/61
$350 \text{ (W)} \times 109 \text{ (H)} \times 272 \text{ (D)} \text{ mm}$
$(12.4 \text{ (W)} \times 4.3 \text{ (H)} \times 9.45 \text{ (D) in.)}$ (not including feet)
EMP-821 : 0.8 inches
EMP-81/61 : 0.7 inches
Polysilicon TFT active matrix
EMP-821/81 : XGA 786,432 pixels
$(1024 \text{ (W)} \times 768 \text{ (H) dots}) \times 3$ EMP-61 : SVGA** 480,000 pixels
$(800 \text{ (W)} \times 600 \text{ (H) dots}) \times 3$
Manual
Ivianuai
EMP-821 : Manual (approx. 1:1.6)
EMP-81/61: Manual (approx. 1:1.0)
UHE lamp, 200 W, Model No.: ELPLP30
OTTE famp, 200 w, Woder No.: ELFLF 30
5W monaural
3 W monaurai
1
-
100–240VAC 50/60Hz 3.2–1.6A
+5°- +35°C (41°-95°F) (No condensation)
-10°-+60°C (14°-140°F) (No condensation)
/
Approx. 4.0 kg (8.9 lbs)

Connectors	Computer1/Component Video1:	1	Mini D-Sub 15-pin (female) Blue
	Audio1:	1	Stereo mini jack
	Computer2/Component Video2:	1	Mini D-Sub 15-pin (female) Blue
	Audio2:	1	Stereo mini jack
	S-Video:	1	Mini DIN 4-pin
	Audio:	1	Stereo mini jack
	Video:	1	RCA pin jack
	Audio:	1	Stereo mini jack
	USB*:	1	USB connector (B series)
	Control (RS-232C):	1	D-Sub 9-pin (male)
	Monitor Out :	1	Mini D-Sub 15-pin (female) Black
	Audio Out:	1	Stereo mini jack

^{*} The USB interface complies with the USB 1.1 standard.
The USB connector is not guaranteed to operate correctly with all USB-compatible devices.



Pixelworks DNXTM ICs are used in this Projector.



Safety

USA
UL60950 Third Edition
Canada
CSA C22.2 No.60950 (cUL)
European Community
The Low Voltage Directive (73/23/EEC)
IEC60950 3rd Edition

EMC

USA FCC Part15B Class B (DoC) Canada ICES-003 Class B


European Community
The EMC Directive (89/336/EEC)
EN55022, 1998 Class B
EN55024, 1998
IEC/EN61000-3-2
IEC/EN61000-3-3

Australia/New Zealand AS/NZS CISPR 22:2002 Class B



Appearance



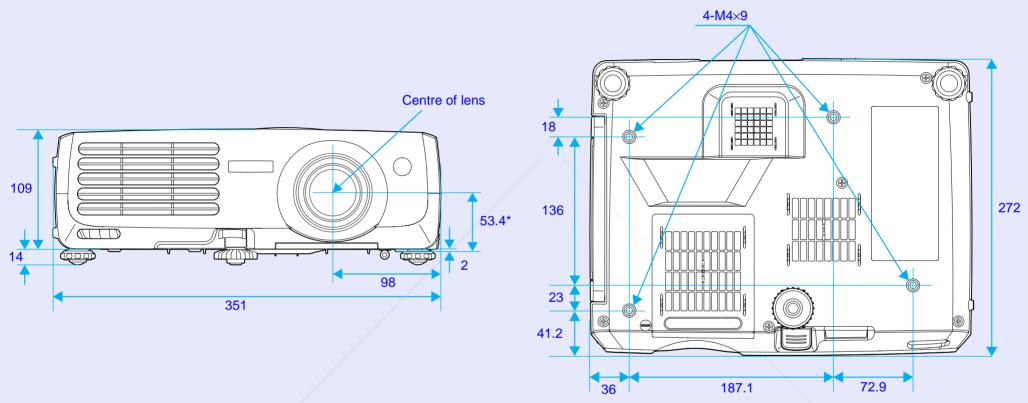

*Distance from center of lens to suspension bracket fixing point

FixYourDLP.com

Units: mm

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Index

Α	_
Abs. Color Temp 52, 54	4
Air exhaust vent	7
Air filter 10)
Air intake vent)
Aspect ratio47	7
[Audio1] port9, 26	5
[Audio2] port	5
[Audio Out] port	9
[Audio] port9, 26	5
Auto Keystone 59	9
Auto Setup40, 55	5
A/V cable23, 26	5
A/V Mute	
В	_
Background Color 61	1
Blackboard43, 51, 53	3
Brightness51, 53	3
Brightness Control 59	9
Buzzer for notice of termination 34	1

<u> </u>
Cleaning the Air Filter84
Cleaning the Lens84
Cleaning the Projector
Surface 84, 93
Color Intensity53
Color Mode43, 51, 53
Component video24
COM Port63
Composite video23
[Computer1/Component Video1]
port9
Computer1 Input 55, 57
[Computer2/Component Video2]
port9
Computer2 Input 55, 57
Computer cable 19, 25
Connecting to a Computer18
Connecting to a Video Source23
Contrast 51, 53
Control Panel8
[Control (RS-232C)] port9
Cool-down
CrysurDLP.com 48
account Morchani

D	
DirectPower ON	62
Display	
Dynamic	
<u>E</u>	
Eligible computers	18
ESC/VP21	96
"Extended" Menu	61
E-Zoom	48
F	
Focus	36
Focus ring	7
Foot adjustment	38
Freeze	
Front adjustable foot	
G	
Glossary	94

High59
I
"Image" Menu51
Image size
Indicators 7, 71
"Info" Menu64
Input Signal64
Inserting the Batteries12
K
Keystone
L
Lamp cover7
Lamp Hours64
Lamp-Hours Reset 65, 88
Lamp indicator
Lamp replacement period85
Language63
Lens cover7
Living Room43, 51, 53

	MILLE	TATO.	- I I	0011014		100	-, .		-
THE T	RUSTED	SOURCE	FOR	PROJEC	Handle	1PS A	ND AG	GESSO	RIE

HDTV	99
Help function	69



M
Main menu 50
Manually Correcting Keystone
Distortion
Menu50
Message 61
Mini D-Sub 15-pin port 19
[Monitor Out] port9
Mouse pointer21
N
Numeric buttons 11
0
Operating distance
(Remote control)14
Operating range
(Remote control)14
Operating temperature 100
Operation
Operation Lock 59
Optional accessories
Overheating
, and the second
P
Part Names and Functions
Password Protect

Password Protect stickers28	
Pointer49	
Pointer Shape59	
Port	
Position40, 55, 57	
Power cable31	
Power indicator	
Power inlet9	
Power ON Protect27	
Presentation 43, 51, 53	
Problem Solving71	
Projecting Images32	
Projection62	
Projection angle37	
Projection distance16	
R	
D 11 4 11 6 4 0 20	
Rear adjustable foot	
Refresh Rate	
Remote control11, 12, 13, 20	
Remote control light-emitting area11	
area	
area	
area	

"Reset" Menu65

	Resized display	99
	Resolution	54, 99
	RGB Video	25
	<u>S</u>	
	Screen size	16
	Security lock	
	"Setting" Menu	
	Setting Up the Projector	
	Sharpness	
	"Signal" Menu	
	Sleep Mode	
	Source	64
	Speaker	
	Specifications	100
	Squeeze mode	47
	sRGB 43,5	
	Standby Mode	63
	Startup Screen	61
	Stereo mini jack audio cable	26
	Storage temperature	100
	Sub-menu	50
	Supported Monitor Displays	99
	Suspension bracket fixing	
.(point), 102
	c'S-Video mps. and. ac 24,53);	57, 64
	[S-Video] port	9
	Sync	10, 55
	Sync. Info	64

<u>T</u>	
Tamm in diastan	7 71
Temp indicator Theatre	
Tint	, ,
Tracking	
Translucent screen	
U	

V	
Video	53, 57, 64
Video Signal	57, 64
[Video] port	9
Volume	44

V



W	
Wide-screen Projection 4	17
Wireless Mouse Function	20
Z	

Zoom ring 7





DECLARATION of CONFORMITY

According to 47CFR, Part 2 and 15 Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B **Personal Computers**

We :EPSON AMERICA, INC. Located at :3840 Kilroy Airport Way

MS: 3-13

Long Beach, CA 90806

Tel :562-290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR 2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FixYourDLP.com

Trade Name :EPSON

ount-Merchant.com (800) 281-8860 Type of Product :Projector

Model

FCC Compliance Statement For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification or Declaration of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

General Notice:

EPSON is a registered trademark of SEIKO EPSON CORPORATION. Macintosh, Mac, and iMac are registered trademarks of Apple Computer, Inc.

IBM is a registered trademark of International Business Machines Corporation.

Windows and Windows NT are trademarks of Microsoft Corporation in the United States of America.

Dolby is a registered trademark of Dolby Laboratories.

Pixelworks and DNX are trademarks of Pixelworks, Inc.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

This product uses open source software.



Remote Control

• [Page down][Page up] buttons r p.20

When using the remote control as a wireless mouse, press these buttons to scroll back and forth through pages in a PowerPoint file.

• [E-Zoom] button (⊕) (⊝) **☞** p.48

[①]:Enlarges parts of images without changing the size of the projection area.

 $[\odot]$:Reduces the part of images that have been enlarged using the $[\odot]$ button.

• [Enter] button **p.21**, p.66, p.69

Accepts a menu or help item or displays the next screen or menu when viewing a configuration menu or help menu.

Acts as a mouse left-click when using the wireless mouse function.

• [Esc] button 🖝 p.21

Stops the current function.

Displays the previous screen or menu while viewing a configuration menu. Acts as a mouse right-click when using the wireless mouse function.

• [Pointer] button p.49

Press to indicate part of an image being projected as part of a presentation.

• [A/V Mute] button
p.46

The audio and video are turned turn on or off each time the button is pressed.

• [Computer1] button 🖝 p.33

Switches to images from the [Computer1/Component Video1] port.

• [Computer2] button r.33

Switches to images from the [Computer2/Component Video2] port.

• [S-Video] button p.33

Switches to images from the [S-Video] port.

• [Video] button r p.33

Switches to images from the [Video] port.

Politer A/V Mute Freeze
7 8 9 Num
1 Comp 2 Color Menu
4 5 6 Resize Help
1 2 3 ?
Auto Search
0 Source Volume

Power

A/V Mute Freeze
7 Resize Help
7 Resize Help
7 Volume

Remote control light-emitting area p.13

Outputs remote control signals.

• [Power] button p.32, p.34

Turns the projector power on and off.

• [∅] buttons **☞** p.21, p.66, p.69

When a configuration menu or help menu is displayed, these buttons select menu items and setting values.

When the wireless mouse function is activated, tilting this button moves the pointer in the direction of tilt.

• [Freeze] button p.47

Images are paused or unpaused each time the button is pressed.

• [Num] button 🖝 p.27

This is used when entering and changing passwords.

• [Color Mode] button p.43

Selects the colour mode. The colour mode changes in the order of Dynamic, Presentation, Theatre, Living Room, sRGB** and Blackboard each time the button is pressed.

• [Menu] button 🖝 p.66

Displays and hides the configuration menu.

• [Resize] button 🖝 p.47

When <u>component video</u>, <u>composite video</u> or <u>S-Video</u> signals are being projected, the <u>aspect ratio</u> changes each time this button is pressed.

• [Help] button p.69

Each time this button is pressed, it displays and hides the online help menu that can assist you if you have a problem.

• [Volume] buttons r p.44

Adjust the sound volume.

• [Search] button p.33

The next input source is searched for automatically in the following order and the image input from the connected equipment is projected each time this button is pressed.

→ [Computer1/Component Video1] port

[Computer2/Component Video2] port

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSIVIDE OF INC.

• [Auto] button p.40

Automatically adjusts and optimises analogue RGB computer video signals.

FixYourDLP.com

Numeric buttons p.27

Use these buttons to enter a password when using Password Protect.



This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com

