



# Disclaimer

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

## About FixYourDLP.com

FixYourDLP.com (<http://www.fixyourdlp.com>) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: <http://www.fixyourdlp.com>

Video Guides: <http://www.fixyourdlp.com/guides>

User Forums: <http://www.fixyourdlp.com/forum>

FixYourDLP's Fight Against Counterfeit Lamps:

<http://www.fixyourdlp.com/counterfeits>

## Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps:

<http://www.recycleyourlamp.org>

Lamp Research - The trusted 3rd party lamp research company:

<http://www.lampresearch.com>

Discount-Merchant.com – The worlds largest lamp distributor:

<http://www.discount-merchant.com>



**FixYourDLP.com**

Sponsored by 

Code	Function	
X00	Must be Reversed , no function	
X01	Power On	
X02	Power Off	
X03	Message On	
X04	Message Off	
X05	Lamp hours reset	
X06	Load all user OSD default value	In factory OSD , too.
X07	Save current active source settings	
X08	Change active OSD	
X10	Menu	
X11	Enter	
X12	Exit	
X13	Up(arrow key)	
X14	Down(arrow key)	
X15	Left(arrow key)	
X16	Right(arrow key)	
X20	Switch to Composite input	
X21	Switch to S-Video input	
X22	Switch to Component input	
X23	Switch to Dsub_PC input	
X24	Switch to YPbPr input	
X25	Switch to BNC_PC input	
X26	Switch to DVI input	
X27	Switch to DVI_I input	
X30	Runco defined 4:3 screen	
X31	Runco defined 16:9 screen	
X32	Linear scaling	Removed
X33	Non linear scaling	Removed
X34	Letter box scaling	Removed
X35	Runco - Anamorphic	
X36	Runco - Standard (4:3)	
X37	Runco - Letter box	
X38	Runco - Virtual wide	
X39	Benq-Through	
X40	Load memory 1 settings	
X41	Load memory 2 settings	



FixYourDLP.com

Discount Merchant.com (800) 281-8860

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

X42	Load memory 3 settings	
X43	Load 'optical test' mode settings	
X44	Load 'middle' mode settings	
X45	Load 'CW delay adjustment' mode settings	
X46	Load default of current source	
X47	Save memory 1 settings	
X48	Save memory 2 settings	
X49	Save memory 3 settings	
X50	Scale up	
X51	Scale down	
X52	Zoom in	Removed
X53	Zoom out	Removed
X55	Switch active source	
X56	Picture in picture display	
X57	Picture by picture display	
X60	Swicht language - English	
X61	Swicht language - French	
X62	Swicht language - Spanish	
X63	Swicht language - German	
X64	Swicht language - Italian	
X65	Swicht language - Traditional Chinese	
X66	Swicht language - Simple Chinese	
X67	Swicht language - Korean	
X70	Brightness shortcut	Removed
X71	Contrast shortcut	Removed
X72	Color shortcut	Removed
X73	Sharpness shortcut	Removed
X74	Tint shortcut	Removed
X75	Color temperature shortcut	Removed
X76	Filters shortcut	Removed
X77	Independent color control - Red shortcut	Removed
X78	Independent color control - Green shortcut	Removed
X79	Independent color control - Blue shortcut	Removed
X80	Independent color control - Yellow shortcut	Removed
X81	DMD white peaking shortcut	Removed
X85	PC input - auto	



FixYourDLP.com

Sponsored by

Discount-Merchant.com (800) 281-8860

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

X86	Frequency shortcut	Removed
X87	Phase shortcut	Removed
X88	H - Position shortcut	Removed
X89	V - Position shortcut	Removed
X90	Image orientation - floor front	
X91	Image orientation - ceiling front	
X92	Image orientation - floor rear	
X93	Image orientation - ceiling rear	
X94	Back light board On	
X95	Back light Board Off	
X96	Keystone Shortcut	Removed
X99	On line help	
Comment : Gray words with gray background that mean these functions are not supported by Runco projector , but we still can use these serial command		

 
[illegible]

FixYourDLP.com

Sponsored by 

**Discount-Merchant.com (800) 281-8860**

## THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

[illegible]Sponsored by 

**Discount-Merchant.com (800) 281-8860**

**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**

[illegible]

[FixYourDLP.com](http://FixYourDLP.com)

Sponsored by  IBM

Discount-Merchant.com (800) 281-8860

**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**



# Disclaimer

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

## About FixYourDLP.com

FixYourDLP.com (<http://www.fixyourdlp.com>) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: <http://www.fixyourdlp.com>

Video Guides: <http://www.fixyourdlp.com/guides>

User Forums: <http://www.fixyourdlp.com/forum>

FixYourDLP's Fight Against Counterfeit Lamps:

<http://www.fixyourdlp.com/counterfeits>

## Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps:

<http://www.recycleyourlamp.org>

Lamp Research - The trusted 3rd party lamp research company:

<http://www.lampresearch.com>

Discount-Merchant.com – The worlds largest lamp distributor:

<http://www.discount-merchant.com>



**FixYourDLP.com**

Sponsored by 