



Disclaimer

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (<http://www.fixyourdlp.com>) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: <http://www.fixyourdlp.com>

Video Guides: <http://www.fixyourdlp.com/guides>

User Forums: <http://www.fixyourdlp.com/forum>

FixYourDLP's Fight Against Counterfeit Lamps:

<http://www.fixyourdlp.com/counterfeits>

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps:

<http://www.recycleyourlamp.org>

Lamp Research - The trusted 3rd party lamp research company:

<http://www.lampresearch.com>

Discount-Merchant.com – The worlds largest lamp distributor:

<http://www.discount-merchant.com>



FixYourDLP.com

Sponsored by 

NEC



Portable Projector

LT10 User's Manual



FixYourDLP.com

Sponsored by 

Discount-Merchant.com (800) 281-8860

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.



Trademarks

Trademarks are the rights of their respective owners.

Table of Contents

Table of Contents	1
Important Information	2
<i>Precautions</i>	<i>2</i>
Introduction	4
<i>Introduction</i>	<i>4</i>
<i>What's in the Box?</i>	<i>5</i>
<i>Product Overview</i>	<i>6</i>
<i>Main Unit</i>	<i>6</i>
<i>Control Panel</i>	<i>7</i>
<i>Terminal Panel</i>	<i>7</i>
<i>Remote Control</i>	<i>8</i>
Installation	9
<i>Connecting the Projector</i>	<i>9</i>
<i>Powering On/Off the Projector</i>	<i>10</i>
<i>Powering On the Projector</i>	<i>10</i>
<i>Powering Off the projector</i>	<i>11</i>
<i>Status Indicator</i>	<i>11</i>
<i>Adjusting the Projected Image</i>	<i>12</i>
<i>Adjusting the Projector Height</i>	<i>12</i>
<i>Adjusting the Projector Zoom / Focus</i>	<i>13</i>
<i>Adjusting Projection Image Size</i>	<i>13</i>
User Controls	14
<i>Control Panel & Remote Control</i>	<i>14</i>
<i>On Screen Menus</i>	<i>16</i>
<i>How to operate</i>	<i>16</i>
<i>Language</i>	<i>17</i>
<i>All Images</i>	<i>18</i>
<i>Computer Image</i>	<i>20</i>
<i>Video Image</i>	<i>21</i>
<i>Setup</i>	<i>22</i>
<i>PIP</i>	<i>24</i>
Appendices	25
<i>Troubleshooting</i>	<i>25</i>
<i>Changing the lamp</i>	<i>28</i>
<i>Specifications</i>	<i>29</i>
<i>Compatibility Modes</i>	<i>30</i>
TravelCare Guide	A-1












FixYourDLP.com

Discount-Merchant.com (800) 281-8880
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Important Information

Precautions

Follow all warnings, precautions and maintenance as recommended in this user's guide to maximize the life of your unit.

-  **Warning-** Do not look into the projector's lens when the lamp is on. The bright light may hurt your eyes.
-  **Warning-** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
-  **Warning-** Please do not open or disassemble the product as this may cause electric shock.
-  **Warning-** When changing the lamp, please allow unit to cool down, and follow all changing instructions.
-  **Warning-** This product will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.
-  **Warning-** Reset the "Clear Lamp Hours Meter" function from the On Screen Display "Setup" menu after replacing the lamp module (refer to page 22).
-  **Warning-** When switching the projector off, please ensure the projector completes its cooling cycle before disconnecting power.
-  **Warning-** Turn on the projector first and then the signal sources.
-  **Warning-** When the lamp reaches the end of its life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under "Changing the Lamp".



FixYourDLP.com
Sponsored by DM

Discount-Merchants.com (800) 231-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMP AND ACCESSORIES

WARNING TO CALIFORNIA RESIDENTS:

Handling the cables supplied with this product, will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling.

Important Information

Do:

- ❖ Turn off the product before cleaning.
- ❖ Use a soft cloth moistened with mild detergent to clean the display housing.
- ❖ Disconnect the power plug from AC outlet if the product is not being used for a long period of time.

Don't:

- ❖ Block the slots and openings on the unit provided for ventilation.
- ❖ Use abrasive cleaners, waxes or solvents to clean the unit.
- ❖ Use under the following conditions:
 - Extremely hot, cold or humid environment.
 - In areas susceptible to excessive dust and dirt.
 - Near any appliance generating a strong magnetic field.
 - Place in direct sunlight.



Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Introduction

Introduction

*This product is an XGA single chip 0.7" DLP™ projector.
Outstanding features include:*

- ◆ True XGA, 1024 x 768 addressable pixels
- ◆ 2.1 lbs (0.95 kgs) compact design
- ◆ Single chip DLP™ technology
- ◆ NTSC/NTSC4.43/PAL/PAL-M/PAL-N/SECAM and HDTV compatible
- ◆ Full function remote control
- ◆ User friendly multilingual on-screen-menu (OSM)
- ◆ Advanced electronic keystone correction and high quality full screen image re-scaling
- ◆ User friendly control panel
- ◆ SXGA compression and VGA, SVGA re-sizing
- ◆ 120 watt user replaceable P-VIP lamp
- ◆ Mac compatible



Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Introduction

What's in the Box?

This projector comes with all the items shown below. Check to make sure your unit is complete. Contact your dealer immediately if anything is missing.



Projector with lens cap



Power Cord



VGA Cable



S-Video Cable



Composite Video Cable



User's Guide on CD-ROM



Carrying Case




Remote Control



Battery



Quick Start Card

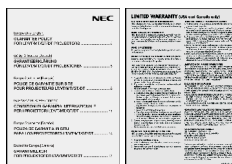

Warranty Document
(For Europe or North America)

Introduction

Product Overview


Main Unit



1. Focus Ring
2. Zoom Ring
3. Adjustable Tilt Foot Button
4. Zoom Lens
5. Remote Control Receiver
6. Terminal Panel
7. AC Inlet
8. Control Panel


Introduction

Control Panel

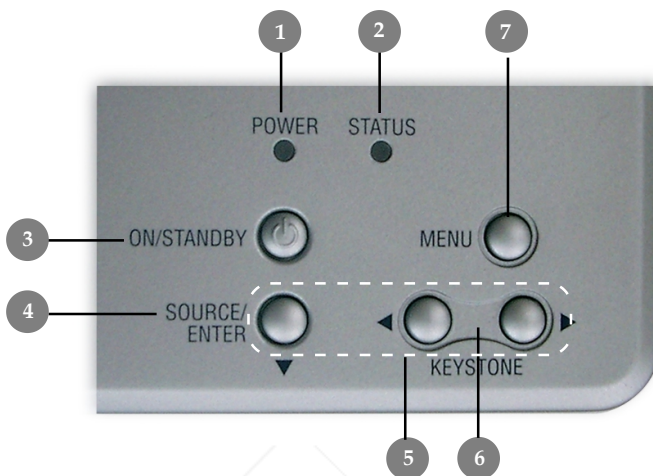

1. Power Indicator
2. Status Indicator
3. On/Standby
4. Source
5. Directional Select and Enter Keys
6. Keystone Correction
7. Menu (On/Off)


Terminal Panel

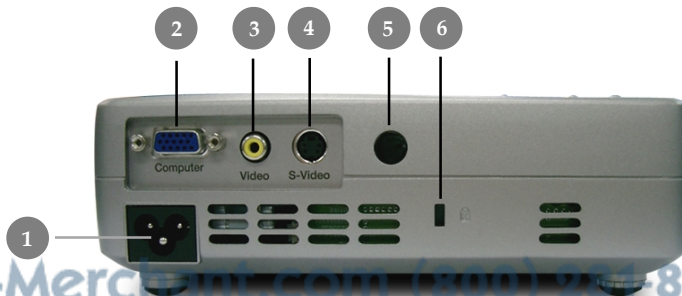

1. AC Inlet
2. PC Analog Signal/HDTV/Component Video Connector
3. Composite Video Input Connector
4. S-Video Input Connector
5. Remote Control Receiver
6. Kensington™ Lock Port

Introduction


Remote Control

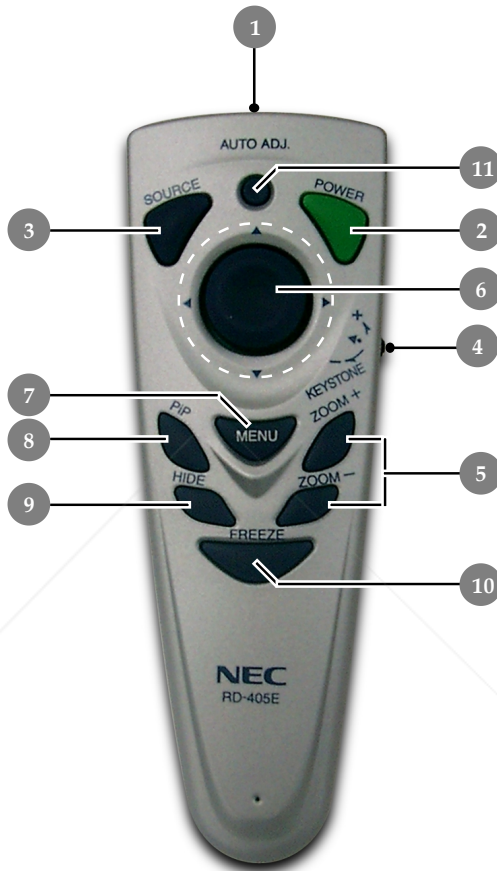

1. Transmit Indicator Light
2. Power
3. Source
4. Keystone Correction
5. Zoom In/Zoom Out
6. Four Directional Select Keys
7. Menu
8. Picture-In-Picture
9. Hide
10. Freeze
11. Auto Adjust

Installation

Connecting the Projector

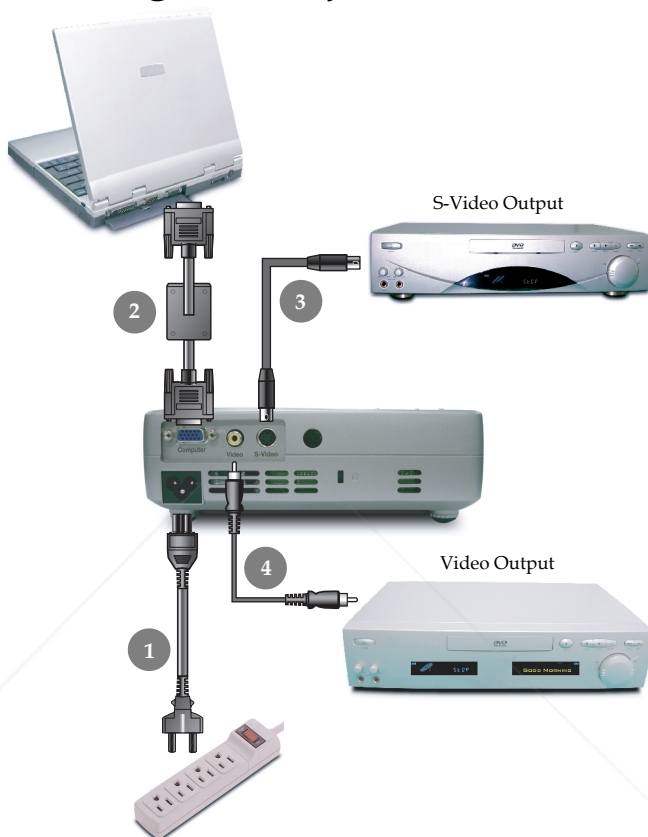

1. Power Cord
2. VGA Cable
3. S-Video Cable
4. Composite Video Cable

 **FixYourDLP.com**
Sponsored by 

Discount-Merchant.com (800) 281-8860

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

❖ To ensure the projector works well with your computer, please set the display mode of your graphics card is less than or equal to 1024 X 768 resolution. Make sure timing of the display mode is compatible with the projector. Refer to the "Compatibility Modes" section on page 30.

Installation

Powering On/Off the Projector

Powering On the Projector

1. Remove the lens cap. ❶
 2. Ensure that the power cord and signal cable are securely connected.
 3. Turn on the lamp by pressing “On/Standby” button on the control panel. ❷
 The startup screen will display for 20 seconds and the Power indicator will flash **green**.
 When the startup screen disappears, the Power indicator will turn **green**.
 4. Turn on your source (computer, notebook, video player , etc.). The projector will detect your source automatically.
- ❖ If the screen displays “No Signal”, please make sure the signal cables are securely connected.
 - ❖ If you connect multiple sources at the same time, use the “Source” button on the remote control or control panel to switch between them.



❖ Turn on the projector first and then the computer.



FixYourDLP.com
Sponsored by DM

Discount-Merchant.com (800) 283-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMP AND ACCESSORIES



Installation

Powering Off the Projector

1. Press the “Power” button to turn off the projector lamp.
2. After pressing the “Power” button, you will see a message “Power off the lamp?” on the on-screen display. Press the “Power” button again to confirm.
Otherwise the message will disappear after 5 seconds.
3. Power indicator flashes **orange** for about 100 seconds. The projector will automatically shut itself down.
If you want to turn on the projector again, you must press the “Power” button after 100 seconds of the flashing indicator.
4. Disconnect the power cord from the electrical outlet and the projector.
5. Do not turn on the projector immediately following a power off procedure.

Status Indicator

- ❖ *When the Status indicator turns **red**, it indicates the projector has overheated. The projector will automatically shut itself down.*
- ❖ *When the Status indicator flashes **red (0.5 second intervals)**, it indicates a problem with the lamp. Turn off the projector and disconnect the power cord from the electrical outlet, then contact your local dealer or our service center.*
- ❖ *When the Status indicator flashes **red (1 second intervals)**, it indicates an internal problem. Stop using the projector and disconnect the power cord from the electrical outlet, then contact your local dealer or our service center.*



Discount-Merch.com (800) 881-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

- ❖ *When the Status indicator flashes **orange**, it indicates high-speed cooling in progress. This is not an abnormal condition, and you can continue using the projector.*

Installation

Adjusting the Projected Image

Adjusting the Projector Height

The projector is equipped with an adjustable tilt foot for adjusting the projector height.

To raise the projector:

1. Press the adjustable tilt foot button ❶.
2. Raise the projector to the desired display angle ❷, then release the button to lock the adjustable tilt foot into position.
3. Use ❸ to fine-tune the display angle.

To lower the projector:

1. Press the adjustable tilt foot button.
2. Lower the projector, then release the button to lock the adjustable tilt foot into position.
3. Use ❸ to fine-tune the display angle.



Discount-Merchant.com (800) 281-8860

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Tilt Adjusted wheel




Adjustable Tilt Foot

Adjustable Tilt Foot Button


Installation

Adjusting the Projector Zoom / Focus

You may adjust zoom ring to zoom in or out. To focus the image, rotate the focus ring until the image is clear. The projector will focus at distances from 3.94 to 32.81 feet (1.20 to 10.0 meters).

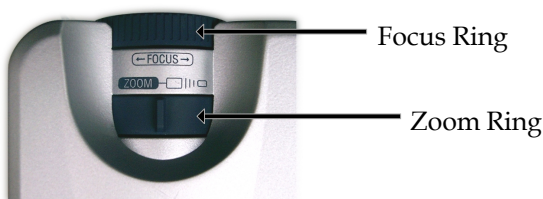

Adjusting Projection Image Size

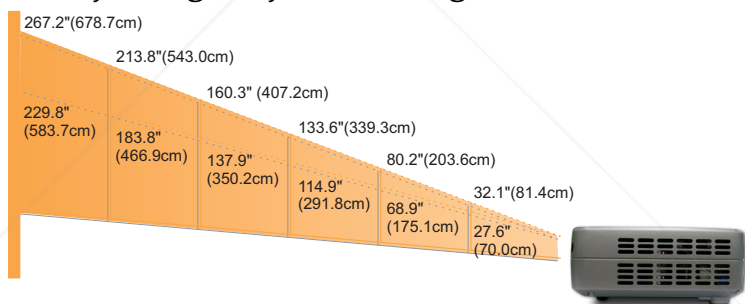

Discount-Merchant.com (800) 281-8860

							3.94' (1.2m)
							9.84' (3.0m)
							16.40' (5.0m)
							19.69' (6.0m)
							26.25' (8.0m)
							32.81' (10.0m)
Screen (Diagonal)	Max.	32.1" (81.4cm)	80.2" (203.6cm)	133.6" (339.3cm)	160.3" (407.2cm)	213.8" (543.0cm)	267.2" (678.7cm)
	Min.	27.6" (70.0cm)	68.9" (175.1cm)	114.9" (291.8cm)	137.9" (350.2cm)	183.8" (466.9cm)	229.8" (583.7cm)
Screen Size	Max.(WxH)	25.68" x 19.26" (65.1cm x 48.8cm)	64.16" x 48.12" (162.9cm x 122.2cm)	106.88" x 80.16" (271.4cm x 203.6cm)	128.24" x 96.18" (325.8cm x 244.3cm)	171.04" x 128.28" (434.4cm x 325.8cm)	213.76" x 160.32" (543.0cm x 407.2cm)
	Min.(WxH)	22.08" x 16.56" (56.0cm x 42.0cm)	55.12" x 41.34" (140.1cm x 105.1cm)	91.92" x 68.94" (233.4cm x 175.1cm)	110.32" x 82.74" (280.2cm x 210.1cm)	147.04" x 110.28" (373.5cm x 280.1cm)	183.84" x 137.88" (467.0cm x 350.2cm)
Distance		3.94' (1.2m)	9.84' (3.0m)	16.40' (5.0m)	19.69' (6.0m)	26.25' (8.0m)	32.81' (10.0m)

❖ This graph is for user's reference only.

User Controls

Control Panel & Remote Control

There are two ways for you to control the functions: Remote Control and Control Panel.

Control Panel



Remote Control



Using the Control Panel

On/Standby

- ▶ Refer to the "Powering On/Off the Projector" section on pages 10-11.

Source

- ▶ Press "Source" to choose RGB, Component-p, Component-i, S-Video, Composite Video and HDTV sources.

Menu

- ▶ Press "Menu" to launch the on screen menu (OSM). To exit OSM, press "Menu" again.

Keystone ◀▶

- ▶ Adjusts image distortion caused by tilting the projector (±16 degrees).

Directional Select

- ▶ Use ▼◀▶ to select items or use ◀▶ to make adjustments for your selection.

Enter

- ▶ Confirm your selection of items.

User Controls

Using the Remote Control

Power

- ▶ Refer to the "Powering On/Off the Projector" section on pages 10-11.

Source

- ▶ Press "Source" to choose RGB, Component-p, Component-i, S-Video, Composite Video and HDTV sources.

AUTO ADJ. (Auto Adjust)

- ▶ When "AUTO ADJ." is pressed, the projector will automatically synchronize with source signal.

PiP

- ▶ Displays the "PiP" menu of the on screen display.

Keystone + / -

- ▶ Adjust image distortion caused by tilting the projector (± 16 degrees).

Hide

- ▶ Press "Hide" to hide the image, press again to resume display of the image.





Zoom In + / Zoom Out -

- ▶ Press "Zoom +" to magnify an image on the projection screen.
- ▶ Press "Zoom -" to reduce the image size.

Freeze

- ▶ Press "Freeze" to pause the screen image.

Four Directional Select Keys

- ▶ Use     to select items or make adjustments to your selection.

Menu

- ▶ Press "Menu" to launch the on screen menu (OSM). To exit OSM, press "Menu" again.


User Controls

On Screen Menus

The Projector has multilingual On Screen menus that are multilingual allowing you to make image adjustments and change a variety of settings. The projector will automatically detect the source.

How to operate

1. To open the OSM menu, press “Menu” on the Remote Control or Control Panel.
2. When OSM is displayed, use ◀ ▶ keys to select the main menu. While making a selection on a particular page, press “Enter / ▼” key to enter sub menu.
3. Use ▲ ▼ keys to select the desired item and adjust the settings by ◀ ▶ key.
4. Select the next item to be adjusted in the sub menu and adjust as described above.
5. Press “Menu” to confirm, and the screen will return to the main menu.
6. To exit, press “Menu” again. The OSM menu will close and the projector will automatically save the new settings.

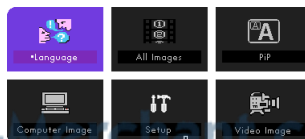

Main Menu



Sub Menu

Setting

User Controls

Computer / Video Mode



Language


Language

You can display the multilingual OSM menu . Use the ▲ or ▼ key to select your preferred language.

Press “Menu” to finalize the selection.

User Controls

Computer / Video Mode

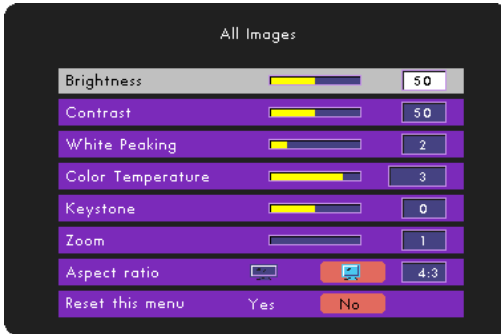

All Images

Brightness

Adjusting the brightness of the image.

- ▶ Press the ◀ to darken image.
- ▶ Press the ▶ to lighten the image.

Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.

- ▶ Press the ◀ to decrease the contrast.
- ▶ Press the ▶ to increase the contrast.

White Peaking

White peaking can be incrementally adjusted between 0 and 10. Click on the slider bar to adjust.

- ▶ Setting 10 will maximize brightness and contrast.
- ▶ Setting 0 will maximize color reproduction quality.

Color Temperature

Adjust the color temperature. At higher temperature, the screen looks colder; at lower temperature, the screen looks warmer.

Keystone


Adjusts image distortion caused by tilting projection (±16 degrees).

Zoom

- ▶ Press the ◀ to reduce the size of an image.
- ▶ Press the ▶ to magnify an image on the projection screen.

User Controls

Computer / Video Mode

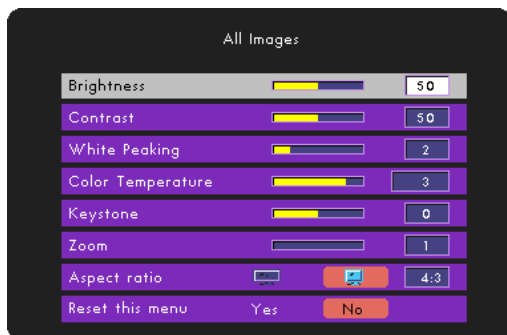

All Images

Aspect Ratio


Selects the desired aspect ratio.

Reset This Menu

Choose “Yes” to return the display parameters on this menu to their factory default settings.

User Controls

Computer Mode

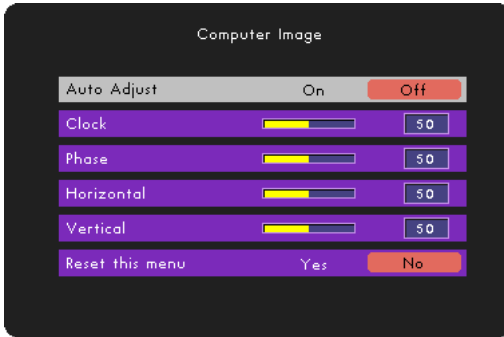

Computer Image

Auto Adjust

The projector automatically adjusts clock, phase, horizontal and vertical. With most signal sources, Auto Adjust provides the best results.

Clock

"Clock" changes the display data frequency to match the frequency of your computer's graphic card. If you experience a vertical flickering bar, use this function to make an adjustment.

Phase

"Phase" synchronizes the signal timing of the display with the graphic card. If you experience an unstable or flickering image, use this function to correct it.

Horizontal

- ▶ Press the ◀ to move the image left.
- ▶ Press the ▶ to move the image right.

Vertical


- ▶ Press the ◀ to move the image down.
- ▶ Press the ▶ to move the image up.

Reset This Menu

Choose "Yes" to return the display parameters on this menu to their factory default settings.

User Controls

Video Mode

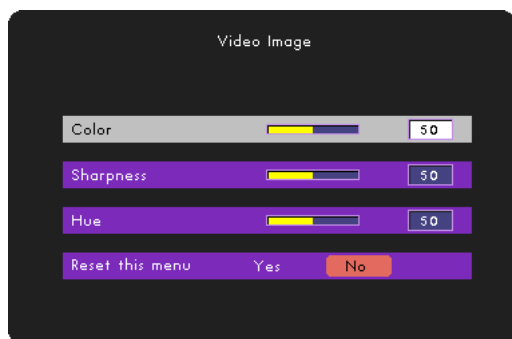

Video Image

Color

Adjusts a video image from black and white to fully saturated color.

- ▶ Press the ◀ to decrease the amount of color in the image.
- ▶ Press the ▶ to increase the amount of color in the image.

Sharpness

Adjusts the sharpness of the image.

- ▶ Press the ◀ to decrease the sharpness.
- ▶ Press the ▶ to increase the sharpness.

Hue

Adjusts the color balance of red and green.


- ▶ Press the ◀ to increase the amount of green in the image.
- ▶ Press the ▶ to increase the amount of red in the image.

Reset This Menu

Choose "Yes" to return the display parameters on this menu to their factory default settings.

User Controls

Computer / Video Mode

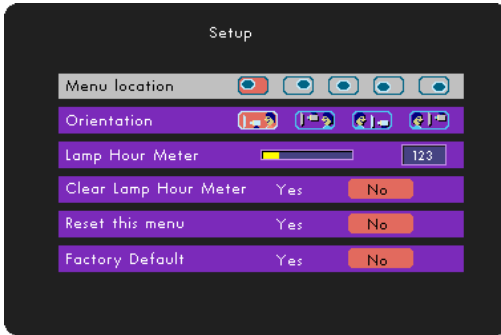

Setup

Menu Location

Choose the Menu location on the display screen.

Orientation

▶ Front-Desktop

The factory default setting.

▶ Rear-Desktop

When you select this function, the projector reverses the image so you can project behind a translucent screen.

▶ Front-Ceiling

When you select this function, the projector turns the image upside down for ceiling-mounted projection.

▶ Rear-Ceiling

When you select this function, the projector reverses and turns the image upside down at same time. You can project from behind a translucent screen with ceiling mounted projection.

Lamp Hour Meter

Displays the lamp's elapsed operating time (in hours).

Clear Lamp Hours Meter


Turns the lamp hour counter to 0 hours.

Reset This Menu

Choose "Yes" to return the display parameters on this menu to their factory default settings.

User Controls

Computer / Video Mode

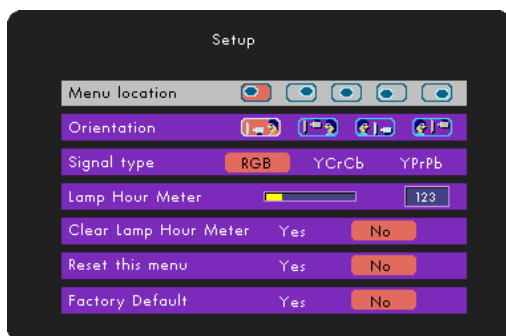


Setup

Factory Default

Choose “Yes” to return the display parameters (except for Lamp Hours) on all menus to their factory default settings.

User Controls

Computer Mode

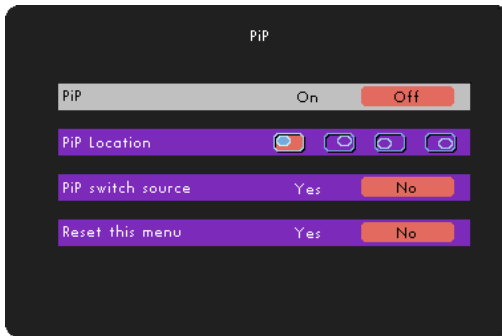

PIP Picture-In-Picture

PIP

Choose “On” to turn the PIP screen on.

PIP Location

Choose the PIP screen position on the display screen.

PIP Switch Source

Choose the input source of the projector on the PIP screen.

Reset This Menu

Choose “Yes” to return the display parameters on this menu to their factory default settings.



❖ The OSM does not include a PIP menu under Video mode.

Appendices

Troubleshooting

If you experience trouble with the projector, refer to the following information. If the problem persists, please contact your local reseller or service center.

Problem: No image appears on screen.

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
- ▶ Ensure the pins of connectors are not crooked or broken.
- ▶ Check if the projection lamp has been securely installed. Please refer to the “Changing the lamp” section.
- ▶ Make sure you have removed the lens cap and the projector is switched on.

Problem: Partial, scrolling or incorrectly displayed image.

- ▶ Press the “Auto Adjust” function in the “Computer Image” menu of the OSM.
- ▶ If you use a PC:

If the resolution of your computer is higher than 1024 x 768. Follow the steps outlined below to reset the resolution.

For Windows 3.x:

1. In the Windows Program Manager, click the “Windows Setup” icon in the Main group.
2. Verify that your display resolution setting is less than or equal to 1024 x 768.

For Windows 95,98,2000,XP:

1. Open “My Computer” icon, the “Control Panel” folder, and then double click the “Display” icon.
2. Select the “Setting” tab.
3. In the “Desktop Area” you will find the resolution setting. Verify that the resolution setting is less than or equal to 1024 x 768 resolution.

If the projector is still not projecting the whole image, you will also need to change the monitor display you are using. Refer to the following steps.

Appendices

4. Follow above steps 1-2. Click on the “Advanced Properties” button.
 5. Select the “Change” button under the “Monitor” tab .
 6. Click on “Show all devices” . Then select “Standard monitor types” under the “Manufactures” box ; choose the resolution mode you need under the “Models” box.
 7. Verify that the resolution setting of the monitor display is less than or equal to 1024 x 768.
- ▶ If you are using a Notebook PC:
 1. You are required to implement above steps of resolution setting of computer first.
 2. Switch the Notebook PC display to the “external display only” or “CRT only” mode.
 - ▶ If you experience difficulty in changing resolutions or your monitor freezes, restart all the equipment and the projector.

Problem: The screen of the Notebook or PowerBook computer is not displaying your presentation.

- ▶ If you are using Notebook PC:
Some Notebook PCs may deactivate their screens when a second display device is in use. Refer to your computer’s documentation for information on how to reactivate the monitor display.
- ▶ If you are using an Apple PowerBook:
In Control Panels, open the PowerBook Display to select Video Mirroring “On”.

Problem: Image is unstable or flickering

- ▶ Use “Phase” to correct it. Refer to page 20.
- ▶ Change the monitor color setting from your computer.

Problem: Image has vertical flickering bar

- ▶ Use “Clock” to make an adjustment. Refer to page 22.
- ▶ Check and reconfigure the display mode of your graphic card to make it compatible with the product. Refer to page 25.

Appendices

Problem: Image is out of focus

- ▶ Adjusts the Focus Ring on the projector lens. Refer to page 13.
- ▶ Make sure the projection screen is between the required distance 3.94 to 32.81 feet (1.20 to 10.00 meters) from the projector.

Problem: The image is outstretched when displaying 16:9 DVD.

The projector automatically detects 16:9 DVD and adjusts the aspect ratio by digitizing to full screen with 4:3 default setting.

If the image is still outstretched, you will also need to adjust the aspect ratio by referring to the following: (See page 18)

- ▶ Please select 4:3 aspect ratio type on your DVD player if you are playing a 16:9 DVD.
- ▶ If you can't select 4:3 aspect ratio type on your DVD player, please refer to page 18 to choose 4:3 aspect ratio in the on screen menu.

Problem: Image is reversed.

- ▶ To select "Setup" from the OSM and adjust the orientation. See page 23.

Problem: Lamp burns out or makes a popping sound

- ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the "Changing the Lamp". See page 28.



Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Appendices


Changing the lamp

The projector will detect the lamp life itself. It will show you a warning message "The Lamp has been in use for over 2000 hours. You should purchase a spare bulb." When you see this message, please change the lamp as soon as possible. Refer to the following instructions to replace the lamp.



Warning: Lamp compartment is hot! Allow it to cool down before changing lamp!

Make sure the projector has been cooled down for at least 60 minutes before changing the lamp.

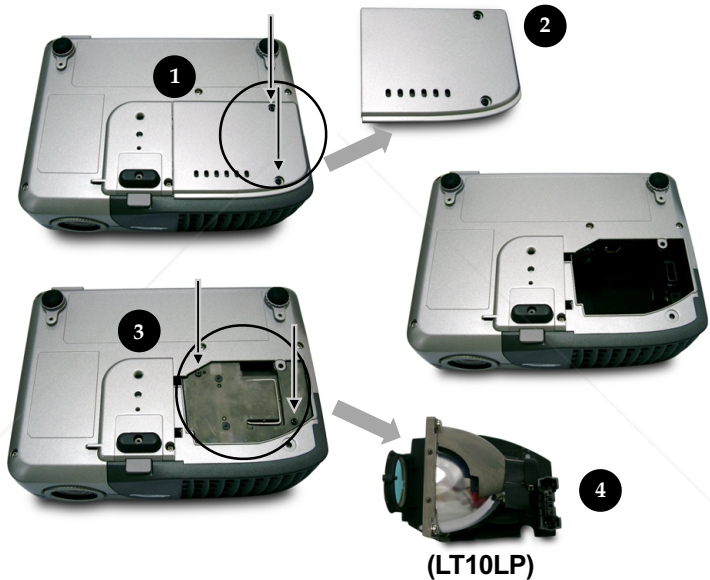

Warning: To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if it is dropped.

Lamp Changing Procedure:

1. Turn off the power to the projector by pressing the Power button.
2. Allow the projector to cool down at least 60 minutes.
3. Disconnect the power cord.
4. Use a screwdriver to remove 2 screws from the cover. ①
5. Remove the cover. ②
6. Remove the 2 screws from the lamp module. ③
7. Pull out the lamp module. ④

To replace the lamp module, reverse the previous steps.

Appendices

Specifications

Light Valve	- Single Chip DLP™ Technology by Texas Instruments
Lamp	- 120W User Replaceable P-VIP Lamp
Number of Pixels	- 1024 pixels(H) X 768 lines(V)
Displayable Color	- 16.7M colors
Projection Lens	- F/2.8~3.1 f=25.8~30.0mm with 1.16x Manual zoom lens
Projection Screen Size (Diag.)	- 27.6 to 267.2 inches (0.70 to 6.79 meters) Diagonal
Projection Distance	- 3.94 to 32.81 feet (1.20 to 10.00 meters)
Video Compatibility	- NTSC/NTSC 4.43/PAL/PAL-M/PAL-N/SECAM and HDTV compatible
	- Composite video & S-Video capability
H. Frequency	- 15kHz~100kHz horizontal scan
V. Frequency	- 43Hz~120Hz vertical refresh
Power Supply	- Universal AC input 100~240V ; Input Frequency 50-60Hz
Power Consumption	- 170W
Input Current	- 2A (100-240V AC)
I/O Connectors	- Power: AC power input socket
	- Computer Input: One VGA for analog/component and HDTV signal
	- Video Input: One Composite video RCA input One S-Video input
Weight	- 2.1 lbs (0.95 kgs)
Dimensions (W x H x D)	- 7.8 x 2.2 x 5.8 inches (198 x 57 x 148 mm)
Environmental	- Operating Temperature: 41~95°F (5~ 35°C) Humidity: 80% maximum
	- Storage Temperature: -4~140°F (-20~60°C) Humidity: 80% maximum
Safety Regulation	- FCC Class B, CE Class B, UL, cUL, TÜV-GS



DiscountMerchant.com (800) 281-8860
 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Appendices

Compatibility Modes

Mode	Resolution	(ANALOG)	
		V.Frequency (Hz)	H.Frequency (kHz)
VESA VGA	640 X 350	70	31.5
VESA VGA	640 X 350	85	37.9
VESA VGA	640 X 400	85	37.9
VESA VGA	640 X 480	60	31.5
VESA VGA	640 X 480	72	37.9
VESA VGA	640 X 480	75	37.5
VESA VGA	640 X 480	85	43.3
VESA VGA	720 X 400	70	31.5
VESA VGA	720 X 400	85	37.9
SVGA	800 X 600	56	35.2
SVGA	800 X 600	60	37.9
SVGA	800 X 600	72	48.1
SVGA	800 X 600	75	46.9
SVGA	800 X 600	85	53.7
VESA XGA	1024 X 768	43.4	35.5
VESA XGA	1024 X 768	60	48.4
VESA XGA	1024 X 768	70	56.5
VESA XGA	1024 X 768	75	60.0
VESA XGA	1024 X 768	85	68.7
* VESA SXGA	1152 X 864	70	63.8
* VESA SXGA	1152 X 864	75	67.5
* VESA SXGA	1152 X 864	85	77.1
* VESA SXGA	1280 X 960	60	60
* VESA SXGA	1280 X 960	75	75
* VESA SXGA	1280 X 1024	43	46.4
* VESA SXGA	1280 X 1024	60	63.98
* VESA SXGA	1280 X 1024	75	79.98
MAC 16"	832 X 624	74.55	49.725
MAC 19"	1024 X 768	75	60.24
* MAC	1152 X 870	75.06	68.68
MAC G4	640 X 480	60	31.35
MAC G4	640 X 480	120	63.03
MAC G4	1024 X 768	120	87.08
I MAC DV	640 X 480	117	60
I MAC DV	800 X 600	95	60
I MAC DV	1024 X 768	75	60
* I MAC DV	1152 X 870	75	68.49
* I MAC DV	1280 X 960	75	75



Remark : “*”
compression computer
image.

TravelCare Guide

TravelCare - a service for international travelers

This product is eligible for "TravelCare", NEC's unique international warranty.

Please note that TravelCare coverage differs in part from coverage under the warranty included with the product.

Services offered with TravelCare

This warranty allows customers to receive service on their product at the NEC and NEC-designated service stations in the countries listed herein when temporarily traveling internationally for business or pleasure.

For details on services offered by the different service stations, please refer to the "List of TravelCare Outlets" below.

1 Repair services

The product will be repaired and delivered within 10 business days, not including shipping time.

During the term of warranty, the cost of maintenance parts, labor costs for repairs and shipping costs within the service station's coverage area are covered by the warranty.

2 Replacement product rental service

If the customer desires, he or she can rent a replacement product while the original product is being repaired.

Fee: US\$200 for 12 days

This fee must be paid at the local service station in cash or credit card.

The \$200 rental fee is non-refundable even if the customer rents it less than 12 days before returning.

The replacement product will be delivered within 3 business days.

If the customer did not return the replacement product within 12 days, the customer will be charged the price of the unit.

If the customer returned the replacement product in a faulty or damaged condition, the repair cost will be charged to the customer.

Note that this service is not offered in all countries and regions. Please refer to the "List of TravelCare Outlets".

In addition, this replacement product rental service is not offered after the product's warranty has expired.

Term of warranty

1

- a. Upon presentation of the warranty or receipt received upon purchase:

Valid for the term indicated on the warranty or the normal term of warranty for the country of purchase.

- b. When only the product is brought in:

Valid for a period of within 14 months of the date of manufacture indicated by the serial number attached to the product.

- 2 When a product whose term of warranty is expired is brought in:

Repairs will be offered for a fee. In this case the customer is not eligible for the replacement product rental service.

- 3 In the following cases, repairs may be charged, even if the product's warranty is still in effect:

- 1) If the term of warranty, model name, serial number and name of the store of purchase are not indicated on the warranty or have been altered.

- 2) Problems or damage caused by dropping or shocks during shipment or movement by the customer or by improper handling by the customers.

- 3) Problems or damage caused by improper usage or unwarrantable alterations or repairs by the customer.

- 4) Problems or damage caused by fire, salt damage, gas damage, earthquakes, lightning damage, storm or flood damage or other natural disasters or such external factors as dust, cigarette smoke, abnormal voltage, etc.

- 5) Problems or damage caused by use in hot or humid places, in vehicles, boats or ships, etc.
- 6) Problems or damage caused by expendable supplies or devices connected to the product other than those designated by NEC.
- 7) Problems caused by natural consumption, wear or deterioration of parts under normal usage conditions.
- 8) Problems or damage to lamps and other expendable supplies, included parts or optional parts.
- 9) Other conditions stipulated in the warranty included with the product also apply.

NOTE: The product can be used overseas with voltages of 100 to 120V and 200 to 240V by using a power cable suited for the standards and power source voltage of the country in which the product is being used.

List of TravelCare Outlets

This list applies as of June 1, 2002.

For the most up-to-date information, please refer to the websites of the service stations in the various countries on the List of TravelCare Outlets or to the NEC website at <http://www.nec-pj.com>.

In Europe

NEC Europe, Ltd. / European Technical Centre

Address: Unit G, Stafford Park 12, Telford TF3 3BJ, U.K.
Telephone: +44 1952 237000
Fax Line: +44 1952 237006
Email Address: AFR@uk.necur.com
WEB Address: <http://www.necur.com>

(Regions Covered)

EU: Austria*, Belgium*, Denmark*, Finland*, France*, Germany*, Greece*, Ireland*, Italy*, Luxembourg*, The Netherlands*, Portugal*, Spain*, Sweden* and the United Kingdom*

EEA: Norway*, Iceland and Liechtenstein

In North America

NEC Solutions (America), Inc.

Address: 1250 Arlington Heights Road, Itasca, Illinois 60143, U.S.A.
Telephone: +1 800 836 0655
Fax Line: +1 800 356 2415
Email Address: vsd-tech-support@necsam.com
WEB Address: <http://www.necvisualsystems.com>

(Regions Covered)

U.S.A. *, Canada*

In Oceania

NEC Australia Pty., Ltd.

Address: New South Wales;
184 Milperra Road, Reversby 2212
Victoria;
480 Princess Hwy Noble Park 3174
South Australia;
84A Richmond Road, Keswick 5035
Queensland;
116 Ipswich Road, Woollongabba 4102
Western Australia;
45 Sarich Court Osborne Park 6017
Telephone: 131 632 (from domestic)
+61 8 8375 5706 (from overseas)
Fax Line: +61 8 8375 5757
Email Address: lee.gramola@nec.com.au
WEB Address: <http://www.nec.com.au>

(Regions Covered)

Australia*, New Zealand

In Asia and Middle East

NEC Viewtechnology, Ltd.

Address: 686-1, Nishioi, Oi-Machi, Ashigarakami-Gun,
Kanagawa 258-0017, Japan
Telephone: +81 465 85 2369
Fax Line: +81 465 85 2393
Email Address: support_pjweb@nevt.nec.co.jp
WEB Address: http://www.nec-pj.com

(Regions Covered)
Japan*

NEC Hong Kong Ltd.

Address: 11th Floor, Tower B, New Mandarin Plaza, 14
Science Museum Road,
Tsim Sha Tsui East, Kowloon, Hong Kong
Telephone: +852 2369 0335
Fax Line: +852 2795 6618
Email Address: esmond_au@nechk.nec.com.hk
WEB Address: http://www.nec.com.hk

(Regions Covered)
Hong Kong

NEC Taiwan Ltd.

Address: 7F, No.167, SEC.2, Nan King East Road, Taipei,
Taiwan, R.O.C.
Telephone: +886 2 8500 1734
Fax Line: +886 2 8500 1420
Email Address: nickliao@nec.com.tw
WEB Address: http://www.nec.com.tw

(Regions Covered)
Taiwan

NEC Solutions Asia Pacific Pte. Ltd

Address: 401 Commonwealth Drive, #07-02, Haw Par
Technocentre, Singapore 149598
Telephone: +65 6 273 8333
Fax Line: +65 6 274 2226
Email Address: tehgh@rsc.ap.nec.com.sg
WEB Address: http://www.nec.com.sg/ap

(Regions Covered)
Singapore

Nautilus Hyosung Inc.

Address: 7th Floor, Cheongdam Building, 52,
Cheongdam-Dong,
Kangnam-Ku, Seoul, Korea 135-100
Telephone: +82 2 510 0234
Fax Line: +82 2 540 3584
Email Address: hds-ykc@hyosung.com

(Regions Covered)
South Korea

Lenso Communication Co., Ltd.

Address: 292 Lenso House 4, 1st Floor, Srinakarin Road,
Huamark, Bangkok, Bangkok 10240, Thailand
Telephone: +66 2 375 2425
Fax Line: +66 2 375 2434
Email Address: pattara@lenso.com
WEB Address: http://www.lenso.com

(Regions Covered)
Thailand

ABBA Electronics L.L.C.

Address: Tariq Bin Ziyad Road, P.O.Box 327, Dubai,
United Arab Emirates
Telephone: +971 4 371800
Fax Line: +971 4 364283
Email Address: ABBA@emirates.net.ae

(Regions Covered)
United Arab Emirates

Samir Photographic Supplies

Address: P.O.Box 599, Jeddah 21421, Saudi Arabia
Telephone: +966 2 6828219
Fax Line: +966 2 6830820
Email Address: vartkes@samir-photo.com

(Regions Covered)
Saudi Arabia

NOTE: In countries designated with an asterisk(*), replacement product rental service are offered.

Date: / / ,

P-1/ ,

TO: NEC or NEC's Authorized Service Station:

FM:

(Company & Name with signature)

Dear Sir (s),

I would like to apply your TravelCare Service Program based on attached registration and qualification sheet and agree with your following conditions, and also the Service fee will be charged to my credit card account, if I don't return the Loan units within the specified period. I also confirm following information is correct. Regards.

Application Sheet for TravelCare Service Program

Country, product purchased :	
User's Company Name :	
User's Company Address : Phone No., Fax No. :	
User's Name :	
User's Address :	
Phone No., Fax No. :	
Local Contact office :	
Local Contact office Address :	
Phone No., Fax No. :	
User's Model Name :	
Date of Purchase :	
Serial No. on cabinet :	
Problem of units per User :	
Required Service :	(1) Repair and Return (2) Loan unit
Requested period of Loan unit :	
Payment method :	(1) Credit Card (2) Travelers Cheque (3) Cash
In Case of Credit Card : Card No. w/Valid Date :	

Condition of your TravelCare Service Program

Enduser is requested to understand following conditions of TravelCare Service Program and complete the necessary information on the application sheet.

1. Service Options:

There are 3 types of "Service" available. Enduser has to understand following condition and is required to fill in the Application Sheet.

1) Repair and Return:

The 'Faulty unit' is sent or collected from the customer. It is repaired and returned within 10 days to the customer, excluding transport time.

There may have a case, repair and return can't be done by NEC Authorized Service Station, because of shortage of spare parts due to same model is not sold in the territory.

2) Repair and Return with Loan: (This service is limited to some Service Stations)

This service is offered to the Enduser, who cannot wait until their unit is repaired.

The customer can borrow a unit for \$200 up to 12 days. Customer then sends in inoperable unit to nearest NEC Authorized Service Station for service. In order to prevent collection problem, Enduser is required to fill in Application Sheet.

Enduser needs to confirm the availability of the Service to NEC Authorized Service Stations.

3) Loan Only:

For this service, NEC Authorized Service Station supplies the customer with a loan unit for US\$200 up to 12 days. Customer keeps the inoperable unit and when customer returns home, customer arranges to have the projector serviced in the home country.

2. Warranty Exclusions:

This program does not apply if the Projector's serial number has been defaced, modified or removed.

If, in the judgement of NEC Authorized Service Station or its agent the defects or failures result from any cause other than fair wear and tear or NEC neglect, or fault including the following without limitation:

- 1) Accidents, transportation, neglect, misuse, abuse, water, dust, smoke or default of or by the Customer its employees or agents or any third party;
- 2) Failure or fluctuation of electrical power, electrical circuitry, air conditioning, humidity control or other environmental conditions such as use it in smoking area;
- 3) Any fault in the attachments or associated products or components (whether or not supplied by NEC or its agents which do not form part of the Product covered by this warranty);
- 4) Any act of God, fire, flood, war, act of violence or any similar occurrence;
- 5) Any attempt by any person other than any person authorized by NEC to adjust, modify, repair, install or service the product.
- 6) Any Cross-border charges such as, duty, insurance, tax etc.

Charges for Warranty Exclusions and Out of Warranty Case:

If faulty unit is under warranty exclusions case or under Out of warranty period, NEC Authorized Service Station will Inform estimation of actual service cost to the Enduser with reason.

4. Dead on Arrival (DOA):

Enduser must take this issue up with their original supplier in the country of purchase.

NEC Authorized Service Station will repair the DOA unit as a Warranty repair, but will not exchange DOA unit with new units.

5. Loan Service Charges and Conditions:

Upon acceptance of this NEC Projector, Customer agrees to assume liability for this loan unit.

The current cost of use of this loan unit is \$200.00 USD for 12 calendar days.

If Customer does not return the unit within the 12 calendar days, Customer will be charged the next highest cost up to and including the full list price to Credit Cards, which price will be informed by NEC Authorized Service Stations. Please see the attached listing of contacts for each country to arrange for pickup of the loan unit.

If you return to their country of origin with the loan unit, you will be charged additional freight to return the unit to the loaning country.

Thank you for your understanding of this program.



Disclaimer

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (<http://www.fixyourdlp.com>) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: <http://www.fixyourdlp.com>

Video Guides: <http://www.fixyourdlp.com/guides>

User Forums: <http://www.fixyourdlp.com/forum>

FixYourDLP's Fight Against Counterfeit Lamps:

<http://www.fixyourdlp.com/counterfeits>

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps:

<http://www.recycleyourlamp.org>

Lamp Research - The trusted 3rd party lamp research company:

<http://www.lampresearch.com>

Discount-Merchant.com – The worlds largest lamp distributor:

<http://www.discount-merchant.com>



FixYourDLP.com

Sponsored by 