

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com



Dell™ 1510X Projector User's Guide



Notes, Notices, and Cautions



NOTE: A NOTE indicates important information that helps you make better use of your projector.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



/!\ CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice. © 2010 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell and the DELL logo are trademarks of Dell Inc.; DLP and DLP logo are trademarks of TEXAS INSTRUMENTS INCORPORATED; Microsoft and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model 1510X

March 2010 Rev. A01



Contents

1	Your Dell Projector	6
	About Your Projector	7
2	Connecting Your Projector	9
	Connecting to a Computer	10
	Connecting a Computer Using a VGA Cable Monitor Loop-Through Connection Using	10
	VGA Cables	11
	Connecting a Computer Using an RS232 cable	12
	Connecting a DVD Player	13
	Connecting a DVD Player Using an S-video Cable .	13
	Connecting a DVD Player Using a Composite Video Cable	14
	Connecting a DVD Player Using a Component Video Cable	15
	Connecting a DVD Player Using an HDMI Cable $\ . \ .$	16
	Connecting to Local Area Network	17
	To control the projector that is connected to a network through an RJ45 cable.	17
FixYourDLP.com	Connection With Commercial RS232 Control Box .	18
scount	Using Yohr Projector (800) 281	19886
THE TRUSTED	SOURCE FOR PROJECTOR LAMPS AND ACCESS	DRIES

0

	Turning Your Projector Off	19
	Adjusting the Projected Image	20
	Raising the Projector Height	20
	Lowering the Projector Height	20
	Adjusting the Projector Zoom and Focus	21
	Adjusting Projection Image Size	22
	Using the Control Panel	23
	Using the Remote Control	26
	Installing the Remote Control Batteries	29
	Operating Range With Remote Control	30
	Using the On-Screen Display	31
	Main Menu	31
	AUTO-ADJUST	31
	INPUT SELECT	32
	PICTURE (in PC Mode)	33
	PICTURE (in Video Mode)	34
	DISPLAY (in PC Mode)	35
	DISPLAY (in Video Mode)	37
	LAMP	38
	SET UP	38
	INFORMATION	41
_	OTHERS	41
FixYourDLP.com	Managing the Projector From Web Management	48
Discount	Configuring the Network Setting	481-8860
	SOU Accessing Web Management AMPS. AND ACC	
INE IRVSIED	Managing Properties	49
		10

4	Troubleshooting Your Projector 61
	Guiding Signals
	Changing the Lamp
5	Specifications 69
6	Contacting Dell74
7	Appendix: Glossary



1

Your Dell Projector


Your projector comes with all the items shown below. Ensure that you have all the items, and contact Dell[™] if anything is missing.



About Your Projector

Top View

Bottom View

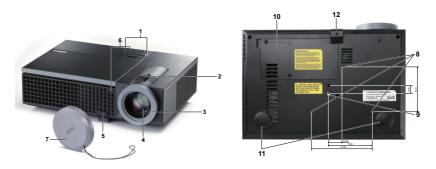

1	Control panel
2	Zoom tab
3	Focus ring
4	Lens
5	Elevator button for height adjustments
6	IR receivers
7	Lens cap
8	Mounting holes for ceiling mount: Screw hole M3 x 6.5mm depth. Recommended torque <8 kgf-cm
9	Mounting hole for tripod: Insert nut 1/4"*20 UNC
10	Lamp cover
11	Tilt adjustment wheel
12	Elevator foot

FixYou CAUTION: Safety Instructions


Do not use the projector near appliances that generate a lot of heat. 81-8860

- **2** Do not use the projector in areas where there is an excessive amount of dust. The dust may cause the system to fail and the projector will automatically shutdown.
 - 3 Ensure that the projector is mounted in a well-ventilated area.
 - 4 Do not block the ventilation slots and openings on the projector.
 - **5** Ensure the projector operates between ambient temperatures (5°C to 35°C).

- **6** Do not try to touch the ventilation outlet as it can become very hot after the projector has been turned on or immediately after it is turned off.
- **7** Do not look into the lens while the projector is on as it may cause injury to your eyes.
- **8** Do not place any objects near or in front of the projector or cover its lens while the projector is on as the heat may cause the object to melt or burn.
- **U**NOTE:
 - Do not attempt to ceiling mount the projector yourself. It should be installed by a qualified technician.
 - Recommended Projector Ceiling Mount Kit (P/N: C3505). For more information, see the Dell Support website at **support.dell.com**.
 - For more information, see the *Safety Information* that is shipped with your projector.



Connecting Your Projector

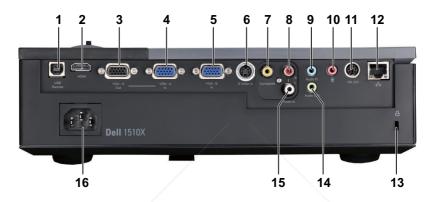


	1	USB remote connector	9	Audio-A input connector
	2	HDMI connector	10	Microphone connector
	3	VGA-A output (monitor loop-through)	11	RS232 connector
	4	VGA-A input (D-sub) connector	12	RJ45 connector
	5	VGA-B input (D-sub) connector	13	Security cable slot
	6	S-video connector	14	Audio output connector
	7	Composite video connector	15	Audio-B left-channel input connector
Ye	Sport	Andro-B right-channel input connector	16	Power cord connector
C	OL	int-merchant.c	.01	1 (800) 281-8800

CAUTION: Before you begin any of the procedures in this section, follow the Safety Instructions as described on page 7.

Fix

Connecting to a Computer

Connecting a Computer Using a VGA Cable

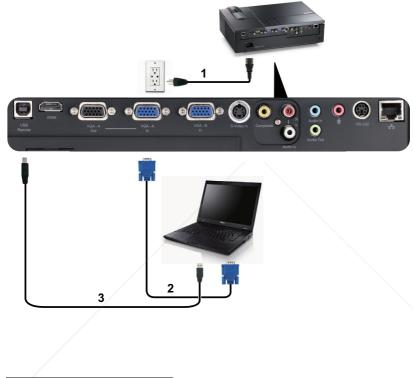


	1	Power cord
2	2	VGA to VGA cable
)	RixYoι	HSB-AdmUSB-B cable

NOTE: The USB cable is not provided with your projector. 00) 281-8860

NOTE: The USB cable must be connected if you want to use the Page Up and **RIES** Page Down features on the remote control.

Monitor Loop-Through Connection Using VGA Cables

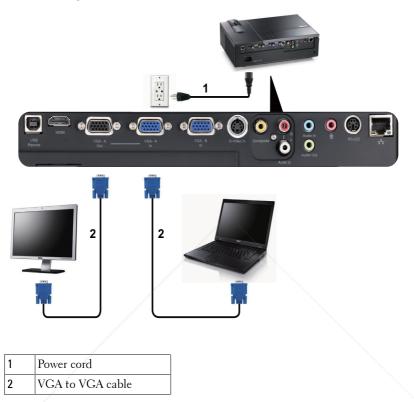

NOTE: Only one VGA cable is shipped with your projector. An additional VGA cable can be purchased on the Dell website at **dell.com**.



Connecting a Computer Using an RS232 cable



1	Power cord
2	RS232 cable

NOTE: The RS232 cable is not shipped with your projector. Consult a professional installer for the cable and RS232 remote control software.




Connecting a DVD Player

Connecting a DVD Player Using an S-video Cable



THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES


Connecting a DVD Player Using a Composite Video Cable

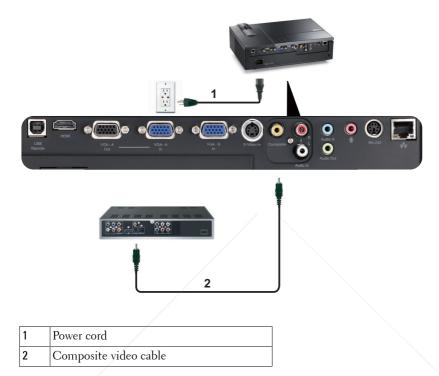

NOTE: The Composite Video cable is not shipped with your projector. You can purchase the Composite Video Extension (50 ft/100 ft) cable on the Dell website at **dell.com**.



Connecting a DVD Player Using a Component Video Cable

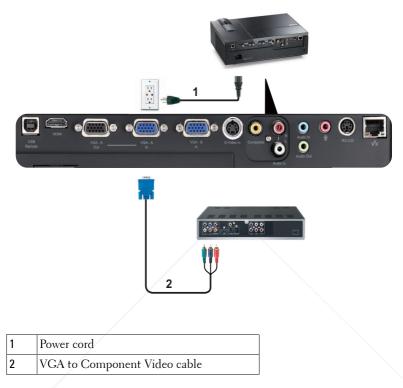

NOTE: The VGA to Component Video cable is not shipped with your projector. You can purchase the VGA to Component Video Extension (50 ft/100 ft) cable on the Dell website at **dell.com**.



Connecting a DVD Player Using an HDMI Cable






2

NOTE: The HDMI cable is not shipped with your projector.



Connecting to Local Area Network

To control the projector that is connected to a network through an RJ45 cable.

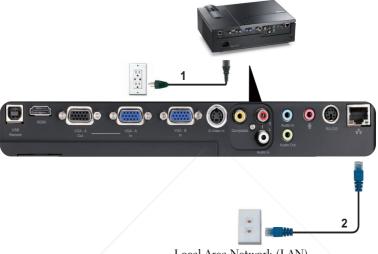


Local Area Network	(LAN)
--------------------	-------

1	Power cord
2	RJ45 cable

NOTE: The RJ45 cable is not shipped with your projector. FIXYOUTLP.com Spowered by MA Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Connection With Commercial RS232 Control Box

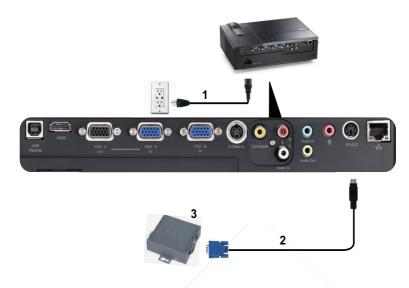

1	Power cord
2	RS232 cable
3	Commercial RS232 control box

NOTE: The RS232 cable is not shipped with your projector. Consult a professional technician to obtain the cable.



Using Your Projector

Turning Your Projector On

- **NOTE:** Turn on the projector before you turn on the source (computer, DVD player, etc.). The **Power** button light blinks blue until pressed.
- 1 Remove the lens cap.
- **2** Connect the power cord and appropriate signal cables. For information about connecting the projector, see "Connecting Your Projector" on page 9.
- **3** Press the **Power** button (see "Using the Control Panel" on page 23 to locate the **Power** button).
- 4 Turn on your source (computer, DVD player, etc.)
- **5** Connect your source to the projector using the appropriate cable. See "Connecting Your Projector" on page 9 for instructions to connect your source to the projector.
- **6** By default, the input source of projector is set to VGA-A. Change the input source of projector if necessary.
- **7** If you have multiple sources connected to the projector, press the **Source** button on the remote control or control panel to select the desired source. See "Using the Control Panel" on page 23 and "Using the Remote Control" on page 26 to locate the **Source** button.

Turning Your Projector Off

NOTICE: Unplug the projector after properly shutting down as explained in the following procedure.

FixYour Plessone Power button.

SCONTE: The "Press Power Button to Turn off Projector" message will appear on the screen. The message disappears after 5 seconds or you can press the THE TRUMENU button to clear it. R PROJECTOR LAMPS AND ACCESSORIES

2 Press the **Power** button again. The cooling fans continue to operate for 120 seconds.

3 To power off the projector quickly, press the **Power** button and hold for 1 second while the projector's cooling fans are still running.



NOTE: Before you turn on the projector again, wait for 60 seconds to allow the internal temperature to stabilize.

4 Disconnect the power cord from the electrical outlet and the projector.

Adjusting the Projected Image

Raising the Projector Height

- 1 Press the Elevator button.
- 2 Raise the projector to the desired display angle, and then release the button to lock the elevator foot into position.
- **3** Use the tilt adjustment wheel to fine-tune the display angle.

Lowering the Projector Height

- 1 Press the Elevator button.
- **2** Lower the projector, and then release the button to lock the elevator foot into position.



Adjusting the Projector Zoom and Focus


- CAUTION: To avoid damaging the projector, ensure that the zoom lens and elevator foot are fully retracted before moving the projector or placing the projector in its carrying case.
 - **1** Rotate the zoom tab to zoom in and out.
 - **2** Rotate the focus ring until the image is clear. The projector focuses at distances ranging between 3.94 ft to 32.81 ft (1.2 m to 10 m).



1	Zoom tab
2	Focus ring




Adjusting Projection Image Size

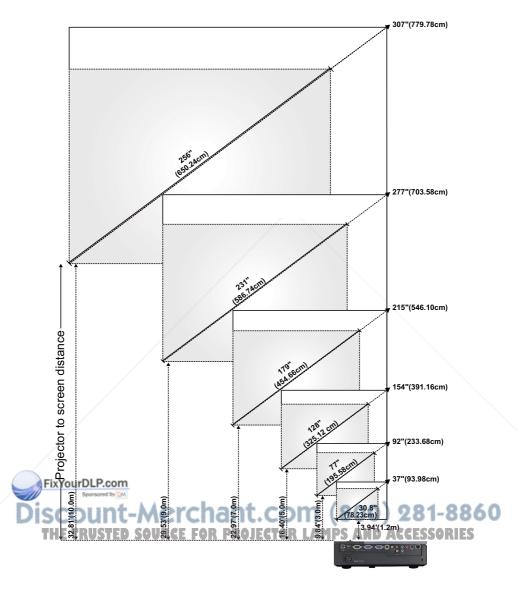

Screen	Max.	37" (93.98cm)	92" (233.68cm)	154" (391.16cm)	215" (546.10cm)	277" (703.58cm)	307" (779.78cm)
(Diagonal)	Min.	30.8" (78.23cm)	77" (195.58cm)	128" (325.12cm)	179" (454.66cm)	231" (586.74cm)	256" (650.24cm)
	Max. (WxH)	29.53" X 22.05"	74.02" X 55.51"	123.23" X 92.13"	172.44" X 129.13"	221.65" X 166.14"	246.06" X 184.65"
Screen		(75cm X 56cm)	(188cm X 141cm)	(313cm X 234cm)	(438cm X 328cm)	(563cm X 422cm)	(625 cm X 469 cm)
Size	Min. (WxH)	24.8" X 18.5"	61.42" X 46.06"	102.36" X 76.77"	143.70" X 107.48"	184.65" X 138.58"	205.12" X 153.94"
		(63cm X 47cm)	(156cm X 117cm)	(260cm X 195cm)	(365cm X 273cm)	(469cm X 352cm)	(521cm X 391cm)
	Max.	25.59" (65cm)	63.78" (162cm)	106.30" (270cm)	148.43" (377cm)	190.94" (485cm)	212.20" (539cm)
Hd	Min.	21.26" (54cm)	53.15" (135cm)	88.58" (225cm)	123.62" (314cm)	159.06" (404cm)	176.77" (449cm)
Distance		3.94' (1.2m)	9.8' (3.0m)	16.4' (5.0m)	23.0' (7.0m)	29.5' (9.0m)	32.81' (10.0m)
* This graph is for user reference only.							

Using the Control Panel

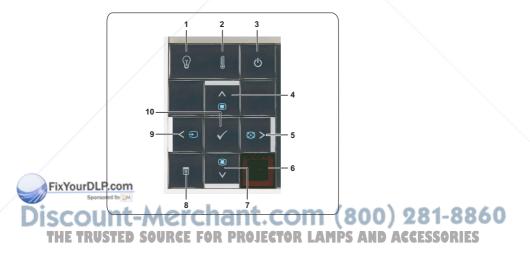

1	LAMP warning light	If the LAMP amber indicator is on or blinking, one of the following problems could be occurring:
		• Lamp is reaching its end of usable life
		• Lamp module is not properly installed
		• Lamp driver failure
		• Color wheel failure
		For more information, see "Troubleshooting Your Projector" on page 61 and "Guiding Signals" on page 65.
2	TEMP warning light	If the TEMP amber indicator is on or blinking, one of the following problems could be occurring:
		 Internal temperature of the projector is too high
		• Color wheel failure
		For more information, see "Troubleshooting Your Projector" on page 61 and "Guiding Signals" on page 65.
3	Power	Turns the projector on or off. For more information, see "Turning Your Projector On" on page 19 and "Turning Your Projector Off" on page 19.
4	Up <u> </u> / Keystone adjustment	Press to navigate through the On-Screen Display (OSD) Menu items.
		Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).
5	Right ≥ / Auto Adjust~	Press to navigate through the On-Screen Display (OSD) Menu items.
		Press to synchronize the projector to the input source.
FixYo	sponsored by M	NOTE: Auto Adjust does not operate if the on- screen display (OSD) is displayed. Point the remote control towards the IR receiver

7	Down 💟 / Keystone adjustment	Press to navigate through the On-Screen Display (OSD) Menu items.
		Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).
8	Menu 📃	Press to activate the OSD. Use the directional keys and the Menu button to navigate through the OSD.
9	Left < / Source	Press to navigate through the On-Screen Display (OSD) Menu items.
		Press to toggle through Analog RGB, Composite, Component (YPbPr via VGA), HDMI, and S-video sources when multiple sources are connected to the projector.
10	Enter 📈	Press to confirm the selection item.



Using the Remote Control



_	7	Video mode	The projector has preset configurations that are optimized for displaying data (presentation slides) or video (movies, games, etc.). Press the Video Mode button to toggle between Presentation mode, Bright mode, Movie mode, sRGB, or Custom mode. Pressing the Video Mode button once will show the current display mode. Pressing the Video Mode button again will switch between modes.
_	8	Mouse up Δ	Press to move to previous page.
		·	NOTE: The USB cable must be connected if you want to use the Page Up feature.
_	9	Mouse down ∇	Press to move to next page.
			NOTE: The USB cable must be connected if you want to use the Page Down feature.
_	10	Freeze	Press to pause the screen image.
_	11	Blank screen	Press to hide/unhide the image.
_	12	Information	Press to provide projector native resolution information.
_	13	S-Video	Press to choose S-Video source.
_	14	Up 🕰	Press to navigate through the On-Screen Display (OSD) Menu items.
_	15	Left 🕻	Press to navigate through the On-Screen Display (OSD) Menu items.
_	16	Menu	Press to activate the OSD.
	17	Volume up 🐝	Press to increase the volume.
	18	Source	Press to switch between Analog RGB, Composite, Component (YPbPr, via VGA), HDMI, and
FixYo	urDLF	P.com	S-video source.
Disc	19	Volume down 🚾	Press to decrease the volume.
THE	20 17	Kevstone adjustment +	Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).
_	21	Keystone adjustment -	Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).

22	Auto adjust	Press to synchronize the projector with the input source. Auto adjust does not operate if the OSD is displayed.
23	Zoom +	Press to increase the image.
24	Zoom -	Press to decrease the image.
25	VGA	Press to choose VGA source.
26	Video	Press to choose Composite Video source.



Installing the Remote Control Batteries

NOTE: Remove the batteries from the remote control when not in use. **1** Press the tab to lift the battery compartment cover. 1

2 Check the polarity (+/-) marking on the batteries.

3 Insert the batteries and align their polarity correctly according to the marking in the battery compartment.



NOTE: Avoid mixing different types of batteries or using new and old batteries together.

4 Slip the battery cover back.



2

3

4

Operating Range With Remote Control



NOTE: Actual operating range may slightly differ from the diagram. Weak batteries will also prevent the remote control from properly operating the projector. The TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Using the On-Screen Display

- The projector has a multi-language On-Screen Display (OSD) Menu that can be displayed with or without an input source.
- To select a submenu, press the *w* button on your projector's control panel or press the **Enter** button on the remote control.
- To select an option, press the indication or indication or projector's control panel or remote control. The color changes to dark blue. When an item is selected, the color changes to dark blue.
- Use the \leq or \geq buttons on the control panel or remote control to adjust the settings.
- To go back to Main Menu, go to Back tab and press the *w* button on the control panel or press the **Enter** button on the remote control.
- To exit the OSD, go to EXIT tab and press the we button or press the Menu button directly on the control panel or press the **Enter** button on the remote control.

NOTE: Due to Enter button in place of the *w* button on remote control, there is no *w* mark on remote now.

Main Menu



AUTO-ADJUST

Auto Adjust automatically adjusts the projector's **Frequency** and **Tracking** in PC mode. While Auto Adjustment is in progress, the following message appears on the screen:



INPUT SELECT

The Input Select menu allows you to select your projector's input source.



Auto Source—Select Off (the default) to lock the current input signal. If you press the Source button when the Auto Source mode is set to Off, you can manually select the input signal. Select On to auto detect the available input signals. If you press the Source button when the projector is on, it automatically finds the next available input signal.

VGA-A—Press on the control panel or press Enter button on the remote control to detect VGA-A signal.

VGA-B—Press in on the control panel or press Enter button on the remote control to detect VGA-B signal.

S-VIDEO—Press on the control panel or press Enter button on the remote control to detect S-Video signal.

COMPOSITE VIDEO—Press on the control panel or press Enter button on the remote control to detect Composite Video signal.

HDMI—Press i on the control panel or press Enter button on the remote control to detect HDMI signal.

ADVANCED—Press on the control panel or press Enter button on the remote control to activate Input Select Advanced menu.

INPUT SELECT ADVANCED

The Input Select Advanced menu allows you to enable or disable input sources.



VGA-A—Use \triangleleft and \triangleright to enable or disable VGA-A input.

VGA-B—Use \triangleleft and \triangleright to enable or disable VGA-B input.

S-VIDEO—Use \triangleleft and \triangleright to enable or disable S-Video input.

COMPOSITE VIDEO—Use \triangleleft and \triangleright to enable or disable Composite Video input.


HDMI—Use \triangleleft and \triangleright to enable or disable HDMI input.



NOTE: You cannot disable your current input source. At anytime, a minimum of two input sources have to be enabled.

PICTURE (in PC Mode)

Using the Picture menu, you can adjust the display settings of your projector. The Picture menu, provides the following options:

 


VIDEO MODE—Allows you to optimize the display image: **Presentation**, **Bright**, Movie, sRGB (provides more accurate color representation), and Custom (set your preferred settings). If you adjust the settings for Brightness, Contrast, Saturation, Sharpness, Tint, and Advanced, the projector automatically switches to Custom.

NOTE: If you adjust the settings for **Brightness**, **Contrast**, **Saturation**, Sharpness, Tint, and Advanced the projector automatically switches to Custom.

BRIGHTNESS—Use \triangleleft and \triangleright to adjust the brightness of the image.

CONTRAST—Use \langle and \rangle to adjust the display contrast.

 
ADVANCED—Press on the control panel or press Enter button on the remote control to activate Picture Advance Menu. See "PICTURE ADVANCED" on page 35.



count-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

PICTURE (in Video Mode)

Using the **Picture** menu, you can adjust the display settings of your projector. The Picture menu provides the following options:

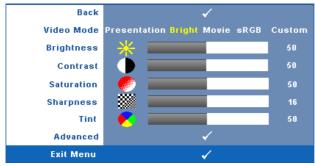

VIDEO MODE—Allows you to optimize the display image: Presentation, Bright, Movie, sRGB (provides more accurate color representation), and Custom (set your preferred settings). If you adjust the settings for Brightness, Contrast, Saturation, Sharpness, Tint, and Advanced the projector automatically switches to Custom.

NOTE: If you adjust the settings for **Brightness, Contrast**, **Saturation**, **Sharpness**, **Tint**, and **Advanced** the projector automatically switches to **Custom**.

BRIGHTNESS—Use \leq and \geq to adjust the brightness of the image.

CONTRAST—Use \leq and \geq to adjust the display contrast.

SATURATION-Allows you to adjust the video source from black and white to fully

saturated color. Press \leq to decrease the amount of color in the image and \geq to increase the amount of color in the image.

SHARPNESS—Press \triangleleft to decrease the sharpness and \geqslant to increase the sharpness.

TINT—Press \leq to increase the amount of green in the image and \geq to increase the amount of red in the image (available for NTSC only).

ADVANCED PRESS on the control panel or press Enter button on the remote control to activate Picture Advance Menu. See "PICTURE ADVANCED" below.

PICTURE ADVANCED

Using the Picture Advanced menu, you can adjust the display settings of your projector. The Picture Advanced menu provides the following options:

Back	✓			
White Intensity				10
Color Temp	Low	Mid	High	Custom
Custom Color Adjust	Red			50
	Green			50
	Blue			50
Color Space	RGB	YCbCr YPbPr		YPbPr
Exit Menu			¥	

WHITE INTENSITY—Use \leq and \geq to adjust the display white intensity.


COLOR TEMP—Allows you to adjust the color temperature. The screen appears cooler at higher color temperatures and warmer at lower color temperatures. When you adjust the values in the **Color Adjust** menu, the Custom mode is activated. The values are saved in the Custom mode.

CUSTOM COLOR ADJUST—Allows you to manually adjust the colors red, green, and blue.

COLOR SPACE—Allows you to select the color space, options are: RGB, YCbCr, and YPbPr.

DISPLAY (in PC Mode)

Using the **Display** menu, you can adjust the display settings of your projector. The Picture menu provides the following options:

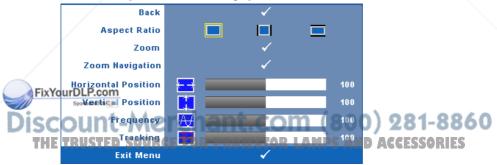

ASPECT RATIO—Allows you to select the aspect ratio to adjust how the image appears.

- Original Select Original to maintain the aspect ratio of image projected according to input source.
- 4:3 The input source scales to fit the screen and projects a 4:3 image.
- Wide The input source scales to fit the width of the screen to project a wide screen image.



Z00M—Press in the control panel or press Enter button on the remote control to activate **Z00m** menu.

Select the area to zoom and press $\boxed{1000}$ on the control panel or press Enter button on the remote control to view zoomed image.



Adjust the image scale by pressing \triangleleft or \searrow and press \checkmark on the control panel or press Enter button on the remote control to view.



ZOOM NAVIGATION—Press on the control panel or press Enter button on the remote control to activate **Zoom** Navigation menu.

Use \leq \geq \land \lor to navigate projection screen.

HORIZONTAL POSITION—Press \triangleleft to move the image to the left and \triangleright to move the image to the right.

VERTICAL POSITION—Press \leq to move the image down and \geq to move the image up.

FREQUENCY—Allows you to change the display data clock frequency to match the frequency of your computer graphics card. If you see a vertical flickering wave, use **Frequency** control to minimize the bars. This is a coarse adjustment.

TRACKING—Synchronize the phase of the display signal with the graphic card. If you experience an unstable or flickering image, use **Tracking** to correct it. This is a fine adjustment.

FixYourDLP.com

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

DISPLAY (in Video Mode)

Using the **Display** menu, you can adjust the display settings of your projector. The Picture menu provides the following options:



ASPECT RATIO—Allows you to select the aspect ratio to adjust how the image appears.

- Original Select Original to maintain the aspect ratio of image projected according to input source.
- 4:3 The input source scales to fit the screen and projects a 4:3 image.
- Wide The input source scales to fit the width of the screen to project a wide screen image.



ZOOM—Press on the control panel or press Enter button on the remote control to activate Zoom menu.

Select the area to zoom and press M on the control panel or press **Enter** button on the remote control to view zoomed image.



Adjust the image scale by pressing \leq or \geq and press \swarrow on the control panel or press Enter button on the remote control to view.



Use \bigotimes \triangleright \land \bigtriangledown to navigate projection screen.

ZOOM NAVIGATION—Press on the control panel or press Enter button on the remote control to activate **Zoom**

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Navigation menu.

LAMP

Using the Lamp menu, you can adjust the display settings of your projector. The Lamp menu provides the following options:



LAMP MODE—Allows you to select between Normal and ECO mode.


Normal mode operates at full power level. ECO Mode operates at a lower power level which may provide longer lamp life, quieter operation, and dimmer luminance output on the screen.

LAMP HOUR—Displays the operating hours since the last lamp timer reset.

LAMP HOUR RESET—Select Yes to reset the lamp timer.

SET UP

The Set Up menu allows you to adjust settings for Language, Projector Mode, Keystone, Standby VGA Output, 3D Display and Network.

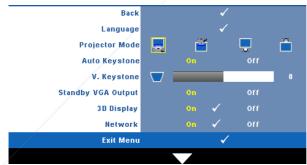

FixYourDLP.com

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

LANGUAGE—Allows you to set the language for the OSD. Press on the control panel or press **Enter** button on the remote control to activate the **Language** menu.



PROJECTOR MODE—Allows you to select the projector mode, depending upon how the projector is mounted.

- 📃 Front Projection-Desktop This is the default option.
- Front Projection-Ceiling Mount The projector turns the image upside down for ceiling-mounted projection.
- Rear Projection-Desktop The projector reverses the image so that you can project from behind a translucent screen.
- Rear Projection-Ceiling Mount The projector reverses and turns the image upside down. You can project from behind a translucent screen with a ceiling-mounted projection.

FixYourDLP.com
 AUTO KEYSTONE—Select On to enable the auto correction for vertical image distortion caused by tilting the projector.
 V. KEYSTONE—Manually adjust the vertical image distortion caused by tilting the projector.

STANDBY VGA OUTPUT—Select On or Off the VGA output function at projector standby status. Default is Off.

3D DISPLAY—Select On to start the 3D display function. Default is Off.

NOTE: To activate 3D Display function, ensure that 3D goggles, 3D video contents and 120Hz signal output graphic card supported on PC/NB are ready.




3D Sync Invert—If you see a discrete or overlapping image while wearing DLP 3D goggles, you may need to execute 'Invert' to get best match of left/right image sequence to get the correct image. (For DLP 3D goggles)

Network—Select On to activate network function. Press *M* on the control panel or press **Enter** button on the remote control to configure Network settings.

NETWORK

The Network menu allows you to configure the network connection settings.

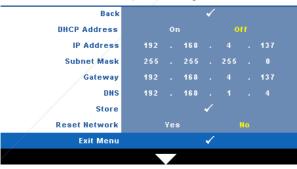

IP ADDRESS—Automatically or manually assigns the IP address to the projector connected to the network.

SUBNET MASK—Configure the Subnet Mask of the network connection.

GATEWAY—Check the Gateway address with your network/system administrator if you configure it manually.

DNS—Check the DNS Server IP address with your network/system administrator if you configure it manually.

STORE—Press i on the control panel or press Enter button on the remote control to save the changes made in network configuration settings.

RESET NETWORK—Select Yes to reset network configuration.

INFORMATION

The Information menu displays the current projector settings.


Back	✓
Model Name	1510X
Input Source	ANALOG RGB 1024X768 60Hz
Operating Hour	10 hr
PPID	CN-0KMWFP-S0081-46B-0208
IP Address	192.168.4.137
Exit Menu	✓

OTHERS

The Others menu allows you to change settings for Menu, Screen, Audio, Power, Security, and Closed Caption (for NTSC only). You can also perform Test Pattern and Factory Reset.



 MENU SETTINGS—Select and press in on the control panel or press Enter button on the remote control to activate menu settings. The menu settings consists of the following options:



MENU POSITION—Allows you to change the position of the OSD menu on the screen.

MENU TRANSPARENCY—Select to change the transparency level of the OSD background.

MENU TIMEOUT—Allows you to adjust the time for an OSD timeout. By default, the OSD disappears after 20 seconds of non-activity.

MENU LOCK—Select **On** to enable Menu Lock and hide the OSD menu. Select **OFF** to disable the Menu Lock. If you want to disable the Menu Lock function and have the OSD disappear, press the **Menu** button on the control panel or remote control for 15 seconds, then disable the function.

SCREEN SETTINGS—Select and press on the control panel or press Enter button on the remote control to activate screen settings. The screen settings menu consists of the following options:



CAPTURE SCREEN—Select and press in the control panel or press Enter button on the remote control to capture the screen display, the following message appears on the screen.



NOTE: To capture a full image, ensure the input signal that is connected to the projector is 1024 x 768 resolution.

SCREEN—Select **Dell** to use the Dell logo as wallpaper. Select **Captured** to set the captured image as wallpaper.

RESET—Select and press *m* on the control panel or press Enter button on the remote control to delete the captured picture and set back to the default setting.

AUDIO SETTINGS—Select and press *initial* on the control panel or press **Enter** button on the remote control to change audio settings. The audio settings menu consists of the following options:



AUDIO INPUT—Select the Audio input source, options are: Audio-A, Audio-B, HDMI and Microphone.

VOLUME—Press \leq to decrease the volume and \geq to increase the volume.

SPEAKER-Select On to enable speaker. Select Off to disable speaker.

MUTE—Allows you to mute the sounds for audio input and audio output.

Power Settings—Select and press in the control panel or press Enter button on the remote control to activate power settings. The power settings menu consists of the following options:

Back			 Image: A second s		
Power Saving	Off	30min	60min	90min	120min
Quick Shutdown		Yes		No	
Exit Menu			 Image: A second s		

Power Saving—Select Off to disable Power Saving mode. By default, the projector is set to enter power saving mode after 120 minutes of no activity. FixYourDLP.Acwarning message appears on screen showing a 60-second countdown before switching to power saving mode. Press any button during countdown period to stop power saving mode. THE TRUSYOU can also set a different delay period to enter power saving mode. Thes delay period is the time you want the projector to wait without an input

signal. Power saving can be set to 30, 60, 90, or 120 minutes.

If an input signal is not detected during the delay period, the projector turns off the lamp and goes into power saving mode. If an input signal is detected within the delay period, the projector automatically turns on. If an input signal is not detected within two hours during power saving mode, the projector switches from Power Saving mode to Power Off mode. To turn on the projector press the Power button.

QUICK SHUTDOWN—Select **Yes** to turn off the projector with a single press of the **Power** button. This function allows the projector to quick power off with an accelerated fan speed. Slightly higher acoustic noise is expected during quick power off.

NOTE: Before you turn on the projector again, wait for 60 seconds to allow the internal temperature to stabilize. The projector will take a longer time to turn on if you try to power on immediately. Its cooling fan will run at full speed for about 30 seconds to stabilize the internal temperature.

SECURITY SETTINGS—Select and press in on the control panel or press Enter button on the remote control to activate security settings. The security settings menu allows you to enable and set password protection.



PASSWORD—When Password Protect is enabled, a Password Protect screen requesting you to enter a password will be displayed when the power plug is inserted into the electrical outlet and the power for the projector is first turned on. By default, this function is disabled. You can enable this feature by selecting **Enabled**. If the password has been set before, key in the password first and select the function. This password security feature will be activated the next time you turn on the projector. If you enable this feature, you will be asked to enter the projector's password after you turn on the projector:

FixYourPLP.com FixYourPLP.com Thist Time password input request:

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES **a** Go to **Others** menu, press in on the control panel or press **Enter** button on the remote control and then select **Password** to **Enable** the password setting.



b Enabling the Password function will pop up a character screen, key in a 4-digit number from the screen and press on the control panel or press Enter button on the remote control.



- c To confirm, enter the password again.
- **d** If the password verification is successful, you may resume with accessing the projector's functions and its utilities.


2. If you have entered an incorrect password, you will be given FixYourDLP.com sponsore by another 2 chances. After the three invalid attempts, the projector will automatically turn off.

NOTE: If you forget your password, contact DELL™ or qualified service personnel.

3 To disable the password function, select Off to disable the function.

4 To delete the password, select Delete.

CHANGE PASSWORD—Key in the original password, then enter the new password and confirm the new password again.

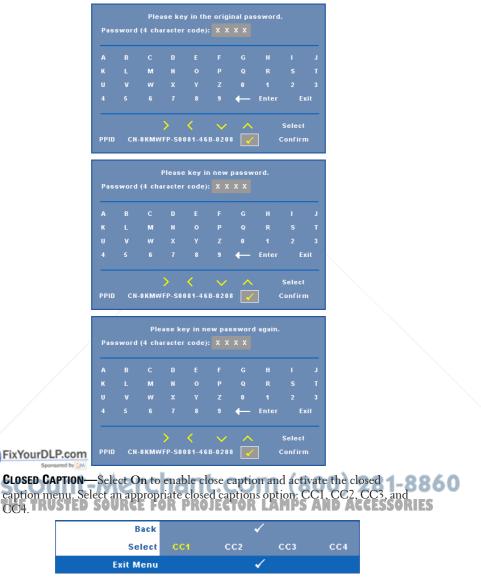


NOTE: Closed caption option is available for NTSC only.

TEST PATTERN—Test Pattern is used to test focus and resolution.

You can enable or disable the **Test Pattern** by selecting **Off**, **1** or **2**. You can also invoke the **Test Pattern 1** by pressing and holding down \square and \supseteq buttons on the control panel simultaneously for 2 seconds. You can also invoke the test pattern 2

by pressing and holding down $\boxed{\circlet}$ and $\boxed{\circlet}$ buttons on the control panel simultaneously for 2 seconds.

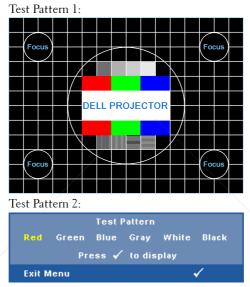

FACTORY RESET—Select and press in on the control panel or press Enter button on the remote control to reset all settings to its factory default, the warning message below appears.

Resetting to factory default

FixYourDL Preser include both computer sources and video source settings.

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Managing the Projector From Web Management

Configuring the Network Setting

If the projector is connected to a network, you can access the projector using a web browser by configuring the network setting (TCP/IP). When using the network function, the IP address should be unique. For configuring the network setting, refer to "Network" on page 40.

Accessing Web Management

Use Internet Explorer 5.0 and above or Netscape Navigator 7.0 and above and enter the IP address. You can now access Web Management and manage the projector from a remote location.



Managing Properties

Home

N Home	Home		
Network Setting	Welcome to DELL 151		
	Projector Informatio	n	
Projector Status and Control	Model Name:	1510X	
_	Projector Name:	D29173	
E-mail Alert	Location:		
_	Contact:		
Password Setting	Status:	Lamp ON	
_	Lamp Hours:	0 hr.	
Firmware Update	Operation Hours:	0 hr.	
_	IP Address:	192.168.3.151	
	MAC Address:	00:1E:C9:BA71:F5	
	Admin Password:	Not Set!	
	PPID:	CN-0KMWFP-S0081-985-0005	
	Language		
	English	Submit	

- Access the Web Management Home page by entering the projector's IP address at the web browser. See "Network" on page 40.
- Language: Allows you to set the language for web management.



Network Settings

See OSD section on page 40.

Home	Network	Settings	
Network Setting	Model Name:	15100	
	Projector Name:	D48104	
Projector Status and Control	Location:		
E-mail Alert	Contact:		
Password Setting		Sme	
Firmware Update	DHCP	O Manual	
	IP Address	192.168.3.92	
	Subnet Mask		
	Gateway	192, 168, 3, 254	
	DNS Server		
		Save	
	Crestron Control	System Device	
	IP Address	255.255.255	
	Device ID	7	
	Port	41794	
		Connect	

- Set up the Model Name, Projector Name, Location and Contact information (up to 21 characters for each field). Press Save to store the settings.
- Choose DHCP to assign an IP address to the projector from a DHCP server automatically, or Manual to assign an IP address manually.
- Set up the **IP Address**, **Device ID** and **Port** information on the Crestron function.



Projector Status and Control Page

Home	Projector Statu	is and Control	
Network Setting	Projector Status		Refresh
Projector Status and Control	Projector Status La	imp ON	Power ON Power OFF
E-mail Alert	Power Saving 12	20 min. 💌	
Password Setting	Alert Status		Clear
Elmovare Update	Projector Mode Fr Source Select Cr Video Mode Pr Blank screen C	Normal Mode O ECO Mode ord Projection Deskide W ormposite Video W ormposite Video W ormposite Video W 000 © 01 001 © 01 00-100 © 01 00-100 © 02	Set Set
	Volume 10	udio-B M (6-20)	Set

- **Projector Status**: There are 5 status: Lamp On, Standby, Power Saving, Cooling and Warming up. Click the **Refresh** button to refresh the status and control settings.
- Power Saving: Power Saving can be set to Off, 30, 60, 90, or 120 minutes. Refer to page 43.
- Alert Status: There are 3 error status: Lamp warning, Low lamp life, and Temperature warning. Your projector might lock up in protection mode if any of the alerts is activated. To exit protection mode, click the **Clear** button to clear the Alert Status before you could Power ON your projector.
- Projector Mode: Allows you to select the projector mode, depending upon how the projector is mounted. There are 4 projection modes: Front Projection-Desktop, Front Projection-Ceiling Mount, Rear Projection-FixYourDL Desktop and Rear Projection-Ceiling Mount

Source Select: The Source Select menu allows you to select your projector

input source. You can select VGA-A, VGA-B, S-VIDEO, COMPOSITE VIDEO, O

TRUENDALING FOR PROJECTOR LAMPS AND ACCESSORIES
 Video Mode: Select a mode to optimize the display image based on how the

 Video Mode: Select a mode to optimize the display image based on how the projector is being used:

- Presentation: Best for presentation slides.

- Bright: Maximum brightness and contrast.
- Movie: For viewing movie & photo.
- sRGB: Provide a more accurate color representation.
- Custom: User preferred settings.
- Blank Screen: You can select On or Off.
- Aspect Ratio: Allows you to select the aspect ratio to adjust how the image appears.
- Brightness: Select value to adjust the brightness of the image.
- Contrast: Select value to adjust the display contrast.
- Audio Input: You can select Audio-A, Audio-B, HDMI and Microphone for the input source
- Volume: You can select the value $(0 \sim 20)$ for the audio volume
- **Speaker**: You can select On to enable the audio function or select Off to disable the audio function.



E-mail Alert

) Home	E-mail Aler	t			
Network Setting	E-mail Alert	O Enable	 Disable 	E-mail Alert Test	
Projector Status and Control	TO CC	a			
E-mail Alert	From	la			
Password Setting	Subject 1510)	D29173 Alert			
Eirmware.Update	SMTP Setting Out going SMTP se User name Password Alert Condition Lamp warning Low lamp life Temparature v Save				

- E-mail Alert: You can set whether to be notified by email (Enable) or not (Disable).
- To/CC/From: You can enter email address of sender (From) and recipients (To/Cc) to receive notification when an abnormality or warning occurs.
- Alert Condition: You can select the abnormalities or warnings to be notified by email. When any of the alert conditions occur, an email will be sent to the recipients (To/Cc).
- Out going SMTP server, User name and Password should be provided by your network administrator or MIS.



Password Setting

		www.dell.com
DELL 1510X Web Manag	jement	
E Home	Password Setting	
Network Setting	Please set your password if you enable this feature for first-time. If password is set, you will require to enter with your password upon you connect to the Web Management.	
Projector Status and Control		
E-mail Alert	Administrator	
	Password O Enable O Disable Submit	
Password Setting	New Password	
Firmware Update	Confirm Password Submit	
	Set Security For SNMP	
	Write Community private Submit	

Use Password Setting to set up an administrator password to access the **Web Management**. When enabling password for the first time, set the password before enabling it. When the password function is enabled, the administrator password will be required for accessing the **Web Management**.

- New Password: Enter new password
- · Confirm Password: Enter password again and submit
- Write Community: Set security for SNMP. Enter password and submit.

NOTE: Contact Dell if you forget your administrator password.



Login Page

	www.dell.com
DELL 1510X Web Management	Version: N01
Welcome to DELL	. 1510X Web Management.
Administrator Password:	
	Login
Projector Information	
Projector Name:	D29173
IP Address:	192.168.3.151


• Administrator Password: Enter the Administrator Password and click Login.



Firmware Update

DELL 1510X Web Management	t
	Firmware Update Firmware update will take about a minute. On not interrupt the process once it has begun. Keep the connection established utili completion of process. The network system will ado reboot and you can re-Jogin after update is complete. Update Cancel

Use the Firmware Update page to update your projector's firmware. Press **Update** to start.

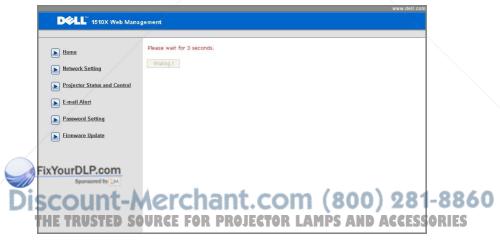

• Please wait till the count reaches 0.

	www.dell.com
DELL 1510X Web Manag	gement
▶ Home	Please wait for 3 seconds.
Network Setting	Continue
Projector Status and Control	
E-mail Alert	
Password Setting	
Firmware Update	

• Wait for 3 seconds and it will proceed to the next step automatically.

	Upgrade Firmware
1	Please select a file (~.bin) to upgrade : D:\1510X\FW Browse
	Upgrade Cancel
	(Upgrading firmware may take 60 seconds)
FixYourDLP.co	Upgrade must NOT be interrupted !
iscoun	t-Merchant.com (800) 281-8860
THE TRUSTI	ED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES
• Sele	ect the file to upgrade and click the U pgrade button. When upgrading is
in p	progress, the Cancel button is disabled.

Please wait. Click on button to proceed after 8 seconds.	
Waiting(6)	

• Please wait till the count reaches 0.

Please wait. Click on button to proceed after 8 seconds.	
Re Login	

• When upgrade is complete, please click the **ReLogin** button to go back to the Web Management Home Page.



I would like remote access the projector via Internet. What is the better setting for the browser? To have a better setting for the browser, please follow the steps below: 1 Open Control Panel \rightarrow Internet Options \rightarrow General tab \rightarrow Temporary Internet Files \rightarrow

Settings → Select Every visit to the pages.
 2 Some firewall or anti-virus may block the HTTP application, if possible turn off the firewall or anti-virus.

I would like to remote access the projector via Internet. What socket port number should I open for it in the firewall? The following are TCP/IP socket ports which projector uses.

UDP/TCP	Port Number	Description
ТСР	80	Web configuration (HTTP)
UDP/TCP	25	SMTP: used for email routing between mail servers
UDP/TCP	161	SNMP: Simple Network Management Protocol
UDP	9131	AMX: used for AMX discovery

Why am I unable to access the projector via Internet?

- **1** Check whether your computer/laptop is connected to the Internet.
- **2** Check with your MIS or network administrator whether your computer/laptop is in the same subnet.

FixYourDLP.com

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Why am I unable to access the SMTP server?	1 Check with your MIS or network administrator whether the SMTP server function is open for the projector and the IP assigned to the projector is allowed to access the SMTP server. The projector's SMTP socket port number is 25, this cannot be changed.
	2 Check if the out going SMTP server, user name, and password are set correctly.
	3 Some SMTP servers will check whether the mail address of "From" correlates with the "User name" and "Password". For example, you use <u>test@dell.com</u> as the mail address in "From". You should also use <u>test@dell.com</u> account information for the User name and the password to log in the SMTP server.
Why am I unable to receive the test alert email even though the projector already indicates the test mail is already sent?	It could be because the SMTP server recognized the alert mail as a spam mail or because of the SMTP server restriction. Check with your MIS or network administrator for the SMTP server's setting.



4

Troubleshooting Your Projector

If you experience problems with your projector, see the following troubleshooting tips. If the problem persists, contact Dell[™]. See Contacting Dell[™] on page 74.

Problem

FixYourDLP.com

No image appears on the screen



Possible Solution

- Ensure that the lens cap is removed and the projector is turned on.
- Ensure that the INPUT SELECT is set correctly in the OSD menu.
- Ensure the external graphics port is enabled. If you are using a Dell[™] portable computer, press n (Fn+F8). For other computers, see your respective documentation. The output signal from the computer is not according to industry standards. Should this happen, upgrade the video driver of the computer. For Dell computer, see support.dell.com.
- Ensure that all the cables are securely connected. See "Connecting Your Projector" on page 9.
- Ensure that the pins of the connectors are not bent or broken.
- Ensure that the lamp is securely installed (see "Changing the Lamp" on page 67).
- Use **Test Pattern** in the **Others** menu. Ensure that the colors of the test pattern are

THE TMissing Input Source. FOR PRG9 to Advanced Enable/Disable Source or Enable. Cannot switch to particular Input Source is set to Enable.

Problem <i>(continued)</i>	Possible Solution (continued)
Partial, scrolling, or incorrectly displayed image	1 Press the Auto Adjust button on the remote control or the control panel.
	2 If you are using a Dell [™] portable computer, set the resolution of the computer to XGA (1024 x 768):
	 a Right-click the unused portion of your Microsoft[®] Windows[®] desktop, click Properties and then select Settings tab.
	 b Verify that the setting is 1024 x 768 pixels for the external monitor port. c Press m Bac (Fn+F8).
	If you experience difficulty in changing resolutions or your monitor freezes, restart all the equipment and the projector.
	If you are not using a Dell [™] portable computer, see your documentation. The output signal from the computer may not be according to industry standards. Should this happen, upgrade the video driver of the computer. For a Dell computer, see support.dell.com .
The screen does not display your presentation	If you are using a portable computer, press
Image is unstable or flickering	Adjust the tracking in the OSD Display sub- menu (in PC Mode only).
Image has vertical flickering bar	Adjust the frequency in the OSD Display sub- menu (in PC Mode only).
Image color is incorrect XYourDLP.com Sponsored by DM	 If the display receives the wrong signal output from the graphics card, please set the signal type to RGB in the OSD Display tab. Use Test Pattern in the Others menu. Ensure that the colors of the test pattern are
HE TRUSTED SOURCE FO Image is out of focus	correct. 1 Adjust the focus ring on the projector lens.
	2 Ensure that the projection screen is within the required distance from the projector (3.94 ft [1.2 m] to 32.81 ft [10 m]).

Problem (continued)	Possible Solution (continued)
The image is stretched when displaying a 16:9 DVD	The projector automatically detects the input signal format. It will maintain the aspect ratio of the projected image according to input signal format with an Original setting.
	If the image is still stretched, adjust the aspect ratio in the Set Up menu in the OSD.
Image is reversed	Select Set Up from the OSD and adjust the projector mode.
Lamp is burned out or makes a popping sound	When the lamp reaches its end of life, it may burn out and may make a loud popping sound. If this occurs, the projector does not turn back on. To replace the lamp, see "Changing the Lamp" on page 67.
LAMP light is solid amber	If the LAMP light is solid amber, replace the lamp.
LAMP light is blinking amber	If the LAMP light is blinking amber, Lamp module connection may be disrupted. Please check the lamp module and ensure that it is properly installed.
	If the LAMP light and the Power light are blinking amber, the lamp driver has failed and the projector will automatically shut down.
	If the LAMP and TEMP light are blinking amber and the Power light is solid blue, the color wheel has failed and the projector will automatically shut down.
	To clear the protection mode, press and hold the POWER button for 10 seconds.
TEMP light is solid amber FixYourDLP.com	The projector has overheated. The display automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, contact Dell™.

Problem (continued)	Possible Solution (continued)
TEMP light is blinking amber	A projector fan has failed and the projector will automatically shut down. Try to clear the projector mode by pressing and holding the POWER button for 10 seconds. Please wait for about 5 minutes and try to power up again. If the problem persists, contact Dell [™] .
The OSD does not appear on the screen	Try to press the Menu button on the panel for 15 seconds to unlock the OSD. Check the Menu Lock on page 42.
The remote control is not operating smoothly or works only within a limited range	The battery may be low. If so, replace with 2 new AAA batteries.



Guiding Signals

Projector		Control Buttons			Indicator	
Status	Description	Power	Menu	Others	TEMP (Amber)	LAMP (Amber)
Standby mo	e Projector in Standby mode. Ready to power on.	BLUE Flashing	OFF	OFF	OFF	OFF
Warming up mode	Projector takes some time to warm up and power on.	BLUE	BLUE	BLUE	OFF	OFF
Lamp on	Projector in Normal mode, ready to display an image. Mote: The OSD menu is not accessed.	BLUE	BLUE	OFF	OFF	OFF
Cooling mod	le Projector is cooling to shutdown.	BLUE	OFF	OFF	OFF	OFF
Power Saving mode	Power Saving mode has been activated. The projector will automatically enter standby mode, if an input signal is not detected in two hours.	AMBER Flashing	OFF	OFF	OFF	OFF
Cooling befor Power Saving mode		AMBER	OFF	OFF	OFF	OFF
Projector overheated	Air vents might be blocked or ambient temperature may be above 35°C. The projector automatically shuts down. Ensure that the air vents are not blocked and that the ambient temperature is within operational range. If the problem persists, contact Dell.	OFF	OFF	OFF	AMBER	OFF
Lamp overheated	The lamp is overheated. The air vents may be blocked. The projector automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, contact Dell.	BLUE	OFF	OFF	AMBER	OFF
Lamp driver overheated	The lamp driver is overheated. The air vents may be blocked. The projector automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, contact Dell.	AMBER	OFF	OFF	AMBER	OFF
Fan breakdo	wn One of the fans has failed. The projector automatically shuts down. If the problem persists, contact Dell.	ÒFF	OFF	OFF	AMBER Flashing	OFF
Lamp driver breakdown Sponsored by	The lamp driver has failed. The projector automatically shuts down. Unplug the power cord after three minutes then turn the display on again. If this problem persists, contact Dell.	AMBER Flashing	OFF	OFF	OFF	AMBER Flashing
Color Whee breakdown	Color wheel cannot start. The projector bas failed and the projector automatically shuts down. Unplug the power cord after three minutes and then turn on the projector. If this problem persists, contact Dell.	FOR LA	MPS OFF	AND A OFF	AMBER Flashing	AMBER Flashing

Lamp failure	Lamp is defective. Replace the lamp.	OFF	OFF	OFF	OFF	AMBER
Fault - DC Power supply has been interrupted. The supply (+12V) Unplug the power cord after three minutes and then turn on the projector. If this problem persists, contact Dell.		AMBER Flashing	OFF	OFF	AMBER	AMBER
Lamp module connection Lamp module connection may be disrupted. Check the lamp module and ensure that it is properly installed. If the problem persists, contact Dell.		OFF	OFF	OFF	OFF	AMBER Flashing



Changing the Lamp

A CAUTION: Before you begin any of the procedures in this section, follow the Safety Instructions as described on page 7.

Replace the lamp when the message "Lamp is approaching the end of its useful life in the operation. Replacement suggested! www.dell.com/lamps" appears on the screen. If this problem persists after replacing the lamp, contact Dell[™]. For more information, see Contacting Dell[™]on page 74.



CAUTION: Use an original lamp to ensure safe and optimal working condition of your projector.



CAUTION: The lamp becomes very hot when in use. Do not attempt to replace the lamp until the projector has been allowed to cool down for at least 30 minutes.



CAUTION: Do not touch the bulb or the lamp glass at any time. Projector lamps are very fragile and may shatter if touched. The shattered glass pieces are sharp and can cause injury.




CAUTION: If the lamp shatters, remove all broken pieces from the projector and dispose or recycle according to state, local, or federal law. For more information see www.dell.com/hg.

- **1** Turn off the projector and disconnect the power cord.
- 2 Let the projector cool for at least 30 minutes.
- **3** Loosen the two screws that secure the lamp cover, and remove the cover.
- 4 Loosen the two screws that secure the lamp.
- **5** Pull the lamp up by its metal handle.

NOTE: Dell[™] may require lamps replaced under warranty to be returned to Dell[™]. Otherwise, contact your local waste disposal agency for the address

FixYourDLBrohmearest deposit site.

6 Replace with the new lamp. Tighten the two screws that

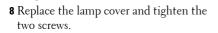

9 Reset the lamp usage time by selecting "Yes" for Lamp Reset in the OSD Lamp tab (see Lamp menu on page 38). When a new lamp module has been changed, the projector will automatically detect and reset the lamp hours.

CAUTION: Lamp Disposal (for the US only) (B) LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS. FOR MORE INFORMATION, GO TO WWW.DELL.COM/HG OR CONTACT THE ELECTRONIC INDUSTRIES ALLIANCE AT WWW.EIAE.ORG. FOR LAMP SPECIFIC DISPOSAL INFORMATION CHECK WWW.LAMPRECYCLE.ORG.



Specifications

Light Valve	0.55" XGA S450 DMD, DarkChip3™
Brightness	3500 ANSI Lumens (Max.)
Contrast Ratio	2100:1 Typical (Full On/Full Off)
Uniformity	85% Typical (Japan Standard - JBMA)
Number of Pixels	1024 x 768 (XGA)
Displayable Color	1.07 billion colors
Color Wheel Speed	2X
Projection Lens	F-Stop: F/ 2.4~2.66 Focal length, f=18.2~21.8 mm 1.2X manual Zoom Lens Throw ratio =1.6~1.92 wide and tele
Projection Screen Size	30.8-307 inches (diagonal)
Projection Distance	3.94~32.81 ft (1.2 m~10 m)
Video Compatibility	Composite Video / S-Video: NTSC (J, M, 4.43), PAL (B, D, G, H, I, M, N, Nc, 60), SECAM (B, D, G, K, Kl, L)
	Component Video via VGA & HDMI: 1080i/p, 720p, 576i/p, 480i/p
Power Supply	Universal AC 100-240 50-60 Hz with PFC input
Power Consumption	Normal mode: 287W ± 10% @ 110Vac (Network On) 275W +/-10% @220Vac (Network On)
FixYourDLP.com	Eco mode: 219W ± 10% @ 110Vac (Network On)

Discount-Merchant 212W +/-10% @220Vac (Network On) 60 THE TRUSTED SOURCE FOR^Powersaving mode: <15W (Network On Fan speed at minimum)

> Standby mode: <1W (Network Off & VGA_OUT Off)

l speake

Noise Level

Weight

Audio

Dimensions (W x H x D)

1 speaker x 8watt RMS 35 dB(A) Normal mode, 32 dB(A) Eco mode 5.2 lbs (2.36 kg) 11.68 x 3.46 x 7.96 +/- 0.04 inches (296.5 x 87.9 x 202 +/- 1 mm)



Environmental

I/O Connectors



Operating temperature: 5°C - 35°C (41°F- 95°F) Humidity: 80% maximum Storage temperature: 0°C to 60°C (32°F to 140°F) Humidity: 90% maximum

Shipping temperature: -20°C to 60°C (-4°F to 140°F) Humidity: 90% maximum

Power: One AC power socket (3-pin - C14 inlet)

VGA input: Two 15-pin D-sub connector (Blue), VGA-A & VGA-B, for analog RGB/Component input signals.

VGA output: One 15-pin D-sub connector (Black) for VGA-A loop through.

S-Video input: One standard 4-pin min-DIN S-Video connector for Y/C signal.

Composite video input: One Yellow RCA jack for CVBS signal.

HDMI input: One HDMI connector for supporting THE TRUSTED SOURCE HDMI 1.3: HDCP compliant. S AND ACCESSORIES

> Analog Audio input: One 3.5 mm stereo mini phone jack (Blue) & one pair of RCA connector (Red/White).

Variable audio output: One 3.5 mm stereo mini phone jack (Green).

USB port: One USB slave for remote support.

RS232 port: One mini-DIN 6-pin for RS232 communication.

RJ45 port: One RJ45 connector for control of projector through network.

Microphone: One 3.5 mm stereo mini phone jack (Pink).

Philips 225 W user-replaceable lamp (up to 4000 hours in eco mode)

Lamp

NOTE: The lamp life rating for any projector is a measure of brightness degradation only, and is not a specification for the time it takes a lamp to fail and cease light output. Lamp life is defined as the time it takes for more than 50 percent of a lamp sample population to have brightness decrease by approximately 50 percent of the rated lumens for the specified lamp. The lamp life rating is not guaranteed in any way. The actual operating life span of a projector lamp will vary according to operating conditions and usage patterns. Usage of a projector in stressful conditions which may include dusty environments, under high temperatures, many hours per day and abrupt powering-off will most likely result in a lamp's shortened operating life span or possible lamp failure.



RS232 Pin Assignment



RS232 Protocol

Communication Settings

Connection settings	Value
Baud Rate:	19200
Data Bits:	8
Parity	None
Stop Bits	1

Command types

To pop up the OSD menu and adjust the settings.

- Control command Syntax (From PC to Projector)
 [H][AC][SoP][CRC][ID][SoM][COMMAND]
- Example: Power ON Command (Send low byte firstly)
 --> 0xBE, 0xEF, 0x10, 0x05, 0x00, 0xC6, 0xFF, 0x11, 0x11, 0x01, 0x00, 0x01
- Control Commands List

To view the latest RS232 code, go to the Dell Support site at: support.dell.com.



	Resolution	Refresh Rate (Hz)	Hsync Frequency (KHz)	Pixel Clock (MHz)	
	640 x 350	70.087	31.469	25.175	
	640 x 480	59.940	31.469	25.175	
	640 x 480 p60	59.940	31.469	25.175	
	720 x 480 p60	59.940	31.469	27.000	
	720 x 576 p50	50.000	31.250	27.000	
	720 x 400	70.087	31.469	28.322	
	640 x 480	75.000	37.500	31.500	
	848 x 480	60.000	31.020	33.750	
	640 x 480	85.008	43.269	36.000	
	800 x 600	60.317	37.879	40.000	
	800 x 600	75.000	46.875	49.500	
	800 x 600	85.061	53.674	56.250	
	1024 x 768	60.004	48.363	65.000	
	1280 x 720 p50	50.000	37.500	74.250	
	1280 x 720 p60	60.000	45.000	74.250	
	1920 x 1080 i50	50.000	28.125	74.250	
	1920 x 1080 i60	60.000	33.750	74.250	
	1280 x 720	59.855	44.772	74.500	
	1024 x 768	75.029	60.023	78.750	
	1280 x 800	59.810	49.702	83.500	
	1366 x 768	59.790	47.712	85.500	
	1360 x 768	60.015	47.712	85.500	
	1024 x 768	84.997	68.677	94.500	
	1440 x 900	59.887	55.935	106.500	
	1152 x 864	75.000	67.500	108.000	
	1280 x 960	60.000	60.000	108.000	
	1280 x 1024	60.020	63.981	108.000	
	1152 x 864	85.000	77.095	119.651	
	1400 x 1050	59.978	65.317	121.750	
	1280 x 800	84.880	71.554	122.500	
FixYourD	1280 x 1024	75.025	79.976	135.000	
FIXTOULD	insored by DM	74.984	70.635	136.750	
Disco	1680 x 1050 1280 x 960	59.954 85.002	65.290 85.938	146.250	0
THE TR	USTED1920 x 1080 E	R P 60.000 CTC	R 67.500	D A (148.500) OR ES	
	1400 x 1050	74.867	82.278	156.000	
	1280 x 1024	85.024	91.146	157.000	
	1440 x 900	84.842	80.430	157.000	
	1600 x 1200	60.000	75.000	162.000	

Compatibility Modes (Analog/Digital)

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).



NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell[™] provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 1 Visit support.dell.com.
- 2 Verify your country or region in the Choose A Country/Region dropdown menu at the bottom of the page.
- Click Contact Us on the left side of the page. 3
- 4 Select the appropriate service or support link based on your need.
- Choose the method of contacting Dell that is convenient for you. 5



Appendix: Glossary

ANSI LUMENS — A standard for measuring the brightness. It is calculated by dividing a square meter image into nine equal rectangles, measuring the lux (or brightness) reading at the center of each rectangle, and averaging these nine points.

ASPECT RATIO — The most popular aspect ratio is 4:3 (4 by 3). Early television and computer video formats are in a 4:3 aspect ratio, which means that the width of the image is 4/3 times the height.

Brightness — The amount of light emitting from a display or projection display or projection device. The brightness of projector is measured by ANSI lumens.

Color Temperature — The color appearance of white light. Low color temperature implies warmer (more yellow/red) light while high color temperature implies a colder (more blue) light. The standard unit for color temperature is Kelvin (K).

Component Video — A method of delivering quality video in a format that consists of the luminance signal and two separate chrominance signals and are defined as Y'Pb'Pr' for analog component and Y'Cb'Cr' for digital component. Component video is available on DVD players.

Composite Video — A video signal that combines the luma (brightness), chroma (color), burst (color reference), and sync (horizontal and vertical synchronizing signals) into a signal waveform carried on a single wire pair. There are three kind of formats, namely, NTSC, PAL and SECAM.

Compressed Resolution — If the input images are of higher resolution than the native resolution of the projector, the resulting image will be scaled to fit the native resolution of the projector. The nature of compression in a digital device means that some image content is lost.

Contrast Ratio — Range of light and dark values in a picture, or the ratio between their maximum and minimum values. There are two methods used by the projection industry to measure the ratio:

1 *Full On/Off* — measures the ratio of the light output of an all white image (full **FixYourDP.com**) and the light output of an all black (full off) image.

2 ANSI — measures a pattern of 16 alternating black and white rectangles. The average light output from the white rectangles is divided by the average light THE Toutput of the black rectangles to determine the ANSI contrast ratio. ESSORIES

Full On/Off contrast is always a larger number than ANSI contrast for the same projector.

dB — decibel — A unit used to express relative difference in power or intensity, usually between two acoustic or electric signals, equal to ten times the common logarithm of the ratio of the two levels.

Diagonal Screen — A method of measuring the size of a screen or a projected image. It measures from one corner to the opposite corner. A 9 ft high, 12 ft wide, screen has a diagonal of 15 ft. This document assumes that the diagonal dimensions are for the traditional 4:3 ratio of a computer image as per the example above.

DHCP — Dynamic Host Configuration Protocol — A network protocol that enables a server to automatically assign a TCP/IP address to a device.

DLP[®] — Digital Light Processing[™] — Reflective display technology developed by Texas Instruments, using small manipulated mirrors. Light passing through a color filter is sent to the DLP mirrors which arrange the RGB colors into a picture projected onto screen, also known as DMD.

DMD — Digital Micro-Mirror Device — Each DMD consists of thousands of tilting, microscopic aluminum alloy mirrors mounted on a hidden yoke.

DNS — Domain Name System — An internet service that translates domain names into IP addresses.

Focal Length — The distance from the surface of a lens to its focal point.

Frequency — It is the rate of repetition in cycles per seconds of electrical signals. Measured in Hz (Hertz).

HDCP — High-Bandwidth Digital-Content Protection — A specification developed by Intel[™] Corporation to protect digital entertainment across digital interface, such as DVI and HDMI.

HDMI — High-Definition Multimedia Interface — HDMI carries both uncompressed high definition video along with digital audio and device control data in a single connector.

Hz (Hertz) — Unit of frequency.

Keystone Correction — Device that will correct an image of the distortion (usually a wide-top narrow-bottom effect) of a projected image caused by **Expression** to screen angle.

Maximum Distance — The distance from a screen the projector can be to cast an image that is usable (bright enough) in a fully darkened room.

Maximum Image Size — The largest image a projector can throw in a darkened **RIES** room. This is usually limited by focal range of the optics.

Minimum Distance — The closest position that a projector can focus an image onto a screen.

NTSC — National Television Standards Committee. North American standard for video and broadcasting, with a video format of 525 lines at 30 frames per second.

PAL — Phase Alternating Line. A European broadcast standard for video and broadcasting, with a video format of 625 lines at 25 frames per second.

Reverse Image — Feature that allows you to flip the image horizontally. When used in a normal forward projection environment text, graphics, etc. are backwards. Reverse image is used for rear projection.

RGB — Red, Green, Blue — typically used to describe a monitor that requires separate signals for each of the three colors.

S-Video — A video transmission standard that uses a 4-pin mini-DIN connector to send video information on two signal wires called luminance (brightness, Y) and chrominance (color, C). S-Video is also referred to as Y/C.

SECAM — A French and international broadcast standard for video and broadcasting, closely related to PAL but with a different method of sending color information.

SVGA — Super Video Graphics Array — 800 x 600 pixels count.

SXGA — Super Extended Graphics Array, — 1280 x 1024 pixels count.

UXGA — Ultra Extended Graphics Array — 1600 x 1200 pixels count.

VGA — Video Graphics Array — 640 x 480 pixels count.

XGA — Extended Video Graphics Array — 1024 x 768 pixels count.

Zoom Lens — Lens with a variable focal length that allows operator to move the view in or out making the image smaller or larger.

Zoom Lens Ratio — Is the ratio between the smallest and largest image a lens can project from a fixed distance. For example, a 1.4:1 zoom lens ratio means that a 10 foot image without zoom would be a 14 foot image with full zoom.



Index

A

Adjusting the Projected Image 20 Adjusting the Projector Height 20 lower the projector Elevator button 20 Elevator foot 20 Tilt adjustment wheel 20 Adjusting the Projector Zoom and Focus 21 Focus ring 21 Zoom tab 21 Audio Input 43 Audio output connector 9 Audio Settings 43

C

Capture Screen 42 Changing the Lamp 67 Closed Caption 46 Connecting the Projector Composite video cable 14 Connecting a Computer with a RS232 cable 12 Connecting with a Component Cable 15

Connecting with a Composite Cable 14 Connecting with an HDMI Cable 16 Connecting with an S-video Cable 13 HDMI cable 16, 17, 18 Power cord 10, 11, 12, 13, 14, 15, 16, 17, 18 RS232 cable 12 S-video cable 13 To Computer 10 USB to USB cable 10 VGA to VGA cable 10, 11 VGA to YPbPr cable 15

Connection Ports Audio input connector 9 Audio-B left-channel input connector 9 Audio-B right-channel input connector 9 HDMI connector 9 Microphone connector 9 Power cord connector 9 RS232 connector 9 Security cable slot 9 S-video connector 9 USB remote connector 9 VGA-A input (D-sub) connector

VGA-B input (D-sub) connector 9

Hoop-through) 9ACCESSORIES

VGA-A output (monitor

360

Contact Dell 6, 63, 67

Control Panel 23

D

Dell contacting 74

Μ

Main Unit 7 Control panel 7 Elevator button 7 Focus ring 7 IR receiver 7 Lens 7 Zoom tab 7 Menu Position 42 Menu Settings 42 Menu Timeout 42 Menu Transparency 42 Mute 43

0

On-Screen Display 31 Auto-Adjust 33 Display (in PC Mode) 35 Display (in Video Mode) 37 Input Select 32 Set Up 38

Ρ

Password 44 phone numbers 74 Power Saving 43 Power Settings 43 Powering On/Off the Projector Powering Off the Projector 19 Powering On the Projector 19

Q

Quick Shutdown 44

R

Remote Control 26 IR receiver 24 Reset 43 Reset, Factory 47 RJ45 connector 9

S

Screen 43

Screen Settings 42

SLamp 38 Main Menu 3 Lource For PROJ Speaker 43MPS AND ACCESSORIES

Others 41 Picture (in PC Mode) 33 Picture (in Video Mode) 34

Specifications Audio 70 Brightness 69 Color Wheel Speed 69 Contrast Ratio 69 Dimensions 70 Displayable Color 69 Environmental 70 I/O Connectors 70 Lamp 71 Light Valve 69 Noise Level 70 Number of Pixels 69 Power Consumption 69 Power Supply 69 **Projection Distance 69** Projection Lens 69 Projection Screen Size 69 RS232 Protocol 72 Uniformity 69 Video Compatibility 69 Weight 70

support

contacting Dell 74

Т

telephone numbers 74 Test Pattern 47 Troubleshooting 61 Contact Dell 61 FixYourDLP.com

Discount-Merchant.com (800) 281-8860 THEVALIATED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

Sponsors:

FixYourDLP.com

Sponsored by DM

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com