

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com





BenQ PB8230 PB8220 PB8120 User's Guide



Copyright

Copyright © 2003 by BENQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BENQ Corporation.

Disclaimer

BENQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Furthermore, BENQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of BENQ Corporation to notify any person of such revision or changes.

Fill this in!!

In case service is needed in the future, record the information described below. The serial number is on the back of the product.

Projector Information

Product Name:	PB8230/ PB8220/ PB8120	
Serial Number:		
Date of Purchase:		

Dealer Information

1	FixYourDLP.com Dealer: Sponsored by DM		_
	Telephone Number:	METCHANT.COM (800) 281-886 OURCE FOR PROJECTOR LAMPS AND ACCESSORIES	0
	Address:		

Table of Contents

Introduction	I
Safety Instructions	I
Warranty	2
Limited Warranty	2
Safety Regulations	3
FCC Statement	
Shipping Contents	4
Optional Accessories	4
Projector Description	5
Projector External Control Panel Adjuster	6 7
Projector Features	
Remote Control Description	
Remote control effective range	
Installation	10
Screen Size	10
Connecting to Various Equipment	
Operation	13
Start Up	13
Digital Keystone Correction	
Auto Adjustment	
Source Selection	
Menu System	15
I. Display Menu	16
2. Image Menu	
FixYouSourceomenu 4. Control Menu	
Shutdown THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCI Maintenance	8-12086 SSORIES 22
Lamp Information	22

Lamp LED Indicators Lamp Replacement Resetting Lamp Hours	23
Temp Information	
Service Information	
Accessories (included in the standard package) Optional Accessories (not included in the standard package) Ordering Parts or Getting Information	25
Troubleshooting	26
Common Problems & Solutions	
Specifications	28
Projector Specifications	
Timing Chart	
Dimensions	30



INTRODUCTION

▲ Caution

TO PREVENT SHOCK, DO NOT OPEN THE CABINET. NO USER –SER-VICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. PLEASE READ THIS USER'S GUIDE BEFORE YOU OPER-ATE YOUR PROJECTOR. SAVE THIS USER'S GUIDE FOR FUTURE REF-ERENCE.

Safety Instructions

- 1. Read this user's guide before you operate your projector and save it for future reference.
- 2. The lamp becomes extremely hot during operation. Allow the projector to cool for approximately 45 minutes prior to removing the lamp assembly for replacement. Do not operate lamps beyond the rated lamp life. Excessive operation of lamps beyond the rated life could cause them to explode on rare occasions.
- 3. Never replace the lamp assembly or any electronic components unless the projector is unplugged.
- 4. To reduce the risk of electric shock, do not disassemble this appliance. Take it to a qualified technician when service or repair is required. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
- 5. Do not place this product on an unstable cart, stand, or table. The product may fall, sustaining serious damage.
- 6. This product is capable of displaying inverted images for ceiling mount installation. Please use suitable equipment for mounting the unit and ensure it is securely installed.

▲ Caution

- Always open the lens shutter or remove the lens cap when the projector lamp is on.
- FixYourDLPDomot look straight at the projector lens during operation. The intense

 In some countries, the line voltage is NOT stable. This projector is designed to operate safely within a bandwidth of 110 to 230 volts, but could fail if power cuts or surges of more than 10 volts occur. In these

high-risk areas, it is recommended that a power stabilizer unit be used in conjuction with this projector.

Save this user's guide: The information contained in this manual will assist you in operating and maintaining your personal projector.

Warranty

Limited Warranty

BENQ warrants this product against any defects in material and workmanship, under normal usage and storage.

Exclusion to Warranty: The lamps are considered a consumable item and are warranted for 90 days or 500 hours, whichever occurs first. Proof of purchase date will be required with any warranty claim. In the event this product is found to be defective within the warranty period, BENQ's only obligation and your exclusive remedy shall be replacement of any defective parts (labor included). To obtain warranty service, immediately notify the dealer from which you purchased the product of any defects. Important: The above warranty shall be void if the customer fails to operate the product in accordance with BENQ's written instructions. This warranty gives you specific legal rights, and you may have other rights which vary from country to country. For other information, please refer to BenQ Warranty Information Book.



Safety Regulations

FCC Statement

CLASS A: This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class "A" computing device pursuant to Subpart B of Part 15 of the FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his/her own expense will be required to take whatever measures may be required to correct the interference. **CLASS B**: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

EEC Statement

This machine was tested against the 89/336/EEC (European Economic Community) for EMC (Electro Magnetic Compatibility) and fulfills these requirements.




Shipping Contents

The Projector is shipped with the cables required for connection to standard PC or laptop computers. Carefully unpack and verify that you have all the items shown below. If any of these items are missing, please contact personnel at the place of purchase.




Projector Description

Projector

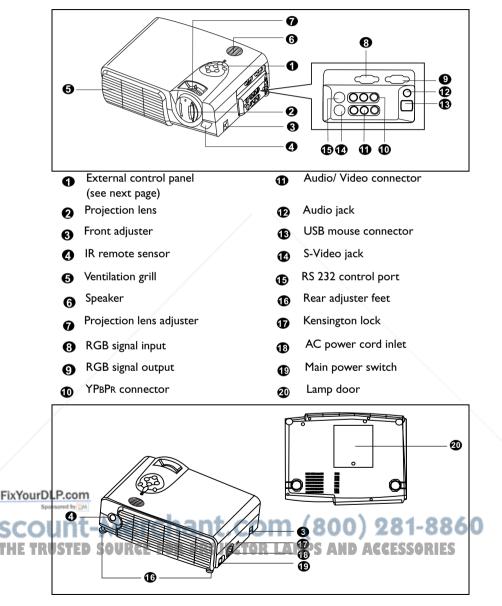

External Control Panel

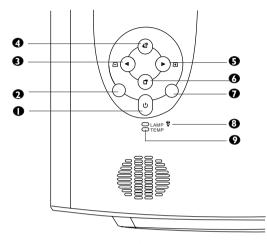

Power

Presses and holds the **Power** key to turn the projector on or off.

Auto

Automatically determines the best picture settings for current received signals.

Left/ Keystone -
 D Exit

G Right/ Keystone + G Menu

Menu will display the menu system on screen. Press Menu again to access the sub-menus. Left and Right help you navigate among choices and settings in the menus and sub-menus. However, when the Conscreen menu is not activated, the

Left and Right buttons will function

Source

Selects signal sources from among PC, Video, S-Video and YPBPR.

B Lamp Indicator

The Lamp Indicator will light up when the lamp needs service, cooling or replacement. See "Lamp Information" on page 22 for more detailed information.

Temp indicator

The Temp indicator will flash when the system temperature is too high, which may occur if the projector is operated improperly. See "Temp Information" on page 24 for more detailed information.


SCOU as Keystone +/- hot keys. COM (800) 281-8860 THE TRUS Press the Exit button to go back to TOR LAMPS AND ACCESSORIES the main menu. Press Exit again to leave the menu system.

xYourDL

Adjuster

The projector is equipped with 2 quick-release adjuster feet. Push the buttons to adjust its tilt angle.

- I. Lift the projector up and press the adjuster button to release the adjuster.
- 2. The adjuster will drop into position and be locked.

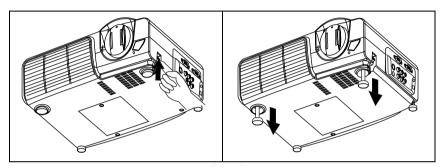

Projector Features

The projector integrates high-performance optical engine projection and a user-friendly design to deliver high reliability and ease of use.


The projector offers the following features:

- Small and light for portability
- Full-function remote control with laser pointer/ remote mouse function
- Hight quality manual zoom lens
- One-key auto-adjustment to display the best picture quality
- Easy digital keystone correction through hot keys to correct distorted images
- Adjustable color balance control for data/video display
- Ultra-high brightness projection lamp
- Ability to display 16.7 million colors
- On-screen menus in 8 languages: English, French, German, Italian, Spanish, Korean, Simplified Chinese, and Traditional Chinese.
- Switchable Normal/ Video mode for data/ video display
- Powerful AV function to provide high quality AV picture
- HDTV compatibility (YPBPR)

FixYour Deteor the brightness of the projected image will vary depending on the ambient lighting conditions and contrast/brightness settings.

ISCOUNT-MERCHANT.COM (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES


Remote Control Description

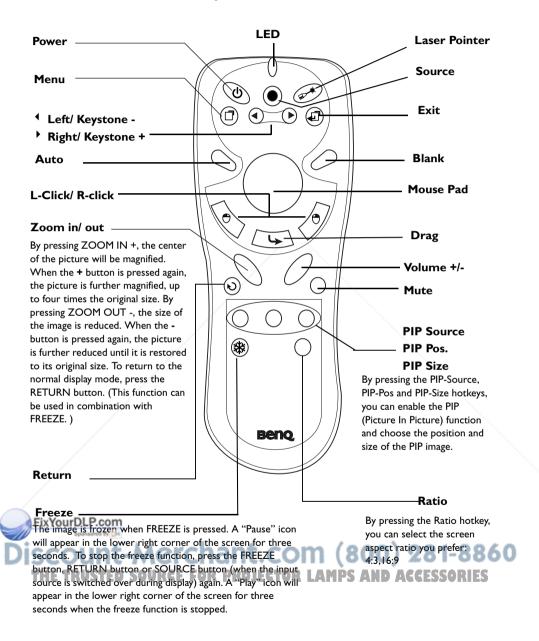

Remote control effective range

The remote sensors are located on the front and the back of the projector. It can function in a range of 30 degrees horizontally and 30 degrees vertically relative to a line that is a right angle to the remote sensors. The distance between the remote control and the remote sensors must be shorter than 6 meters (19.5 feet).

Installing or Replacing Batteries

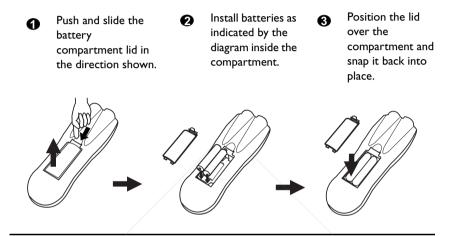

\land Caution


Avoid excessive heat and humidity. There may be danger of an explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.



INSTALLATION

Screen Size

Place the projector at the required distance from the screen according to the desired picture size (see the table below).

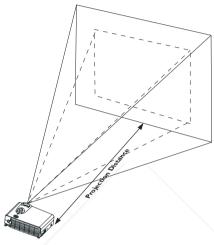

• PB8230/ PB8220 (XGA) screen size chart

	Distance from Diagonal m						Distanc	e from	Dia	agonal m	easureme	nt
		een		mum om	Maximum zoom		scr		Minimun	n zoom	Maximur	n zoom
	feet	inches	feet	inches	feet	inches	meters	cm	meters	cm	meters	cm
ľ	4	48	2.49	29.9	3.05	36.6	I	100	0.62	62.2	0.76	76.2
	6	72	3.73	44.8	4.57	54.9	1.5	150	0.93	93.3	1.14	114.3
	8	96	4.98	59.7	6.10	73.2	2	200	1.24	124.5	1.52	152.4
	10	120	6.22	74.7	7.62	91.4	2.5	250	1.56	155.6	1.91	190.5
ľ	12	144	7.47	89.6	9.14	109.7	3	300	1.87	186.7	2.29	228.6
	14	168	8.71	104.5	10.67	128.0	3.5	350	2.18	217.8	2.67	266.7
	16	192	9.96	119.5	12.19	146.3	4	400	2.49	248.9	3.05	304.8
/	18	216	11.20	134.4	13.72	164.6	4.5	450	2.80	280.0	3.43	342.9
	20	240	12.45	149.4	15.24	182.9	5	500	3.11	311.2	3.81	381.0
Fix	o u? DI	.P.260m	13.69	164.3	16.76	201.2	5.5	550	3.42	342.3	4.19	419.1
	24 _{Spor}	288	14.94	179.2	18.29	219.5	6	600	3.73	373.4	4.57	457.2
~	26	312	16.18	194.2	19.81	237.7	6.5	650	4.04	404.5	4.95	495.3
20	28	336	17.42	209.1	21.34	256.0		700	4.36	435.6	5.33	533.4
THE	- 30	360	18.67	224.0	22.86	274.3	7.5	750	4.67	466.7	5.72	571.5
	32	384	19.91	239.0	24.38	292.6	8	800	4.98	497.8	6.10	609.6

Distant		Diagonal measurement					Distant		Dia	ıgonal m	easureme	nt
	ce from reen	Minimum Maximum zoom zoom		-		Distanc scre		Minimun	n zoom	Maximur	n zoom	
feet	inches	feet	inches	feet	inches		meters	cm	meters	cm	meters	cm
4	48	1.96	23.5	2.40	28.7		I	100	0.49	48.9	0.60	59.9
6	72	2.93	35.2	3.59	43.I		1.5	150	0.73	73.4	0.90	89.8
8	96	3.91	47.0	4.79	57.5		2	200	0.98	97.8	1.20	119.8
10	120	4.89	58.7	5.99	71.9		2.5	250	1.22	122.3	1.50	149.7
12	144	5.87	70.4	7.19	86.2		3	300	1.47	146.7	1.80	179.7
14	168	6.85	82.2	8.39	100.6		3.5	350	1.71	171.2	2.10	209.6
16	192	7.83	93.9	9.58	115.0		4	400	1.96	195.7	2.40	239.6
18	216	8.80	105.7	10.78	129.4		4.5	450	2.20	220.1	2.70	269.5
20	240	9.78	117.4	11.98	143.7		5	500	2.45	244.6	2.99	299.5
22	264	10.76	129.1	13.18	158.1		5.5	550	2.69	269.0	3.29	329.4
24	288	11.74	140.9	14.37	172.5		6	600	2.93	293.5	3.59	359.4
26	312	12.72	152.6	15.57	186.9		6.5	650	3.18	317.9	3.89	389.3
28	336	13.70	164.3	16.77	201.2		7	700	3.42	342.4	4.19	419.3
30	360	14.67	176.1	17.97	215.6		7.5	750	3.67	366.8	4.49	449.2
32	384	15.65	187.8	19.17	230.0		8	800	3.91	391.3	4.79	479.1

• PB8120 (SVGA) screen size chart

Connecting to Various Equipment

HDTV description

The projector is capable of displaying various High Definition TV display modes. Some of these sources are:

- Digital-VHS (D-VHS) player
- DVD player
- Satellite Dish HDTV receiver
- DTV tuners

Most of these sources will provide an analog component video output, a standard VGA output, or a YPBPR (default) format.

The projector is capable of accepting HDTV data through a YPBPR connector. Use a HDTV cable that came with your projector to display HDTV images.

The following standards are supported in the HDTV function:

• 480i

480p

720p


1080i

FixYourBlassorefer to "Menu System" on page 15 for information on the HDTV OSD selections.

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Connecting to Various Equipment

It only takes a few seconds to connect your projector to your desktop or notebook computer, VCR, or other systems. However, a Mac adapter (an optional accessory) is needed for connection to Macintosh computers.

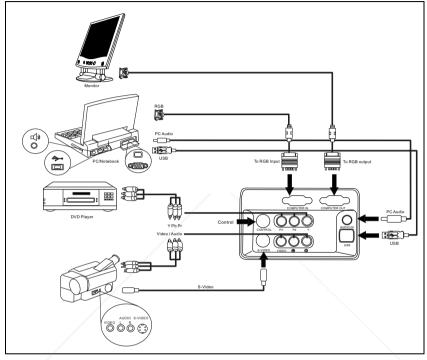




OPERATION

Start Up


I. Plug the power cord into a wall socket.

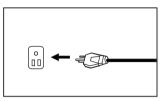

2. Turn on the main power switch.



3. Press and hold POWER to start the unit. The back-lit POWER key flashes green and stays green when the power is turned on.

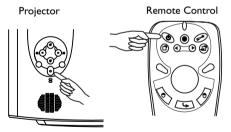


FixYour When the power is turned off, there is a 120-second cooling period before the projector can be re-started.)

DISCO⁴, Switch on all connected equipment. OM (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES


Digital Keystone Correction

Keystoning refers to the situation where the projected image is noticeably wider at either the top or bottom. To correct this, press KEYSTONE +/- (hot key) on the control panel of the projector or on the remote control, and then adjust the sliding bar labeled Keystone, as needed. Press + to correct keystoning at the top of the image. Press - to correct keystoning at the bottom of the image.

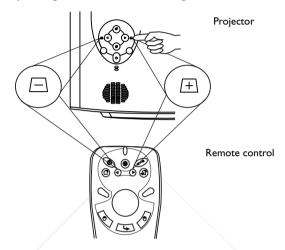

Auto Adjustment

In some cases, you may need to optimize the picture quality. To do this, press the AUTO key on the control panel of the projector or on the remote control. Within 3 seconds, the built-in Intelligent Auto Adjustment function will re-adjust settings to provide the best picture quality.

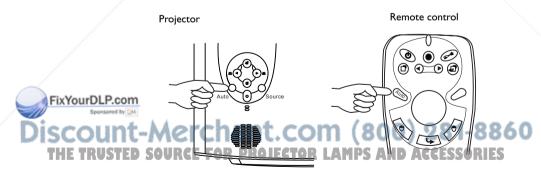

Source Selection

When several input sources are available, press the SOURCE key to make a selection from the control panel of the projector or the remote control.

Projector

Remote control

Menu System

Press Menu for the main menu, and then press ⁴ or ^b to select a sub-menu. Press Menu again to select items in the sub-menu.

	-		/				
	Menu Bar	\mathbb{C}		Ø	<u></u>		
	Sub-menu	Display	Image	Source	Control	PIP	
	/	Keystone	Ratio	Mirror	Langauge	Main page:	
		Brightness	H-position	Source	OSD	PIP Source	
	PC	Contrast	V-position	Volume	Setup	PIP Size	
		Phase	Color Temp	Treble	Video Mode	PIP Pos.	
	/	H. Size	Information	Bass	Reset	H. Position	
			Ratio	Mute	Lamp Hour	V. Position	
	M/DL/D		Color			More Options	
	Y/Pb/Pr		Tint				
FixY	ourDLP.com		Color Temp			Sub Page:	
	Sponsored by DM	Keystone	Ratio			Brightness	
isc	OVideot-	Brightness	System C	om (8	300) 2	Contrast Color	0
THE	TRUSTED S	Contrast	Sharpness Color Temp	DR LAMPS	AND ACC	EtinoRIES	
	S-Video	Tint	Information			Sharpness	
	3- ¥ 1000	1.1110	mormation			System	

I. Display Menu

	FUNCTION	DESCRIPTION
	Keystone	Corrects any keystoning of the image.
	Brightness	Adjusts the brightness of the image.
	Contrast	Adjusts the degree of difference between dark and light in the image.
	Phase	Adjusts to avoid the occurrence of flicker.
Disc	H. Size fourDLP.com sponsore by DM	Adjusts to fit in the desired image size. *This function is not available when the input mode is Video or S- Video. Increases or decreases the color range (R, G, B) of the image. *This function is not available when the input mode is PC.
THI	E TRUSTED SOU	Adjusts the image to make it appear more red or blue. SONITS *This function is not available when the input mode is PC.

n

2. Image Menu

FUNCTION	DESCRIPTION
Ratio	Users have 3 options for the image ratio. 1. 4:3 2. 16:9 3. 1:1 *1:1 is available only when the input mode is PC.
H-position	Adjusts the horizontal position of the projected image.
V-position	Adjusts the vertical positon of the projected image.
Color Temp.	Adjusts the color temperature to fit your preference.
Information	Shows the current resolution.
System	System information will be shown: I.NTSC 2. PAL 3.SECAM 4. YUV
Sharpness	Adjusts the image to make it look sharper or softer. *This function is not available when the input mode is PC or YPBPR.
	Increases or decreases the color range (R, G, B) of the image. *This function is not available when the input mode is PC.
OUTINE-N	Adjusts the image to make it appear more red or blue. *This function is available only when the selected System is NTSC.

3. Source Menu

FUNCTION		SCRIPTION
	1. Default	2. Ceiling mountedprojection
Mirror	3. Rear screen projection	4. Ceiling mounted and rear- screen projection
Source	when several sources are ava	n among PC, Video, S-Video, and YPBPR, ailable.
Volume	Adjusts the volume level.	
Treble	Adjusts the treble level.	
ixYourDLIPessin Sponsored by DM COUNT-M HE TRUSTED SOL	Adjusts the bass level.	m (800) 281-886
Mute		

Di

4. Control Menu

FUNCTION	DESCRIPTION
Language	Language sets the language for the OSD control menus. Use the \checkmark / \blacktriangleright key to select the desired language from among English, French, German, Italian, Spanish, Korean, Simplified Chinese and Traditional Chinese.
	OSD Pos.
	Selects a desired OSD position.
OSD	OSD Time Sets the length of time the OSD will remain active after the last time you pressed the button. The range is from 5 to 60 seconds in 5-second increments.
	Source Scan
	When selected, activates the Source scan function.
	Keystone Hold
	When selected, preserves the last keystone correction value even when the projector is restarted.
	Mirror Hold
	When selected, preserves the last mirror correction value even when the projector is restarted.
Setup	Blank Time
Setup	Determines the length of time before the projector is shut off when Blank is activated.
	Auto Off
	Sets the length of time before the system is shut off when no input is detected.
	User Logo
	Enables the user to define his/her own logo screen that will display during strat-up. Three modes are available: Default (BENQ logo), black screen and blue screen.
Video Mode	Selects video mode.
YourDLP.coneset	Returns all settings to their factory preset values.
COLLamp Hourer	Shows lamp usage time. 800 281-88 FOR PROJECTOR LAMPS AND ACCESSORIES


5. PIP Menu

These functions are available only when the input mode is PC and the PIP source is Video or S-Video.

FUNCTION	DESCRIPTION
PIP Source	Selects the source for the PIP.
PIP Size	Enables use of the 1 key to scroll through the four alter- natives: Off, Small, Medium, Large.
PIP Position	Selects a desired position for the PIP.
H. Position	Adjusts the horizontal position of the PIP image.
V. Position	Adjusts the vertical position of the PIP image.
More Options	Enables use of the 4 / • key to select more PIP functions including Brightness, Contrast, Color, Tint, Sharpness and System.
Brightness	Adjusts the brightness of the PIP image.
FixYourDLP.com	Adjusts the degree of difference between dark and light for the PIP image. Increases or decreases the color range (R, G, B) of the image.
HE TRUSTED SOURCE	Adjusts the image to make it appear more red or blue.
Sharpness	Adjusts the image to make it appear sharper or softer
System	Selects PIP image systems: Auto, NTSC, PAL, SECAM

Shutdown


1. Press and hold **POWER** and a warning message will appear. To turn off the projector, press **POWER** again.

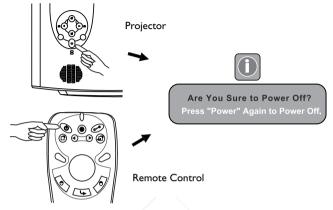

- 2. The fan will continue to run for approximately two minutes.
- 3. Turn off the main power switch.



4. Disconnect the power cord from the wall socket.

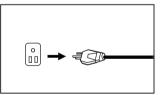

FixYourDLP.com

Caution Please do not unplug the power cord before POWER is shut down or durthe TRV ing the two-minute cooling process.

If the projector is not properly shut down, to protect the lamp, the system will detect this and cool the lamp for two minutes automatically before turning on again.

MAINTENANCE

Lamp Information

Use and Replacement of the Lamp

When the Lamp Indicator lights up red or a message appears suggesting the time of lamp replacement, please install a new lamp or consult your dealer. An old lamp could cause a malfunction in the projector and in rare instances may even explode.

Lamp LED Indicators

Lamp Life Indicators	When the LED lights up red, it is warning you that lamp uage has exceeded 2000 hours. Replace the projection lamp with a new one immediately.
The Lamp is not	LED lights up red.
properly attached	
The temperature is too	When the projector's internal temperature is too high
high	for the projector to operate safely, the LED blinks
	orange and the lamp turns off automatically. The LED
	keeps blinking while the unit is off.
	If the LED light is off, the operation and temperature of
	the projector's lamp are normal.

\land Caution

The LAMP indicator will light up if the lamp becomes too hot. Turn off the power and let the projector cool for 45 minutes. If the LAMP indicator is still red when turning the power on, please contact your dealer.




Lamp Replacement

\land Caution

To reduce the risk of electrical shock, always turn off the projector and disconnect the power cord before changing the lamp.

- Turn off the projector. Disconnect the power cord from the outlet and the projector.
- Loosen the screw and remove the lamp cover. If the lamp is hot, avoid burns by waiting 45 minutes until the lamp has cooled.
- 3. Loosen the 3 screws. (It is strongly recommended that you use а magnetic-head screwdriver.) Pull the handle to remove the lamp housing. If the screws are not loosened completely, they could injure your fingers. Do not insert your hand into the box after the lamp is removed. If you touch the optical components inside. this could cause color unevenness in projected images.
- Replace the lamp with a new one. Insert it into the projector, and tighten the screws firmly. Loose screws may cause a bad connection, which may result in malfunction.
- 5. Re-install the lamp cover and tighten the screw. Do not turn on the power with the lamp cover removed. Whenever the lamp is FixYourDLP. replaced, reset the total lamp operation time. Do not reset if the lamp is not replaced as this could THE TRUS cause damage. FOR PROJECTOR LA

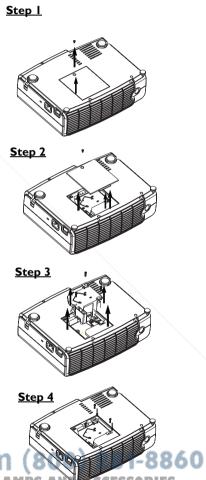

▲ Caution

To reduce the risk of severe burns, allow the projector to cool for at least 45 minutes before replacing the lamp.


To reduce the risk of injuries to fingers and damage to internal components, use caution when removing lamp glass that has shattered into sharp pieces.

To reduce the risk of injuries to fingers and/or compromising image quality by touching the lens, do not touch the empty lamp compartment when the lamp is removed.

This lamp contains mercury. Consult your local hazardous waste regulations to dispose of this lamp in a proper manner.

Resetting Lamp Hours

If you replace the lamp after 2000 hours of operation, please follow the instructions below within 10 minutes of powering on.

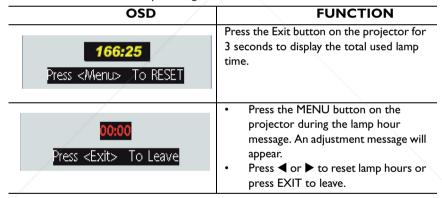

Temp Information

When the LED lights up, it is warning you of the following possible problems:

FixYourDLP.com internal temperature is too high.

2.55 The fans are not working.

DISCOTURN off the projector and contact qualified service personnel for further help. 8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Service Information

Accessories (included in the standard package)

DescriptionPa	art Number
Power cord (EU)	27.82718.281
Power cord (US)	27.01818.000
Power cord (UK)	27.01018.000
Signal cable	50.J0508.502
Video cable	50.72918.001
S-Video cable	50.72920.011
PC - PC audio cable	50.74405.501
Soft carry case	. 98.J3402.B11
HDTV cable	. 50.J7111.501
USB mouse cable	50.73213.501
Remote control	. 98.J3401.011
3-2 converter	22.91007.001

Optional Accessories (not included in the standard package)

Description of parts	. Part number
Mac adapter (switchable)	20.20118.A15
250W lamp module	65.J4002.001

Ordering Parts or Getting Information

For product information, product assistance, service information, or to order accessories, please visit the BENQ Corporation website at <u>http://www.BenQ.com</u>.

FixYourDLP.com Sponser by M Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

TROUBLESHOOTING

Common Problems & Solutions

PROBLEMS	TRY THESE SOLUTIONS
NO POWER	 Make sure the power cord is inserted snuged into the AC adapter socket. Make sure the power cord is inserted snuged into the power outlet. Toggle the power switch to the position "1". Wait two minutes after the projector is turned off before turning the projector back on.
NO PICTURE	 Check for the proper input source. Ensure all cables are connected properly. Adjust the brightness and contrast. Remove the lens cap.
TRAPEZOID IMAGE ON THE SCREEN	 Reposition the unit to improve its angle on the screen. Use the Keystone correction key on the control panel of the projector or the remote control unit.
POOR COLOR	Select the correct video system.Adjust brightness, contrast, or saturation.
BLURRED IMAGE	 Press Auto on the control panel of the projector or the remote control unit to get better picture quality. Adjust the focus. Reposition the unit to improve its projection angle. Ensure the distance between the unit and screen is within the adjustment range of the lens.
REMOTE CONTROL DOES NOT WORK	 Replace the batteries with new ones. Make sure there is no obstacle between the remote control and the projector. Stand within 6 meters (19.5 feet) of the projector. Make sure nothing is blocking the front and rear receivers.

FixYourDLP.com Sponsored by M Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Status Messages

On-Screen Messages	Description
SEARCHING	Projector is searching for input.
ACQUIRING SIGNAL	Projector has identified the input signal and is running the auto image adjustment function.
OUT OF RANGE	Input signal frequency exceeds the projector's range.
LAMP WARNING - CHANGE LAMP AND RESET LAMP TIMER!	The lamp has been in operation for 1900 hours. Install a new lamp for optimal performance.
OUT OF LAMP USAGE TIME. YOU HAVE TO CHANGE THE LAMP!	The lamp has been in operation for 1980 hours, and the power will turn off after 20 hours.
OUT OF LAMP USAGE TIME. CHANGE THE LAMP!	The lamp has been in operation for over 2000 hours. The warning message will display for 30 seconds every 5 minutes after you turn on the projector and the power will turn off automatically after 10 minutes.



SPECIFICATIONS

Projector Specifications

Technical Specifications

Note: All specifications are subject to change without notice.


	General		
	Product name	Personal Proj	ector
	Model name	PB8230	1024X768 XGA
		PB8220	1024X768 XGA
		PB8120	800X600 SVGA
	Optical		
	Display system	I-CHIP DMD)
	Lens F/Number	F/2.6	
	Lamp	250W UHP I	amp
	Electrical		
	Power supply	AC100 ~ 240	V, 4.0A, 50/60 Hz (Automatic)
	Power consumption	330W (Max)	
	Mechanical		
	Dimensions	308 mm (W)	x 95 mm (H) x 238 mm (D)
	Operating temperature	10°C ~ 40°C	
	range		
	Weight	6.9 lbs (3.1 K	g)
	Input terminal		
	Computer input		
	RGB input	D-sub 15-pin	(female)
	Video signal input		
	S-VIDEO	Mini DIN 4-p	in port x l
	VIDEO	RCA jack x I	
	HDTV signal input	YPBPR RCA j	ack x3
	Audio signal input		
	LP. Aurdio	Mini jack ster	•
sp	Audio 2	RCA jack L, F	R x2
ISCO	Output MCICI	ant.co	om (800) 281-8860
THE TR	USB mouse connector	A/B series x I	OR LAMPS AND ACCESSORIES
	Speaker	2 watt x I	
	Control		
	RS-232C	9-pin x l	

Resolution	H Sync (kHz)	V Sync (Hz)	Remark
640x350	31.5	70.1	
640x400	37.9	85.1	VESA
720×400	31.5	70.0	
720×400	37.9	85.1	VESA
640x480	31.5	60.0	VESA
640x480	37.9	72.8	VESA
640x480	35	66.7	Macintosh
640x480	43.3	85.0	VESA
800×600	35.2	56.3	VESA
800×600	37.9	60.3	VESA
800×600	46.9	75.0	VESA
800×600	48.1	72.2	VESA
800×600	53.7	85.1	VESA
832x624	49.7	74.5	Macintosh
1024x768	48.4	60.0	VESA
1024x768	56.5	70.1	VESA
1024x768	60.0	75.0	VESA
1024x768	68.7	85.0	VESA
1280×1024	64.0	60.0	VESA

Timing Chart



DIMENSIONS

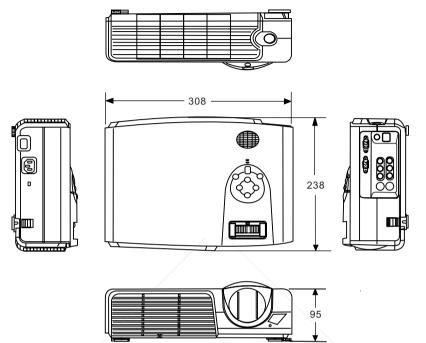

Unit: mm





This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com

