



# Disclaimer

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

## About FixYourDLP.com

FixYourDLP.com (<http://www.fixyourdlp.com>) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: <http://www.fixyourdlp.com>

Video Guides: <http://www.fixyourdlp.com/guides>

User Forums: <http://www.fixyourdlp.com/forum>

FixYourDLP's Fight Against Counterfeit Lamps:

<http://www.fixyourdlp.com/counterfeits>

## Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps:

<http://www.recycleyourlamp.org>

Lamp Research - The trusted 3rd party lamp research company:

<http://www.lampresearch.com>

Discount-Merchant.com – The worlds largest lamp distributor:

<http://www.discount-merchant.com>



**FixYourDLP.com**

Sponsored by 

## ASK Proxima Lamp Information Guide

<u>Model</u>	<u>Lumens</u>	<u>Lamp Life</u>	<u>How to Check Lamp Hours</u>	<u>How to Reset Lamp Hours</u>
<b>C110</b>	1500	3000 Hours	Press the Menu button and choose About. If the maximum lamp time of 3000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 3000 hours, the lamp will not light (Lamp Error LED will be Blinking). Press and Hold the "Volume +" and the "Volume -" buttons simultaneously for ten seconds. LED on keypad will reset, and you can power the lamp on.
<b>C160</b>	1700	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.
<b>C180</b>	2200	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.
<b>C410</b>	2800	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.
<b>C420</b>	3200	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.

## ASK Proxima Lamp Information Guide

<b>C440</b>	3500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and the "Volume +" button simultaneously for ten seconds, then release. Power LED on keypad will reset to green, and you can power the lamp on.
<b>C450</b>	4500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and the "Volume +" button simultaneously for ten seconds, then release. Power LED on keypad will reset to green, and you can power the lamp on.
<b>DP1000x</b>	1100	3000 Hours	Press Menu Button, choose Setup, then choose Service, then Info. At 2900 hours the Lamp LED lights.	Press Menu Button, choose Setup, then choose Service, then Reset Lamptimer. Press Select button again to confirm reset. This will turn off the Lamp LED also.
<b>DP1200x</b>	1100	2000 Hours	Press the Menu Button, then choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. If reached 2000 hour life, Press and Hold the "Volume+" button and then Press the "Volume -" button and hold for ten seconds to reset.
<b>DP2000s</b>	1000	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. If reached 2000 hour life, must Press and Hold the "Volume+" button and then Press the "Volume -" button to reset.
<b>DP2000x</b>	1300	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. If reached 2000 hour life, must Press and Hold the "Volume+" button and then Press the "Volume -" button to reset.
<b>DP2300</b>	45	40 Hours	N/A	N/A
<b>DP2400</b>	90	40 Hours	N/A	N/A

## ASK Proxima Lamp Information Guide

<b>DP2700</b>	90	40 Hours	N/A	N/A
<b>DP2710</b>	300	40 Hours	N/A	N/A
<b>DP2750B</b>	90	40 Hours	N/A	N/A
<b>DP2800</b>	90	40 Hours	N/A	N/A
<b>DP2810</b>	300	40 Hours	N/A	N/A
<b>DP2900</b>	600	400 Hours	N/A	N/A
<b>DP2910</b>	600	400 Hours	N/A	N/A
<b>DP4100</b>	C: 315, B&W: 1050	400 Hours	Press the Menu Button, then choose Advanced.	Press the Menu Button, choose Advanced, then choose Lamp Reset.
<b>DP4100Z</b>	C: 315, B&W: 1050	400 Hours	Press the Menu Button, then choose Advanced.	Press the Menu Button, choose Advanced, then choose Lamp Reset.
<b>DP4200Z</b>	C: 400, B&W: 1400	400 Hours	Press the Menu Button, then choose Advanced.	Press the Menu Button, choose Advanced, then choose Lamp Reset.
<b>DP5100</b>	300	750 Hours	Using the remote control, Press and Hold the "Call" button for five to ten seconds. The hours used will appear on the screen.	Lamp Hours can't be reset. Must keep track of hours on each lamp manually.
<b>DP5500</b>	500	1000 Hours	Press and Hold the "Reset" button on the keypad or the "Timer" button on the remote for three seconds.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
<b>DP5600</b>	500	1000 Hours	Press and Hold the "Level +" button on the keypad for 40+ seconds. The lamp hours remaining will be displayed.	With the projector displaying, press the Reset Switch on the connection panel with a ball point pen or paper clip. "RESET" will appear on the screen and then disappear, resetting the lamp timer.
<b>DP5610</b>	500	1000 Hours	Press and Hold the Down Arrow Button for 40+ seconds. The lamp hours remaining will be displayed.	Press the Menu Button, choose Setting, then choose Lamp Replace. Select Yes, and confirm again with Yes.

**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**

## ASK Proxima Lamp Information Guide

<b>DP5800</b>	650	2000 Hours	Press and Hold the "Reset" button on the keypad or the "Timer" button on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
<b>DP5900</b>	700	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP5950</b>	1250	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP6150</b>	1400	2000 Hours	Press the Menu Button, then choose Advanced, then Service. Select Info.	Press the Menu Button, choose Advanced, then choose Service, then Reset Lamp Timer and Press Select. Note: You must have an active source connected and displayed on the projector in order to reset the lamp.
<b>DP6155</b>	2000	2000 Hours	Press the Menu Button, then choose Advanced, then Service. Select Info.	Press the Menu Button, choose Advanced, then choose Service, then Reset Lamp Timer and Press Select. Note: You must have an active source connected and displayed on the projector in order to reset the lamp.
<b>DP6500x</b>	2500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.



**Discount Merchant.com (800) 267-8888**  
**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**

## ASK Proxima Lamp Information Guide

<b>DP6800</b>	600	2000 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
<b>DP6810</b>	900	2000 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
<b>DP6850</b>	1500	1500 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Timer" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.



FixYourDLP.com  
Sponsored by DM

**Discount-Merchant.com (800) 281-8860**  
**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**



## ASK Proxima Lamp Information Guide

<b>DP6850+</b>	1800	1500 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
<b>DP6860</b>	2400		Press and Hold the Reset button on the Keypad or the remote for five seconds. The Lamp Hours used will be displayed.	Press and Hold the "Reset" button on the keypad or on the remote control for three seconds, the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
<b>DP6870</b>	3500	2000 Hours	Press and Hold the Reset button on the Keypad or the remote for five seconds. The Lamp Hours used will be displayed.	Press and Hold the "Reset" button on the keypad or on the remote control for three seconds, the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
<b>DP8000</b>	3000	1500 Hours	Press Menu Button, choose Setup, then choose Service, then Info. When the lamp hours reach 2000 hours, the Alarm LED on the projector Lights.	Press Menu Button, choose Setup, then choose Service, then Lamp Timer Reset.
<b>DP8000HB</b>	3300	1500 Hours	Press Menu Button, choose Setup, then choose Service, then Info. When the lamp hours reach 2000 hours, the Alarm LED on the projector Lights.	Press Menu Button, choose Setup, then choose Service, then Lamp Timer Reset.

## ASK Proxima Lamp Information Guide

 
<b>DP8200x</b>	3200	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Setup, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.
<b>DP8300</b>	3500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and the "Volume +" button simultaneously for ten seconds, then release. Power LED on keypad will reset to green, and you can power the lamp on.
<b>DP8400</b>	4500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and the "Volume +" button simultaneously for ten seconds, then release. Power LED on keypad will reset to green, and you can power the lamp on.
<b>DP9100</b>	300	700 Hours	Press the Menu button, choose Projector, then choose "Lamp Hours". The number of hours used will be displayed.	Press the Menu button, choose Projector, then choose the Reset button under the Lamp Hours menu.
<b>DP9200</b>	500	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP9210</b>	600	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP9240</b>	1600	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.

**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**



## ASK Proxima Lamp Information Guide


<b>DP9250</b>	1400	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP9250+</b>	1900	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP9260</b>	2200	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP9260+</b>	2500	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP9270</b>	2600	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Counter Reset" and select. You will be asked to confirm the reset.
<b>DP9280</b>	3000	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>DP9290</b>	3500	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Counter Reset" and select. You will be asked to confirm the reset.
<b>DP9295</b>	4100	1500 Hours	Press and Hold the Up Arrow button on the keypad for 30+ seconds. The lamp hours will appear on the display. When the lamp life approaches the end, the Lamp Replacement Indicator lights Yellow.	Press the Menu button, choose Setting, then choose Lamp Counter Reset and press Select button. A message will appear asking if you want to reset the lamp timer, choose Yes and press the Select button. Another confirmation box appears and select Yes.
<b>DS1</b>	600	1000 Hours	Press the Menu Button, then Power, then choose Lamp Usage. The hours used will be displayed.	Press the Menu Button, then Power, then choose Lamp Usage. Highlight the Lamp Usage icon, the press and hold the Power On button on the remote control for ten seconds to reset the lamp timer back to zero.



**Discount-Merchant.com (800) 281-8860**  
**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**

## ASK Proxima Lamp Information Guide

<b>DS2</b>	800	1500 Hours	Press and Hold the "Exit" button on the keypad or remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Exit" button on the keypad or remote for three seconds. The lamp hours used will be displayed. While the lamp hours are being displayed, press the "Menu" button on the keypad or remote. The reset menu will appear. Using the Right or Left Arrow buttons on the keypad or remote, select "Reset".
<b>DX1</b>	1000	1000 Hours	Press the Menu Button, then Power, then choose Lamp Usage. The hours used will be displayed.	Press the Menu Button, then Power, then choose Lamp Usage. Highlight the Lamp Usage icon, the press and hold the Power On button on the remote control for ten seconds to reset the lamp timer back to zero.
<b>DX2</b>	1000	1500 Hours	Press and Hold the "Exit" button on the keypad or remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Exit" button on the keypad or remote for three seconds. The lamp hours used will be displayed. While the lamp hours are being displayed, press the "Menu" button on the keypad or remote. The reset menu will appear. Using the Right or Left Arrow buttons on the keypad or remote, select "Reset".
<b>DX3</b>	1100	2000 Hours	Press the Menu Button, choose Advanced, then choose Service, then Info.	Press the Menu Button, choose Advanced, then choose Service, then Lamptimer.
<b>Impression 1280</b>	450		Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
<b>Impression 750</b>	225	40 Hours	N/A	N/A
<b>Impression 8300</b>	650		Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
<b>Impression 860</b>	500	750 Hours	Press the Menu button, then choose Help, then About. The total hours used will be displayed in the window. Message will come on screen when you exceed the 750 hours, directing you to replace the lamp.	Lamp replacement only by qualified service personnel.
<b>Impression 880</b>	350	750 Hours	Press the Menu button, then choose Help, then About. The total hours used will be displayed in the window. A Red LED will light on the keypad and a message will come on screen when you exceed the 750 hours, directing you to replace the lamp.	Lamp replacement only by qualified service personnel.


**FixYourDLP.com**  
 750 Hours  
**Discount Projector Lamp**  
 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

## ASK Proxima Lamp Information Guide

<b>Impression 960</b>		750 Hours	Press the Menu button, then choose Help, then About. The total hours used will be displayed in the window. Message will come on screen when you exceed the 750 hours, directing you to replace the lamp.	Lamp replacement only by qualified service personnel.
<b>Impression 970</b>	400	750 Hours	Press the Menu button, then choose Help, then About. The total hours used will be displayed in the window. Message will come on screen when you exceed the 750 hours, directing you to replace the lamp.	Lamp replacement only by qualified service personnel.
<b>Impression A10</b>	1200	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
<b>Impression A2</b>	650	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
<b>Impression A4</b>	500	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
<b>Impression A4+</b>	750	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
<b>Impression A6</b>	450	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
<b>Impression A6+</b>	650	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
<b>LB10</b>	250	50 Hours	N/A	N/A
<b>LB20</b>	200	50 Hours	N/A	N/A
<b>LB30</b>	300	50 Hours	N/A	N/A
<b>LB30+</b>	300	50 Hours	N/A	N/A
<b>LS1</b>	600	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>LS2</b>	1200	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>LX</b>	800	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>LX1</b>	800	4000 Hours	Press the Menu Button, choose Advanced, then choose Service, then Service Info.	Press the Menu Button, choose Advanced, then choose Service, then Service Lamp Timer.

## ASK Proxima Lamp Information Guide

<b>LX2</b>	1200	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>M1</b>	1100	2000 Hours	Press the Menu Button, then choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. If reached 2000 hour life, Press and Hold the "Volume+" button and then Press the "Volume -" button and hold for ten seconds to reset.
<b>M2+</b>	1400	3000 Hours	Press Menu Button, choose Setup, then choose Service, then Info. At 2900 hours the Lamp LED lights.	Press Menu Button, choose Setup, then choose Service, then Reset Lamptimer. Press Select button again to confirm reset. This will turn off the Lamp LED also.
<b>PRO AV 9300</b>	1500	750 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the "Menu" and "Select" buttons simultaneously on the keypad for three seconds. Using the Up/Down Arrow buttons select "Lamp Age" and then press the "Select" button on the keypad or the "Left Mouse" button on the remote. Move the arrow to "Yes" and press the "Select" button on the keypad or the "Left Mouse" button on the remote.
<b>PRO AV 9310</b>	2100	750 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>PRO AV 9320</b>	2700	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>PRO AV 9350</b>	5000	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>PRO AV 9400</b>	2300	750 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>PRO AV 9400+</b>	3000	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.

**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**

## ASK Proxima Lamp Information Guide

<b>PRO AV 9410</b>	3700	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>PRO AV 9500</b>	5200	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Counter Reset" and select. Then choose which lamp to reset and select. You will be asked to confirm the reset.
<b>PRO AV 9550</b>	5800	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Counter Reset" and select. Then choose which lamp to reset and select. You will be asked to confirm the reset.
<b>PRO AV RX7000</b>	250 NITS	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
<b>PRO AV SX1</b>	1000	1000 Hours	"Lamp Replace" Indicator blinks on and off when the lamp hours reach 1000.	With the projector in Standby, press and hold the "Video", "Setting", and "Quick Align+" at the same time for six seconds or more. While the "Standby" and "Operate" indicators are on, press the "Video", "Setting", and "Computer" buttons at the same time. The "Standby" and "Operate" indicators will blink two seconds alternately, and after blinking the projector returns to the Standby state (the Standby Indicator lights up). This completes the lamp reset.
<b>S520</b>	800	2000 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
<b>S540</b>	1000	2000 Hours	Press the Menu Button, choose Setup, then choose Service, then Info	Press the Menu Button, choose Setup, then choose Service, then Reset Lamp Timer

## ASK Proxima Lamp Information Guide

<b>SV1</b>	700	4000 Hours	Press the Menu Button, choose Advanced, then choose Service, then Service Info.	Press the Menu Button, choose Advanced, then choose Service, then Service Lamp Timer.
<b>SV1+</b>	700	4000 Hours	Press the Menu Button, choose Advanced, then choose Service, then Service Info.	Press the Menu Button, choose Advanced, then choose Service, then Service Lamp Timer.
<b>X350</b>	1100	2000 Hours	Press the Menu Button, choose Setup, then Service and Info	Press the Menu Button, choose Setup, then choose Service, then Reset Lamp Timer
<b>X540</b>	1100	2000 Hours	Press the Menu Button, choose Setup, then Service and Info	Press the Menu Button, choose Setup, then choose Service, then Reset Lamp Timer



**Discount-Merchant.com (800) 281-8860**  
**THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES**





# Disclaimer

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

## About FixYourDLP.com

FixYourDLP.com (<http://www.fixyourdlp.com>) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: <http://www.fixyourdlp.com>

Video Guides: <http://www.fixyourdlp.com/guides>

User Forums: <http://www.fixyourdlp.com/forum>

FixYourDLP's Fight Against Counterfeit Lamps:

<http://www.fixyourdlp.com/counterfeits>

## Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps:

<http://www.recycleyourlamp.org>

Lamp Research - The trusted 3rd party lamp research company:

<http://www.lampresearch.com>

Discount-Merchant.com – The worlds largest lamp distributor:

<http://www.discount-merchant.com>



**FixYourDLP.com**

Sponsored by 