

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

## Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com



EMP-52

**EPSON**<sup>®</sup>





## Notations Used in This User's Guide

<b>Caution :</b> Indicates procedures which may result in damage or injury if su care is not taken.					
Tip :	Indicates additional information and points which may be useful to know regarding a topic.				
••	Indicates that an explanation of the underlined word or words in front of this symbol appears in the glossary of terms. Refer to the "Glossary" in the "Appendices". (p.81)				
Procedure	Indicates operating methods and the order of operations. The procedure indicated should be carried out in the order of the numbers.				

When "unit" or "projector" appears in the text of this *User's Guide*, it may refer to items which are accessories or optional equipment in addition to the main projector unit itself.





## **Unpacking the Projector**

When you unpack the projector, make sure that you have all these components. If any of the components are missing or incorrect, please contact the place of purchase.



[ Projector
(with lens cover)



Remote control
 (including a CR2025 lithium
 battery)



Dever cable (3 m (9.8 ft.)) For connecting the projector to a wall outlet



 
Computer cable (mini D-Sub 15-pin/mini D-Sub 15-pin 1.8 m (6 ft.)) For connecting the projector to a computer



□ Soft carrying case (with shoulder strap and handle) For carrying the projector

#### Documentation

 Read this first
 Safety Instructions/ World-Wide Warranty Terms
 Document CD-ROM
 Quick Reference Guide




FixYourDLP.com Source HUM Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



## **Features of the Projector**

#### Automatic setup function

When projecting computer images, the signals from the connected computer are detected automatically and adjusted so that the optimum images are projected. Even if several people are giving presentations using the same projector, the optimum picture quality can be obtained simply by disconnecting and reconnecting the computers. Each individual setting can also be adjusted manually. (p.37)

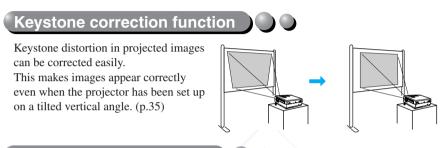

#### Brilliant, attractive images

Despite its compact size, the projector can display images at high resolutions with a high degree of luminance, providing beautifully clear images even in bright environments.

#### Easy to Operate

The accessory remote control can be used for operations such as pausing projection (see "Freeze" on p.43) and zooming in on important areas of an image (see "E-Zoom" on p.45).

#### Colour mode function

The optimum images can be projected simply by selecting the image quality from the following six preset settings according to the projection environment being used.

#### • sRGB • sRGB • Presentation • Theatre Character • Game • Game • COM (800) 281-8860 • THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





## Contents

Unpacking the Projector	1
Features of the Projector	2
· · · · · · · · ·	

#### **Before Using the Projector**

Part Names and Functions	
Front/Top	
Left Side	
Control Panel	
Rear	
Base	11
Remote Control	
Before Using the Remote Control	13
Using the Remote Control and Remote Operating Range	
Installation	15
Setting Up the Projector	15
Screen Size and Projection Distance	
Connecting to a Computer	17
Eligible Computers	
Projecting Images from the Computer	
Playing Sound from the Computer	
Connecting to an External Monitor	
Connecting to a Video Source	21
Projecting Composite Video Images	
Projecting S-Video Images	
Projecting Component Video Images	
Projecting RGB Video Images	
Playing Sound from the Video Equipment	
Basic Operations	
Turning On the Projector	
Connecting the Power Cable	
xYourDLP forming On the Power and Projecting Images	
Turping Off the Drojector	

# Turning Off the Projector 31 Adjusting the Screen Image 33 THE TRU Adjusting the Image Size 33 Adjusting the Image Angle 34 Correcting Keystone Distortion 35



Adjusting the Image Quality	7
Focusing the Screen Image	
Adjusting Computer Images	sing 2
Selecting the Colour Mode40	) ∪ je
Advanced Operations	Before Using the Projector
Functions for Enhancing Projection42	<u>-</u> ⇒
A/V Mute	<u>2</u>
Freeze	3
Wide-screen Projection of Component Video and Video Images	suc
(Changing the Aspect Ratio) 44	Basic Operations
E-Zoom	5 ber
Using the Configuration Menu Functions46	3 0
List of Functions	asi 9
Using the Configuration Menus56	5 <sup>Ш</sup>
Troubleshooting	
Using the Help60	Advanced Operations
When Having Some Trouble61	era
Power Indicator	l d
-🛱 🖁 (Warning) Indicator	
When the Indicators Provide No Help 64	ano 1
Appendices	Adv
Maintenance	2
Cleaning72	<u>2</u> p
Replacing Consumables74	1 offi
Optional Accessories	) sho
Glossary	I ple
List of ESC/VP21 Commands	Troubleshooting
Command List	
xYourDLP.Communication Protocol	1
Sporter Cable Layouts	5
CList of Supported Monitor Displays	
HE TISpecifications R.C.F. FOR PROJECTOR LAMPS AND ACCESSOF88	Appendices
Appearance90	) ber
Index	Ap







## **Before Using the Projector**

This chapter describes the procedures for setting up the projector before use.

Part Names and Functions	8
Front/Top	
• Left Side	
Control Panel	
• Rear	
Base	
Remote Control	
Before Using the Remote Control	13
Using the Remote Control and Remote Operating Range	13
Installation	15
Setting Up the Projector	15
Screen Size and Projection Distance	
Connecting to a Computer	
ourDLP.com  • Eligible Computers	
• Projecting Images from the Computer	
Playing Sound from the Computer	.1
Connecting to an External Monitor Connecting to a Video Source	<b>SOR 20</b>
Projecting Composite Video Images	
Projecting S-Video Images	
Projecting Component Video Images	
Projecting RGB Video Images	
<ul> <li>Playing Sound from the Video Equipment</li> </ul>	




⁼ixY

тне


## **Part Names and Functions**

#### Front/Top

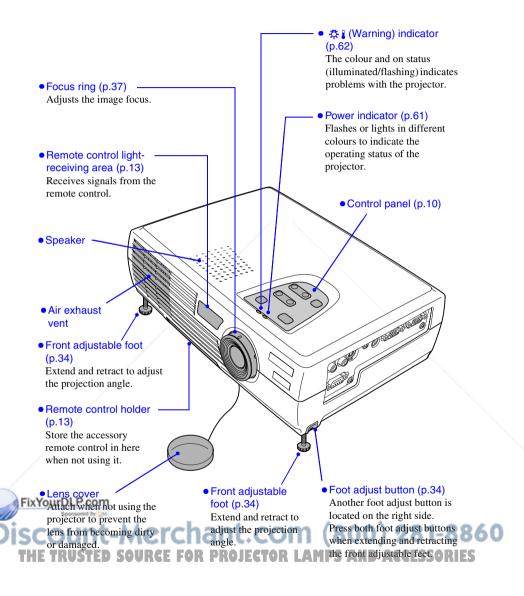




#### Left Side

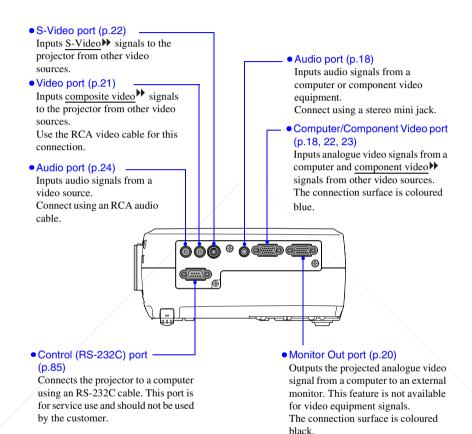

#### iscount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES




#### **Control Panel**

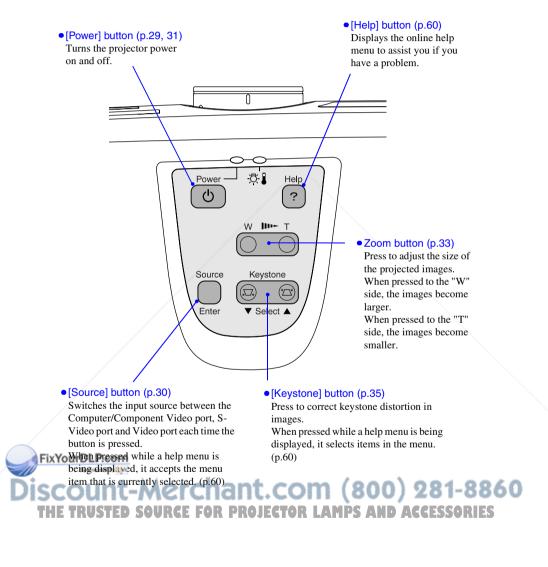



#### Rear

TOP

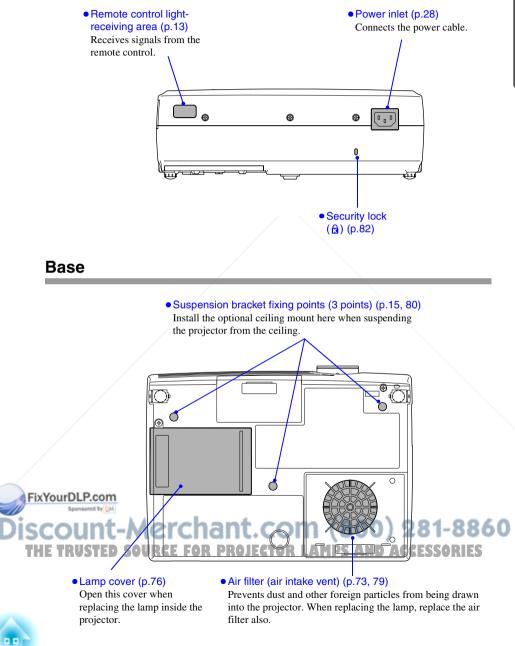

#### **Remote Control**

 Input select buttons – (p.30)

[Computer]: Switches the signal source to the images being input from the Computer/Component Video port. [S-Video/Video]: Switches the signal source being input from the S-Video port and the Video port.

• [Menu] button (p.56) Displays or hides the

configuration menus.

●[E-Zoom] button ( () (p.45)

Reduces the part of images that have been enlarged using the  $[] \bigoplus ]$  button.

### • [▲][♥][◀][►] buttons (p.56, 60)

When a configuration menu or help menu is displayed, these buttons select menu items and setting values. When using the E-Zoom function, these buttons move the cross around the screen and scroll the image.

#### [Auto] button (p.37)—

Use this button to automatically adjust Computer images to the optimum images when automatic setup has been s • Remote control light-emitting area (p.14) Outputs remote control signals.

S-Video/Video

A/V Mute

Enter

**EPSON** 

Computer

Menu

Auto

Power

Freeze

ESC

Color Mode

#### • [ESC] button (p.57)

Stops the current function. Displays the previous screen or menu while viewing a configuration menu. • [Power] button (p.29, 31) Turns the projector power

on and off.

#### • [Color Mode] button (p.40)

Selects the colour mode. The color mode changes in the order of Normal, Meeting, Presentation, Theatre, Game and <u>sRGB</u> each time the button is pressed.

#### • [Freeze] button (p.43)

Keeps the current computer or video image on the screen.

• [A/V Mute] button (p.42) Momentarily turns off the audio and video.

#### • [E-Zoom] button ( 🕀 ) (p.45)

Enlarges the part of images without changing the size of the projection area.

#### • [Enter] button (p.56, 60)

Accepts a menu item or displays the next screen or menu while viewing a configuration menu or help menu.

 
automatic setup has been set SC TO "OFF". I - MEI Chant. COM (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



## **Before Using the Remote Control**

#### Using the Remote Control and Remote Operating Range

When using the remote control for the first time, pull out the insulating tape that is protruding from the battery holder. When the insulating tape is pulled out, the remote control can then be used.




#### Using the Remote Control

The remote control is used in the following way.


#### Procedure

 Point the remote control light-emitting area toward one of the remote control light-receiving areas on the projector and operate the remote control buttons.



#### Tip :

- Do not allow sunlight or light from fluorescent lamps to shine directly onto the projector's remote control light-receiving areas, otherwise it may interfere with the reception of signals from the remote control.
- When not using the remote control, place it into the remote control holder underneath the projector so that it does not get lost.

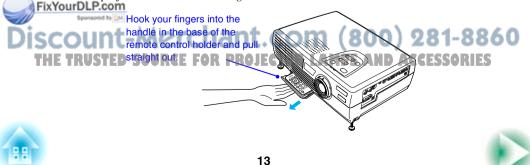


#### Remote Operating Range

TOP

Use the remote control within the ranges indicated below. If the distance or angle between the remote control and the remote control light-receiving area is outside the normal operating range, the remote control may not work.

Operating distance	Operating angle	
Approx. 6 m (20 ft.)	Approx. ±30° horizontally Approx. ±15° vertically	

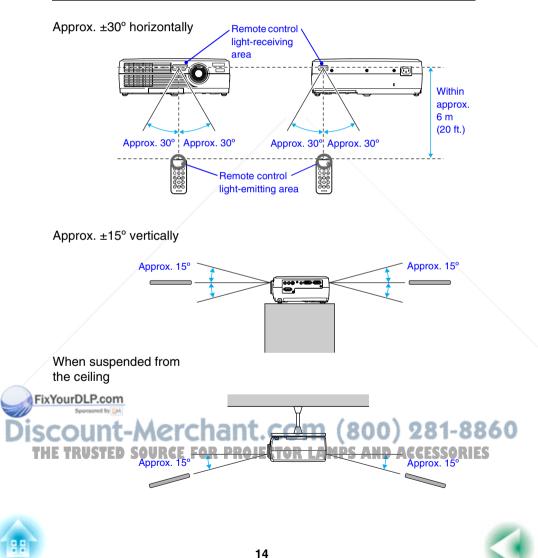

## Installation

#### Setting Up the Projector


The projector supports the following two different projection methods, allowing you to choose the best method for displaying your images.

#### Caution :


*Before setting up the projector, be sure to first read the separate Safety Instructions/ World-Wide Warranty Terms.* 

• Front projection

Rear projection using a translucent screen

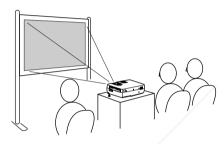

- Front/ceiling projection
- Rear projection using a translucent screen

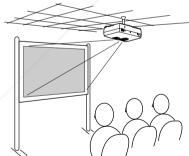

FixYourDLP.com

\* A special method of installation is required in order to suspend the projector from the ceiling. Please contact the place of purchase if you would like to use this installation method. The optional ceiling mount is required when installing the projector to the ceiling. (p.80) **OLECTOR LAMPS ADDACCESSOR** 

#### Tip :

When using rear/ceiling projection using a translucent screen, set the "Ceiling" or "Rear Proj." command in the "Advanced" menu to match the installation method. (p.53)



#### Screen Size and Projection Distance


The distance between the projector and the screen determines the actual image size.

Recommended distance	0.9–11.3 m (2.9–37.0 ft.)
----------------------	---------------------------

While referring to the table below, position the projector so that the image size is smaller than the screen size.

The values should be used as a guide for setting up the projector. The actual values will vary depending on projection conditions and the zoom setting.

4:3 Screen size (cm (in.))	Projection distance (m (ft.))	Distance from centre of lens to bottom edge of screen (3 (cm (in.))
30" (61 × 46 (24.0 × 18.1))	0.9–1.1 (2.9–3.6)	4.3 (1.7)
40" (81 × 61 (31.9 × 24.0))	1.2–1.5 (3.9–4.8)	5.8 (2.3)
60" (120 × 90 (47.2 × 35.4)	1.8-2.2 (5.9-7.3)	8.6 (3.4)
80" (160 × 120 (63.0 × 47.2))	2.4-3.0 (7.9-9.8)	11.5 (4.5)
100" (200 × 150 (78.7 × 59.1))	3.0-3.7 (9.9-12.3)	14.4 (5.7)
200" (410 × 300 (161.4 × 118.1))	6.1–7.5 (19.9–24.6)	28.8 (11.3)
300" (610 × 460 (240.2 × 181.1))	9.1–11.3 (29.8–37.0)	43.1 (17.0)

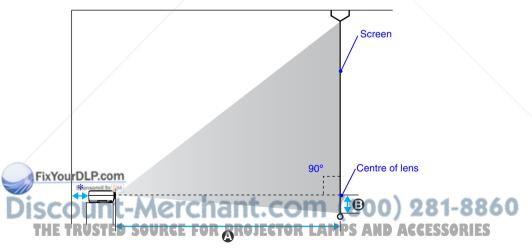

\* When installing against a wall, leave a space of about 20 cm (7.9 in.) between the projector and the wall.



Tip :

The image size will be reduced when keystone correction is carried out.

## **Connecting to a Computer**

#### Caution :

When connecting the projector to a computer, be sure to check the following.

- Turn off the power for both the projector and the computer before connecting them. If the power for either device is on at the time of connection, damage may result.
- Check the shapes of the cable connectors and the device ports before making the connections. If you try to force a connector to fit a device port with a different shape or number of terminals, damage to the connector or port may result.

#### **Eligible Computers**

The projector cannot be connected to some types of computer, or projection of images may not be possible even if actual connection is possible. Make sure that the computer you intend to use satisfies the conditions given below.

• Condition 1: The computer must have an image signal output port. Check that the computer has a port such as an "RGB port", "monitor port" or "CRT port" which can output image signals.

If the computer has a built-in monitor, or if using a laptop computer, it may not be possible to connect the computer to the projector, or alternatively you may need to purchase a separate external output port. Refer to the documentation for your computer under a heading such as "Connecting an external monitor" or similar for further details.

• Condition 2: The display resolution and frequency of the computer must be listed in the "List of Supported Monitor Displays". See "Appendices: List of Supported Monitor Displays" (p.86).

Some computers allow you to change the output resolution, so if necessary, change the resolution to one that matches a setting in the "List of Supported Monitor Displays", while referring to the documentation provided with the computer.

#### Tip :


• You may need to purchase a separate adapter depending on the shape of the computer's **FixYourDeprive** for further details.

• If the computer and projector are too far away from each other for the accessory computer cable to reach, use the optional VGA-HD15 PC cable. See "Appendices: 60 THE TROptional Accessories" (p.80) PROJECTOR LAMPS AND ACCESSORIES



#### **Projecting Images from the Computer**

Use the accessory computer cable to connect the Computer/Component Video port on the left side of the projector to the monitor port of the computer.

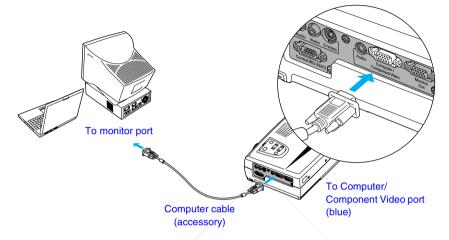

#### Tip :


- Change the "Input Signal" setting in the "Video" menu to "RGB" after making the connections. (p.47)
- If more than one external component is connected to the projector, use the [Source] button on the projector's control panel or the [Computer] button on the remote control to select the Computer port as the input source. (p.30)
- Do not bind the power cable and the computer cable together, otherwise image interference or errors in operation may result.

#### Playing Sound from the Computer

The projector has a single built-in speaker with a maximum output of 1 W. If Fix the computer that is connected to the projector has an audio output port, you can output sound from the computer through the projector's speaker by connecting the computer's audio output port and the Audio port (stereo mini jack) on the left side of the projector using a stereo mini jack audio cable sort (commercially-available). It is recommended that you use an audio cable with a 3.5 mm diameter stereo mini jack.





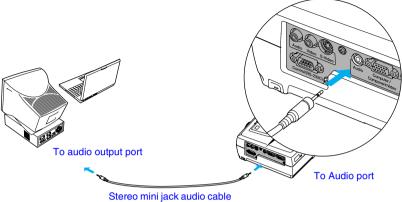

(commercially-available)

Use the following procedure to adjust the volume of the sound output.

#### Procedure

FixYourDLP.com

Press the [Menu] button on the remote control, and then select "Volume" from the "Audio" menu.

For details on this operation, refer to "Using the Configuration Menus". (p.56)



## 2 Use the [◄] and [►] buttons to adjust the volume.

The volume is increased or reduced each time a button is pressed.

-Merchant.co



**3** After making the adjustment, press the [Menu] button to exit the configuration menu.




THE



#### **Connecting to an External Monitor**

Images can be viewed on an external computer monitor at the same time they are being projected by the projector. Use the cable provided with the computer monitor to connect the monitor to the Monitor Out port at the left side of the projector.

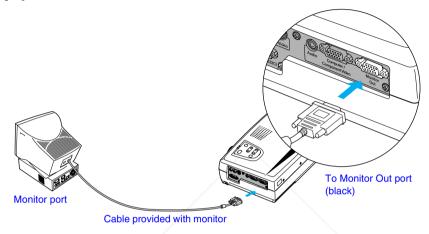

#### Tip :

- Video images cannot be output to an external monitor.
- The setting gauge for keystone correction and the configuration menus and help menus are not output to the external monitor.





## **Connecting to a Video Source**


#### Caution :

When connecting the projector to other video sources, take the following precautions.

- *Turn off the power for both the projector and the video source before connecting them. If the power for either device is on at the time of connection, damage may result.*
- Check the shapes of the cable connectors and the device ports before making the connections. If you try to force a connector to fit a device port with a different shape or number of terminals, a malfunction or damage to the connector or port may result.

#### Projecting Composite Video<sup>™</sup> Images

Use a RCA video cable (commercially-available) to connect the video source to the Video port on the left side of the projector.

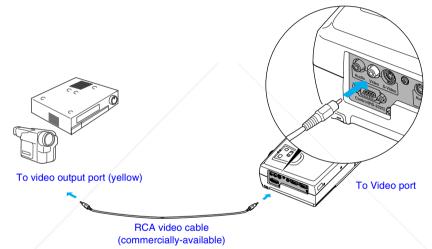

#### Tip :

If more than one external component is connected to the projector, use the [Source] button on the projector's control panel or the [S-Video/Video] button on the remote control to select the Video port as the input source. (p.30)


#### FixYourDLP.com

## Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



#### Projecting <u>S-Video</u><sup>™</sup> Images

Use an S-Video cable (commercially-available) to connect the video source to the S-Video port on the left side of the projector.

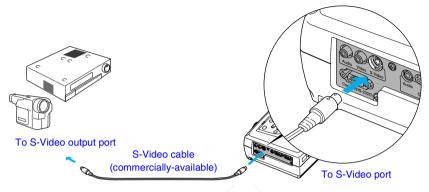


#### Tip :

If more than one external component is connected to the projector, use the [Source] button on the projector's control panel or the [S-Video/Video] button on the remote control to select the S-Video port as the input source. (p.30)

#### Projecting Component Video\* Images

Use the optional component video cable to connect the video source to the Computer/Component Video port on the left side of the projector. See "Appendices: Optional Accessories" (p.80)

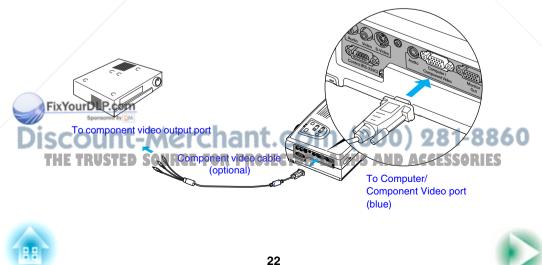


#### Tip :

- Change the "Input Signal" setting in the "Video" menu to "<u>YCbCr</u><sup>++</sup>" or "<u>YPbPr</u><sup>++</sup>" after making the connections. (p.49)
- If more than one external component is connected to the projector, use the [Source] button on the projector's control panel or the [Computer] button on the remote control to set the input source to "YCbCr " or "YPbPr ", depending on the type of signal being input. (p.30)

#### **Projecting RGB Video Images**

RGB video is used when RGB signals that have copy protection added are input and projected. Use the accessory computer cable to connect the video source to the Computer/Component Video port on the left side of the projector.

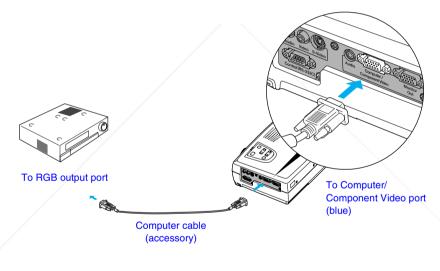

#### Tip :

• Change the "Input Signal" setting in the "Video" menu to "RGB" after making the FixYourDeonnections. (p.47)


• For a RGB connection, a commercially available adapter or converter cable might be required. THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





#### **Playing Sound from the Video Equipment**

The projector has a single built-in speaker with a maximum output of 1 W. You can output sound from the video equipment through the projector's built-in speaker by connecting the video equipment's audio output port and the Audio port (RCA monaural jack) on the left side of the projector using an RCA audio cable (commercially-available).

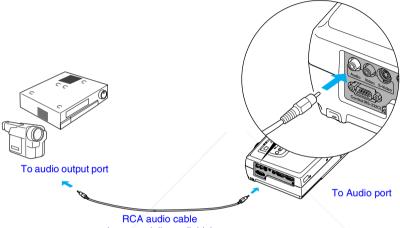

(commercially-available)

Use the following procedure to adjust the volume of the sound output.

#### Procedure

(p.56) FixYourDLP.com

**1** Press the [Menu] button on the remote control, and then select "Volume" from the "Audio" menu.

For details on this operation, refer to "Using the Configuration Menus".



Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





## 2 Use the [◄] and [►] buttons to adjust the volume.

The volume is increased or reduced each time a button is pressed.

Video	Volume : 15 .
Audio	Tone : 0 + +
Setting	Audio Input : Computer Video
Advanced	Reset A Execute
About	
Reset All	

**3** After making the adjustment, press the [Menu] button to exit the configuration menu.











## **Basic Operations**

This chapter describes basic operations such as turning projection on and off and adjusting the projected images.

Turning On the Projector	28
Connecting the Power Cable	
Turning On the Power and Projecting Images	
Turning Off the Projector	
Adjusting the Screen Image	33
Adjusting the Image Size	
Adjusting the Image Angle	
Correcting Keystone Distortion	
Adjusting the Image Quality	
Focusing the Screen Image	
Adjusting Computer Images	
Automatic Setup	
Adjusting the Tracking	
YourDLP.com • Adjusting the Sync	
Sponsored by DM • Selecting the Colour Mode	40
count-Merchant.com (800) 2	81-8860
E TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACC	ESSORIES



TH

## **Turning On the Projector**

Turn on the power to start projecting images.

#### Caution :

Be sure to read the separate Safety Instructions/World-Wide Warranty Terms before projecting images.

#### **Connecting the Power Cable**

#### Procedure

- **1** Check that the power is turned off for the projector and all components connected to the projector.
- **2** Connect the computer or other video source to the projector. (p.17, 21)
- 3 Remove the lens cover.

## **4** Connect the accessory power cable to the projector.

Check that the power cable connector is facing the same way as the power inlet on the projector, and then insert the power cable connector securely into the projector.



Lit orange

PONE

## **5** Connect the other end of the power cable to an earthed electrical outlet.

Wait until the Power indicator lights orange.






#### **Turning On the Power and Projecting Images**

#### Procedure

**1** Check that the Power indicator has stopped flashing and is lit orange.

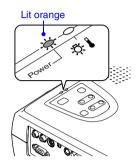


**2** Turn on the power for all equipment connected to the projector. For a video source, press the [Play] button at the video source to start playback if necessary.

**3** Press the [Power] button on either the projector's control panel or the remote control to turn on the power for the projector.

The Power indicator flashes green, and after a short period it stops flashing and projection starts.

Wait until the Power indicator lights green (it normally takes about 40 seconds to change).

Changes from flashing to lit green

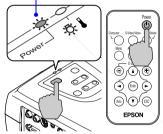

Remote control

#### Tip :

The projector's control panel and remote control buttons cannot be operated while the Power indicator is flashing green.

 
Depending on the settings, the message "No-Signal." may appear. See "Setting" - "No-FixYourSignatomsg." (p.51)

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





**4** If more than one signal source has been connected, use the projector's control panel or the remote control buttons to select the port which the signal source that you would like to use is connected to, while referring to the following table.



Port	Button to press		Display at top-right of	
TOIL	Projector	Remote control	screen	
Computer/ Component Video	The image source changes each time [Source] is	[Computer]	Computer * YCbCr * YPbPr *	
S-Video		[S-Video/Video]	S-Video	
Video	pressed.		Video	

\* The items selected using the "Input Signal" command in the "Video" menu will appear.

#### Tip :

- If only one signal source has been connected, the signals from that source will be projected without needing to press one of the buttons from the previous table.
- If the "No-Signal." message does not disappear, check the connections again.
- If a laptop computer or a computer with an LCD screen has been connected to the projector, the images may not be projected straight away. After making the connections, check that the computer has been set up to output signals externally. The following table shows examples of how to toggle output settings. For details, refer to the section of the documentation provided with your computer under a heading such as "External output", "Connecting an external monitor" or similar.

NEC	Panasonic	Toshiba	IBM	Sony	Fujitsu	Macintosh
[Fn]+[F3]	[Fn]+[F3]	[Fn]+[F5]	[Fn]+[F7]	[Fn]+[F7]	[Fn]+[F10]	After startup, change the Control Panel adjustments so that Mirroring is active

**Fix Source** Still picture is projected for a long period of time, the projected image may become burned in on the computer screen. You should avoid leaving the same image displayed for long periods. **THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES** 





## **Turning Off the Projector**

Follow the procedure below to turn off the power for the projector.

#### Procedure

Power OFF?

to power off.

 
Turn off the power for the signal sources that are connected to the projector.

Check that the power for all connected components has been turned off.

**2** Press the [Power] button on either the projector's control panel or the remote control.

Please press () Power key again

The following confirmation message will appear.



Projector

Remote control

If you do not want to turn off the power, press any button except the [Power] button.


If you do not press any button, the message will disappear automatically after seven seconds. (The power will not turn off at this time.)

## **3** Press the [Power] button once more.

The lamp will switch off. The Power indicator will flash orange and <u>cool</u>-<u>down</u> → will start.

The cool-down period lasts for about 20 seconds.

(This varies depending on factors such as the ambient air temperature.) FixYourDLP.com Stops flashing and lights orange

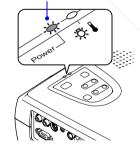

Tip: Non The projector's control panel and remote control buttons cannot be operated while the Power indicator is flashing orange. Wait until it lights steadily. THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

#### **4** Check that the cool-down is complete.

When cool-down is complete, the Power indicator lights orange.




#### **5** Unplug the power cable from the electrical outlet.

#### Caution :

Do not disconnect the power cable from the outlet while the Power indicator is still flashing orange, otherwise it may result in errors in projector operation and reduce the lamp unit operating life.

## **6** Retract the front adjustable feet if they are extended.

Gently push down on the projector while simultaneously pressing the two foot adjust buttons.

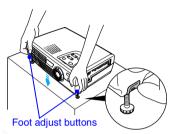

#### 7 Attach the lens cover.

Attach the lens cover to the lens when not using the projector, in order to stop the lens from getting dusty or dirty.







## **Adjusting the Screen Image**

You can correct and adjust the screen image in order to obtain the best possible picture.

#### Adjusting the Image Size

The size of the projected image is basically determined by the distance from the projector to the screen. (p.16)

If further minor adjustment is required, press the [Zoom] button on the projector's control panel to make the adjustment. Minor adjustments can be made to the image size to between a zoom ratio of approximately 1.0 to 1.2 in 33 steps.

 
#### Tip :

The E-Zoom function lets you enlarge parts of the image. (p.45)


#### Procedure

#### Press the [Zoom] button on the projector's control panel.

When pressed to the [W] side, the images become larger.




When pressed to the [T] side, the images become smaller.

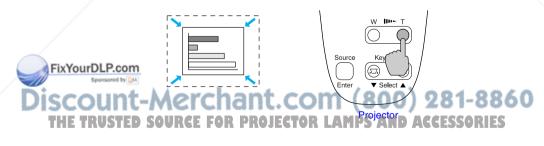



## Adjusting the Image Angle

The projector should be set up so that it is as perpendicular to the screen as possible.

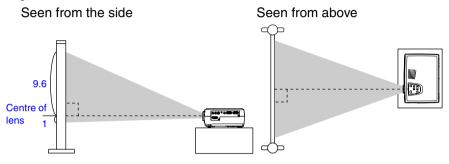


If it is not possible to set up the projector so that it is perpendicular to the screen, it can be set up at a slight vertical angle instead. You can extend or retract the front adjustable feet to adjust the projection angle within a maximum range of 10°.

## Procedure

#### While pressing the two foot adjust buttons at either side, lift up the front of the projector so that the front adjustable feet can extend.

Extend the front adjustable feet until the desired angle is obtained, and then release the foot adjust buttons.

To retract the front adjustable feet, gently push down on the projector while pressing the two foot adjust buttons.

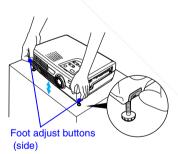


### Tip :

Fix When the post is adjusted, it may cause the projected images to become distorted. Use the keystone correction function to adjust this distortion. (p.35) THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES






 • If the projector is tilted horizontally, turn the bases of the front adjustable feet to adjust the angle.



## **Correcting Keystone Distortion**

When the projector is tilted, it will cause keystone distortion to appear in the image, but this distortion can be corrected using the keystone correction function as long as the vertical angle of tilt is within a range of approximately 15°.

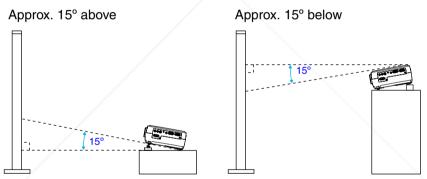








#### Procedure

Keystone correction can be carried out using either the projector's control panel or the configuration menu. The following explanation describes how to correct keystone distortion using the projector's control panel.

For adjustment using the configuration menu: "Setting" - "Keystone" (p.51)

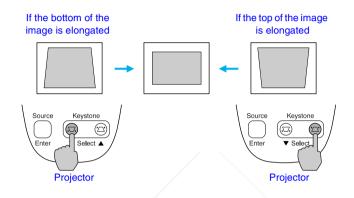

#### Tip :

- When keystone correction is carried out, the projected image will become smaller.
- The keystone correction settings are memorised even when the power is turned off. If you change the position or angle of the projector, you may need to readjust the keystone settings.
- If the images become uneven in appearance after keystone correction is carried out, decrease the sharpness setting. (p.47, 48)
- If the value displayed in the gauge on the screen stops changing when keystone correction is being carried out, it indicates that the limit for keystone correction has been exceeded. Check that the projector has not been set up at an angle which exceeds the proper limit.

## FixYourDLP.com Spreame With Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





## **Adjusting the Image Quality**

The quality of the screen images can be adjusted as follows.

## Focusing the Screen Image

## Procedure

## Turn the focus ring to adjust the image focus.

Turn the focus ring of the projector until the projected images are in proper focus.



## Tip :

- If the surface of the lens is dirty or misted over as a result of condensation, it may not be possible to adjust the focus correctly. If this happens, clean or de-mist the lens. (p.66, 72)
- If the projector is positioned outside the normal projecting range of 0.9–11.3 m (2.9– 37.0 ft.), it may not be possible to obtain the correct focus. If you have trouble obtaining the correct focus, check the projection distance.

## Adjusting Computer Images

## Automatic Setup

Automatic setup detects the status of the signals coming from the connected computer, and automatically adjusts these signals so that the optimum images can be obtained. It involves adjustment of the following three items: Tracking<sup>\*</sup>, Position and Sync<sup>\*</sup>.

## Tip :

• If "Auto Setup" in the "Video" menu is set to "OFF" (the default setting for this item is "ON"), automatic setup is not carried out. If you press the [Auto] button on the remote

FixYourDCPtrohwhile computer signals are being projected, adjustment will then be carried







- If you press the [Auto] button while the E-Zoom or Freeze function is being used or while a configuration menu or help menu is being displayed, the function will be cancelled when you press the [Auto] button, and then the adjustment will be carried out.
- Sometimes the signals may not be adjusted correctly depending on the type of signals being output by the computer. In such cases, use the configuration menu commands to adjust the tracking and sync settings manually. (p.38, 39)

## Adjusting the Tracking


If vertical stripes appear in the projected images, and this cannot be fixed using automatic setup, you will need to adjust the <u>tracking</u> manually using the following procedure.



## Procedure

**1** Press the [Menu] button on the remote control, and then select "Tracking" from the "Video" menu.

For details on this operation, refer to "Using the Configuration Menus". (p.56)

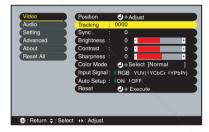

# **2** Press the [◄] and [►] buttons to set the tracking value.

The tracking value increases or decreases each time a button is pressed.



FixYourDLP.com

# iscount-Merchant.com (800) 281-8860

# **3** After making the adjustment, press the [Menu] button to exit the configuration menu.

#### Tip :

The image will flash when continuous tracking adjustment is carried out, but this is normal.





## Adjusting the Sync

If flickering, fuzziness or interference appear in images that are input from the computer, and this cannot be fixed using automatic setup, you will need to adjust the <u>sync</u> manually using the following procedure.

## Procedure

Press the [Menu] button on the remote control, and then select "Sync." from the "Video" menu.

For details on this operation, refer to "Using the Configuration Menus". (p.56)



# **2** Press the [◄] and [►] buttons to set the sync value.

The sync value increases or decreases each time a button is pressed.

Video	Position 🕗 Adjust	
Audio	Tracking : 0	
Setting	Sync. : 10	
Advanced	Brightness : 0 - +	
About	Contrast : 0 +	
Reset All	Sharpness : 0 - +	
	Color Mode (2) Select [Normal ]	
	Input Signal:   RGB YUV(IYCbCr IYPbPr)	
	Auto Setup : ION IOFF	
	Reset 🕗 🕁 Execute	

# **3** After making the adjustment, press the [Menu] button to exit the configuration menu.

#### Tip :

If you adjust the sync without adjusting the tracking first, it will not be possible to get
 FixYourDike.best adjustment results. Incorrect tracking adjustment may not be noticeable with some types of picture. However, pictures with lots of lines and shading will tend to show incorrect tracking adjustments more clearly, so be sure to check the tracking adjustment first.
 It may also be possible to fix flickering and fuzziness by adjusting the brightness, contrast , sharpness and keystone correction settings.





## **Selecting the Colour Mode**

The following six preset colour modes are available for use depending on the characteristics of the images that are being projected. You can easily obtain the optimum image quality simply by selecting the colour mode that corresponds to the projected images. The brightness of the images will vary depending on which colour mode is selected.

Mode	Application	
<u>sRGB</u> ►	Images conform to the sRGB colour standard. If the connected source has an sRGB mode, set both the projector and the connected signal source to sRGB.	
Normal	Brightness is emphasised. For presentation in bright rooms.	
Meeting	Images are modulated using their original tints, with no colour enhancement.	
Presentation	For presentations in dark rooms.	
Theatre	Movie images are optimised using natural tints.	
Game	Brightness is emphasised. Ideal for playing video games in bright rooms.	

#### Procedure

#### The colour mode changes as follows each time the [Color Mode] button on the remote control is pressed.

Normal  $\rightarrow$  Meeting  $\rightarrow$  Presentation  $\rightarrow$ Theatre  $\rightarrow$  Game  $\rightarrow$  sRGB ...

 
The current setting appears in the top-right corner of the screen each time the colour mode is changed.

The default colour mode setting is "Normal"

and "Theatre" when <u>component video</u> or



Remote control



Svideo signals are being input. ANT.COM (800) 281-8860 THTIS SUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

*The colour mode can also be set using the "Color Mode" command in the "Video" menu.* (*p.*47, 49)



# **Advanced Operations**

This chapter describes functions for enhancing the projection of images, and how to use the configuration menus.

Functions for Enhancing Projection	42
• A/V Mute	
• Freeze	
Wide-screen Projection of Component Video and Video	Images
(Changing the Aspect Ratio)	
• E-Zoom	45
Using the Configuration Menu Functions	46
List of Functions	46
• "Video" Menu	
"Audio" Menu	
"Setting" Menu	51
"Advanced" Menu	
• "About" Menu	54
"Reset All" Menu	55
• Using the Configuration Menus	56

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



FixYourDLP

## **Functions for Enhancing Projection**

This section describes the various useful functions that can be used to enhance presentations.

## A/V Mute

This function momentarily pauses the image and sound.

For example, it can be used when you do not want to show viewers details of operations such as selecting different files while computer images are being projected.

 
However, if you use this function when projecting moving images, the images and sound will still continue to be played back by the source, and you cannot return to the point where the mute function was activated.

## Procedure


## Press the [A/V Mute] button on the remote control.

The image and sound will then be paused.

Press the [A/V Mute] button on the remote control to continue normal projection.



Remote control

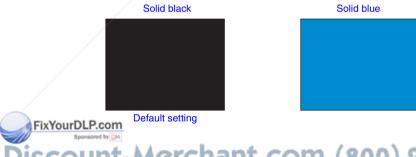

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



## Freeze

This function pauses only the projected images. The sound keeps playing without pausing.

The image source will still be playing back the images even while projection is paused, and so it will not be possible to resume projection from the point where it was paused.

### Procedure

# Press the [Freeze] button on the remote control.

The images will then be paused.

To continue projecting the images, either press the [Freeze] button again or press the [ESC] button.



Remote control

## Tip :

 
- Pressing the [Freeze] button also clears menu displays and help messages.
- The Freeze function still works while the E-Zoom function is being used. However, in this case the Freeze function can only be cancelled by pressing the [Freeze] button.






## Wide-screen Projection of Component Video and Video Images (Changing the Aspect Ratio)

This function changes the <u>aspect ratio</u> of images from 4:3 to 16:9 when component video images (YCbCr and YPbPr) or video images (S-Video or composite video) are being projected. Images which have been recorded in digital video or onto DVDs can be viewed in 16:9 wide-screen format.



 When images in squeeze mode are projected at 4:3



When images in squeeze mode are projected at 16:9

### Procedure

FixYourDLP.com

**1** Press the [Menu] button on the remote control, and then select "Aspect Ratio" from the "Video" menu.

For details on this operation, refer to "Using the Configuration Menus". (p.56)



Press the [◄] and [►] buttons to set the aspect ratio to either "4:3" or "16:9", and then press the [Enter] button.



SCOUNT-Merchant.compare () Sector ()

**3** After making the adjustment, press the [Menu] button to exit the configuration menu.



## E-Zoom

This function lets you enlarge and reduce a part of projected images such as graphs and tables.

## Procedure

Press the [E-Zoom 🕀] button on the 1 remote control.

 
A cursor (cross) indicating the centre point for the area to be enlarged will appear on the screen.



Remote control


### **2** Move the cross to the area of the image that is to be enlarged or reduced.

Press the  $[A], [V], [\triangleleft]$  and  $[\triangleright]$  buttons on the remote control to move the cross.



#### **3** When $[\oplus]$ is pressed, the image is enlarged with the cross as its centre. When $[\bigcirc]$ is pressed, the enlarged picture is then reduced.

The enlargement ratio will appear at the bottom-right of the screen. You can scroll around the image by pressing the  $[A], [V], [\triangleleft]$  and  $[\triangleright]$ buttons.

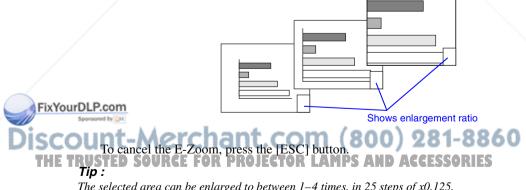

The selected area can be enlarged to between 1-4 times, in 25 steps of x0.125.



## **Using the Configuration Menu Functions**

The configuration menus can be used to carry out a variety of settings and adjustments.

The menus have a hierarchical structure, with a main menu that is divided into sub-menus, which are further divided into other sub-menus.

The remote control is used to operate the menus. Refer to "Using the Configuration Menus" (p.56) for details on using the menus.



## List of Functions

## "Video" Menu

- The functions in the "Video" menu apart from "Input Signal", "Auto Setup" and "Video Signal" cannot be adjusted while no image signal is being input.
- The functions which appear in the "Video" menu will change depending on the type of input source being used for the image signal. Functions which are not available in the "Video" menu for a particular input source cannot be adjusted.



## "Video" Menu

	Sub-menu	Function	Default
	Position	Moves the image display position vertically and horizontally.	Depends on connection
		• Press the [Enter] button and make the adjustment using the display position adjustment sub-menu that appears.	
	<u>Tracking</u> ►	Adjusts computer images when vertical stripes appear in the images.	Depends on connection
	Sync.	Adjusts computer images when flickering, fuzziness or interference appear in the images.	Depends on connection
		• Flickering and fuzziness may also appear when the brightness, <u>contrast</u> , sharpness or keystone settings are adjusted.	
		• You can obtain the best results if you adjust the tracking first and then adjust the sync.	
	Brightness	Adjusts the image brightness.	Median value (0)
	<u>Contrast</u> ▶	Adjusts the difference between light and shade in the images.	Median value (0)
	Sharpness	Adjusts the image sharpness.	Median value (0)
	Color Mode	Corrects the vividness of the image colour. The settings can be saved separately for each type of source (computer or video source). You can select from six different quality settings depending on the surroundings.	Normal
		<ul> <li>•sRGB → : Images conform to the sRGB standard.*</li> <li>•Normal : Brightness is emphasised. For presentation in bright rooms.</li> </ul>	
		<ul> <li>Meeting : Images are modulated using their original tints, with no colour enhancement.</li> <li>Presentation: For presentations in dark rooms.</li> <li>Theatre : Movie images are optimised using natural tints.</li> </ul>	
FixYour	DLP.com	•Game : Brightness is emphasised. Ideal for playing video games in bright rooms.	
Disco	Input Signal	Selects the input source to be used. • Select "RGB" when projecting computer images or URGB video images. ECTOR LAMPS AND ACCE	Depends on connection
	Auto Setup	Selects whether the automatic adjustment function for automatically optimising images when the input source is changed is turned ON or OFF.	ON






Sub-menu	Function	Default
Reset	<ul> <li>Resets all adjustment values for the "Video" menu functions except for the "Input Signal" setting to their default settings.</li> <li>Press the [Enter] button to display the confirmation screen, and select "Yes".</li> <li>Select "Reset All" to return all menu settings to their default settings. (p.55)</li> </ul>	-

\* If set to sRGB, the colour temperature for the "Color Adjustment" command in the "Advanced" menu will be set to 6500K.

## Component (<u>YCbCr</u><sup>▶</sup>, <u>YPbPr</u><sup>▶</sup>)

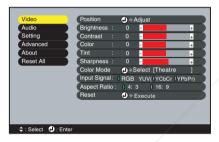

## Video (S-Video, Composite video)



#### "Video" Menu

Sub-menu	Function	Default
Position	Moves the image display position vertically and horizontally.	Depends on connection
	• Press the [Enter] button and make the adjustment using the display position adjustment sub-menu that appears.	
Brightness	Adjusts the image brightness.	Median value (0)
<u>Contrast</u> ₩	Adjusts the difference between light and shade in the images.	Median value (0)
Color FixYourDLP.com	(Not available for RGB video) Adjusts the colour intensity for the images.	Median value (0)
Discount THE TRUSTED	(Not available for RGB video) (Adjustment is only possible when <u>component video</u> <sup>™</sup> or NTSC signals are being input.) <b>OR LAMPS AND</b> A Adjust the image tint.	Median value (0) 8860
Sharpness	Adjusts the image sharpness.	Median value (0)





	Sub-menu	Function	Default
	Color Mode	<ul> <li>Corrects the vividness of the image colour. The settings can be saved separately for each type of source (computer or video source). You can select from six different quality settings depending on the surroundings.</li> <li><u>sRGB</u>: Images conform to the sRGB standard.*</li> <li>Normal : Brightness is emphasised. For presentation in bright rooms.</li> <li>Meeting: Images are modulated using their original tints, with no colour enhancement.</li> <li>Presentation: For presentations in dark rooms.</li> <li>Theatre : Movie images are optimised using natural tints. The black &amp; white extension function operates so that differences in colour gradations (darkness and lightness of colours) are accentuated even for images that are very dark or very bright, to make them easier to view.</li> <li>Game : Brightness is emphasised. Ideal for playing video games in bright rooms.</li> </ul>	Theatre
	Input Signal	(Adjustment is only possible when component video signals are being input.) Selects the input source to be used.	Depends on connection
	Video Signal	<ul> <li>(Adjustment is only possible when composite video/S-Video signals are being input.)</li> <li>Sets the video signal format.</li> <li>Press the [Enter] button, and choose the setting from the video signal format selection sub-menu which appears.</li> <li>When set to "Auto", the video signal format is set automatically.</li> </ul>	Auto
/	Aspect Ratio	Sets the aspect ratio for projected images.	Depends on connection
FixYour	Reset	<ul> <li>Resets all adjustment values for the "Video" menu functions except for the "Input Signal" and "Video Signal" setting to their default settings.</li> <li>Press the [Enter] button to display the confirmation screen, and select "Yes".</li> <li>Select "Reset All" to return all menu settings to their</li> </ul>	1-886
Disco	Sponsored by M Sunt-A RUSTED SO		1-886 SSORIES

\* If set to sRGB, the colour temperature for the "Color Adjustment" command in the "Advanced" menu will be set to 6500K.





## "Audio" Menu



Sub-menu	Function	Default
Volume	Adjusts the volume.	Median value (10)
Tone	Adjusts the tone.	Median value (0)
Audio Input	<ul> <li>Selects the input source for audio signals. The default setting varies depending on the type of signal being input (for computer, component video and RGB video input signals: Computer; for video input signals: Video). Therefore, if audio signals are being input to a different port from the default port, you will need to select the audio signal input source.</li> <li>Computer: Audio signals will be input to the stereo mini jack (left side).</li> <li>Video : Audio signals will be input to the RCA pin jack (left side).</li> </ul>	Depends on connection
Reset	<ul> <li>Resets all adjustment values for the "Audio" menu functions to their default settings.</li> <li>Press the [Enter] button to display the confirmation screen, and select "Yes".</li> <li>Select "Reset All" to return all menu settings to their default settings. (p.55)</li> </ul>	-


#### FixYoprDLP.com

The "Audio" menu settings are saved individually for each input signal source. iscour THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





## "Setting" Menu

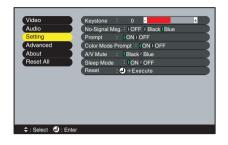


	Sub-menu	Function	Default
	Keystone	<ul> <li>Corrects vertical keystone distortion in images.</li> <li>When keystone correction is carried out, the projected image will become smaller.</li> <li>If the images become uneven in appearance after keystone correction is carried out, decrease the sharpness setting.</li> </ul>	Median value (0)
	No-Signal Msg.	Sets the message status and background colour at times such as when no image signal is being input. When set to "OFF", the background colour becomes black and no message is displayed.	Blue
	Prompt	Sets whether the input signal name is displayed on the screen or not when the input signal is changed.	ON
	Color Mode Prompt	Sets whether the colour mode prompt is displayed on the screen or not when the colour mode is changed.	ON
	A/V Mute	Sets the screen status when the [A/V Mute] button on the remote control is pressed.	Black
FixYour Disco THE T	Sleep Mode	<ul> <li>Sets the energy saving operation when no signal is being input.</li> <li>When set to "ON", projection stops automatically and then after the <u>cool-down</u> period is finished, the projector changes to sleep mode if no operations are carried out for 30 minutes while the "No-Signal." message is being displayed. (The Power indicator lights orange.)</li> <li>Projection starts again when the [Power] button on the projector's control panel or the remote control is pressed.</li> </ul>	ON 1-8860 SORIES





Sub-menu	Function	Default
Reset	Resets all adjustment values for the "Setting" menu functions to their default settings.	-
	<ul> <li>Press the [Enter] button to display the confirmation screen, and select "Yes".</li> <li>Select "Reset All" to return all menu settings-including settings for the "Video" and "Audio" menus-to their default settings. (p.55)</li> </ul>	

## "Advanced" Menu

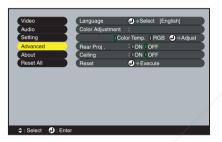

Sub-menu	Function	Default
Language	Sets the language for message displays.	English
	• Press the [Enter] button and select the language from the selection menu that appears.	
Color	Adjusts the <u>colour temperature</u> → and intensity of each	Color
Adjustment	RGB colour for each input source.	Temp.:
	•Color Temp.: Lets you adjust bright colours within a	Depends on
	range from reddish tinges to bluish tinges.	connection
	If the colour temperature is lower, colours	
	appear reddish and colour tones appear	
	softer.	
	If the colour temperature is higher,	
	colours appear bluish and colour tones	
ixYourDLP.com	appear sharper.	
Sponsored by QM	Press the [Enter] button and make the	
scount	adjustment in the colour adjustment sub-	281-8860
HE TRUSTED	SOURCE FOR PROJECTOR LAMPS AND A	CESSORIES



İS



	<ul> <li>RGB : Sets the colour intensity for each RGB (red/green/blue) colour in the image. Press the [Enter] button, select "R" (red), "G" (green) or "B" (blue) and make the adjustment in the colour adjustment sub- menu that appears. You can adjust the colours while viewing the results on the screen.</li> <li>(This item cannot be selected if "sRGB" has been selected as the "Color Mode" setting in the "Video" menu.)</li> </ul>	
Rear Proj.	Use when projecting images from behind a translucent screen. When set to "ON", the projected images are horizontally reversed.	OFF
Ceiling	Use when installing the projector to a ceiling. When set to "ON", the projected images are horizontally and vertically reversed.	OFF
Reset	<ul> <li>Resets all adjustment values for the "Advanced" menu functions except for the "Language" setting to their default settings.</li> <li>Press the [Enter] button to display the confirmation screen, and select "Yes".</li> <li>Select "Reset All" to return all menu settings including settings for the "Video" and "Audio" menus to their default settings. (p.55)</li> </ul>	-








### "About" Menu

- The "About" menu shows the setting details for the current image source.
- The "Lamp" item appears as 0H for 0–10 hours, and after that, it appears in units of 1 hour.

Computer/RGB video/ Component video (Analogue-RGB, <u>YCbCr</u><sup>♣</sup>, <u>YPbPr</u><sup>♣</sup>)



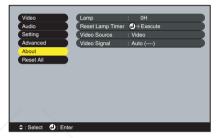

Video (S-Video, Composite video)


Sub-menu	Function	Default
Lamp	<ul><li>Displays the cumulative lamp operating time.</li><li>When the lamp warning period is reached, the display characters appear in red.</li></ul>	OH
Reset Lamp Timer	Initialises the lamp operating time. When this command is selected, the cumulative lamp operating time is reset to the initial default value.	-
Video Source	Displays the input source which is currently being projected.	
Input Signal	Displays the input signal settings. (Does not appear when the input source is composite video or S-Video.)	
Video Signal YourDLP.com	Shows the video signal format. (Does not appear when the input source is computer, component video or RGB video.)	-
Frequency SYNC	Displays the horizontal and vertical scanning frequencies. (Does not appear when the input source is composite video or S-Video.) Displays the sync polarity.	281-88 CESSORII
Polarity	(Does not appear when the input source is composite video or S-Video.)	





Sub-menu	Function	Default
SYNC Mode	Displays the sync attributes. (Does not appear when the input source is composite video or S-Video.)	-
Resolution	Displays the input resolution. (Does not appear when the input source is composite video or S-Video.)	-
Refresh Rate	Displays the refresh rate. (Does not appear when the input source is composite video or S-Video.)	-

## "Reset All" Menu

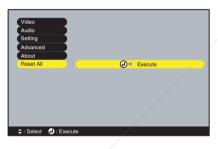

Sub-menu	Function	Default
Execute	<ul> <li>Resets all items in all menus to their default settings.</li> <li>Press the [Enter] button to display the confirmation screen, and select "Yes".</li> <li>Select "Reset" in an individual menu to reset only the settings for the items in each sub-menu.</li> <li>The "Input Signal", "Video Signal", "Lamp" and "Language" settings will not return to their default settings.</li> </ul>	







## Using the Configuration Menus

The configuration menus can be operated using the remote control only.

### Procedure

Press the [Menu] button on the remote control.

The main menu will be displayed.

 


**Remote control** 



## Select a menu item.

Press the [▲] or [V] button to move to an item to be selected.



Press the [Enter] button to confirm the selection of a menu item. The selected sub-menu will then be displayed.






#### ④◆Select [English] Language Color Adjustment Ocolor Temp. ORGB →Adjust Rear Proj ION OFF Ceiling ON OFF Execute Reset

 The items appearing in the "Video" menu and the "About" menu will vary FixYourDepending on the type of input source

Press the [A] or [V] button to move to an



item to be selected.

being projected. it-Merchant.com (800) 281-8860 TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES







## **5** Select a setting value.

Press the  $[\blacktriangleleft]$  and  $[\blacktriangleright]$  buttons to change the setting value. For commands which have ON/OFF

settings, use the  $[\blacktriangleleft]$  and  $[\blacktriangleright]$  buttons to select the desired setting, and then press the [Enter] button.

C	olor Adjustment	
Color Temp. :	8000K	±

## Tip :

- Sub-menu items which cause another sub-menu to be displayed when they are selected have () after them. If you select such menu items and press the [Enter] button, you can then change the settings in the next sub-menu which appears.
- Refer to "List of Functions" for details on the functions of each menu item. (p.46)



### **6** Select other menu items in the same way.

Repeat steps 2 to 5 to change the setting for other menu items. To return to a previous menu, press the [ESC] button.

### Close the menu.

Press the [Menu] button.











# Troubleshooting

This section describes how to identify problems and what to do if a problem is found.

Using the Help	60
When Having Some Trouble	61
Power Indicator	61
• 🚓 🕽 (Warning) Indicator	
When the Indicators Provide No Help	64





## **Using the Help**

If a problem occurs with the projector, the Help function uses on-screen displays to assist you in solving the problem. It uses a series of menus in a question and answer format.

## Procedure

# **1** Press the [Help] button on the projector's control panel.

 
The help menu will be displayed.

[  $\checkmark$  Select  $\blacktriangle$  ] buttons function as the up


If using the remote control, press the  $[\blacktriangle]$  and  $[\blacktriangledown]$  buttons to select an item.

**Select a menu item.** If using the control panel, the

and down keys.



Projector

 


Projector


Hel n Menu

Remote control

## **3** Confirm the selection.

 Press the [Enter] button to confirm the selection of a menu item.



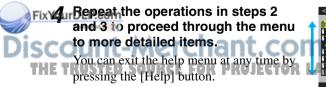



#### Tip :




If the Help function does not provide a solution to the problem, refer to "When Having Some Trouble" (p.61) or "When the Indicators Provide No Help" (p.64).

60

## When Having Some Trouble

If you are having a problem with the projector, first check the projector's indicators.

The projector is provided with the following two indicators. These indicators alert you to problems with projector operation.

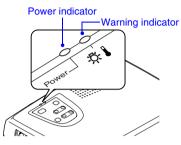

The following tables show what the indicators mean and how to remedy problems that they indicate.

## **Power Indicator**

		● : lit 👾 :	flashing
Status	Cause	Remedy or Status	See Page
Orange	Standby status	(Not abnormal) The power cable should only be disconnected when the projector is in this condition. Press the [Power] button to start projection.	p.28
Orange - <del>溁</del> -	Cool-down in progress	<ul> <li>(Not abnormal)</li> <li>Please wait. The <u>cool-down</u> → period lasts for about 20 seconds.</li> <li>The [Power] button does not work during cool-down. Press the button again after cool-down ends.</li> </ul>	p.31
	Projection in progress	(Not abnormal)	p.29
HE TRUS AD S	Warm-up in progress	(Not abnormal) Please wait. Warm-up time is approximately 40 seconds. After warm-up is complete, the flashing green indicator changes to steady green.	886 RIES p.29



## 주 (Warning) Indicator

● : lit 👾 : flashing

Status	Cause	Remedy or Status	See Page
Red ●	High internal temperature (overheating)	The lamp will turn off automatically and projection will stop. Wait for about 5 minutes without operating the projector. After about 5 minutes have elapsed, unplug the power cable and then check the following two points.	
		• Check that the air inlet and air outlet are clear, and that the projector is not positioned against a wall.	p.16
		• If the air filter is dirty, it should be cleaned. When the power cable is plugged back in, the projector will return to its previous state, so press the [Power] button on either the projector's control panel or the remote control to turn it back on. If the projector continues to overheat even after the above points have been checked, or if the indicators show a problem when the power is turned back on, stop using the projector, disconnect the power cable from the electrical outlet, and contact your dealer or the nearest address provided at "International Warranty Conditions" in <i>Safety Instructions/</i> <i>World-Wide Warranty Terms.</i>	p.73
Red -荣- (0.5- second intervals)	Problem with lamp	Disconnect the power cable from the electrical outlet and then remove the lamp and check if it is broken. If the lamp is not broken, reinstall it. Then reconnect the power cable and press the [Power] button on either the projector's control panel or the remote control to turn the power	
FixYourDLP.con	-Morc	back on. If the indicators still show a problem, stop using the projector, disconnect the power cable from the electrical outlet, and contact your dealer or the nearest address provided at	p.76
THE TRUSTE	SOURCE F	"International Warranty Conditions" in Safety Instructions/World-Wide Warranty Terms.	<u>SSORIES</u>





		If the lamp is broken replace by a new lamp, or contact your local dealer for further advise. If replacing the lamp yourself, be careful to avoid pieces of broken glass. (Projection cannot be carried out until the lamp is replaced.)	p.76
		Check that the lamp and the lamp cover are securely installed. If the lamp or lamp cover is not securely installed, the lamp will not switch on.	p.76
Red - <del>`,</del> (1-second intervals)	Internal problem	Stop using the projector, disconnect the power cable from the electrical outlet, and contact your dealer or the nearest address provided at "International Warranty Conditions" in <i>Safety</i> <i>Instructions/World-Wide Warranty Terms</i> .	
Orange -┿-	High-speed cooling in progress	(This is not an abnormality, but if the temperature rises too high again, projection will stop automatically.)	
		• Set the projector up in a place which is well- ventilated, and so that the air filter and exhaust vents are clear.	p.16
		• Clean the air filter.	p.73

#### Tip :

- If the projector is not operating properly even though the indicators are all showing normal, refer to "When the Indicators Provide No Help" on the following page.
- If an indicator is showing a status which does not appear in the previous tables, contact your dealer or the nearest address provided at "International Warranty Conditions" in Safety Instructions/World-Wide Warranty Terms.






## When the Indicators Provide No Help

If any of the following problems occur and the indicators do not offer a solution, refer to the pages given for each problem.

(p.64, 65)

- No images appear
- Poor image quality (out of (p.65, 66) focus or distorted)
- Only part of the image is (p.67) displayed (Large/small)
- The image colours are not (p.68) right
- Images appear dark (p.68)
- Images appear greenish (p.69) Images appear purplish
- No sound can be heard (p.69)
- The remote control does (p.69) not work
- The power does not turn (p.70) off

#### No images appear (Nothing at all appears)

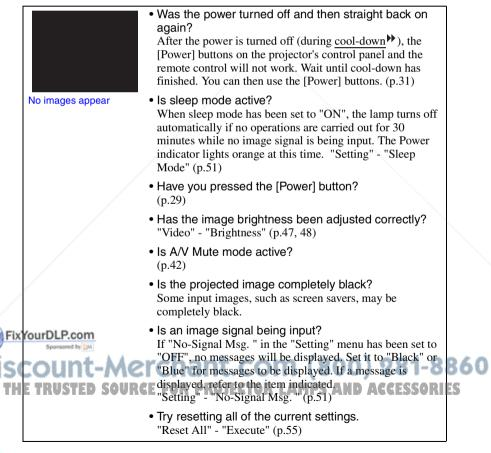



#### No images appear (Messages do appear)

"Not Supported." is displayed	• Check the mode which corresponds to the frequency of the image signals being output from the computer. Refer to the documentation provided with your computer for details on changing the resolution and frequency of the image signals being output from the computer. (p.86)
	• Are the cables connected correctly? (p.17–23)
	• Does the input signal match the connected source? Use the [Source] button on the projector's control panel (or the [Computer] or [S-Video/Video] button on the remote control) to select the correct signal source. (p.30)
"No-Signal." is displayed	• Is the power for the computer or video source turned on? (p.29)
	<ul> <li>If a laptop computer or a computer with a LCD screen has been connected to the projector, it is necessary to output the image signals to the projector rather than to the screen.</li> <li>Normally image signals are output to only the computer's LCD screen, so you need to change the output to an external destination. For some computer models, when the image signals are output externally, they no longer appear on the LCD screen. For details, refer to the section of the documentation provided with your computer under a heading such as "External output", "Connecting an external monitor" or similar. (p.30)</li> </ul>

Poor image quality (out of focus or distorted)



TOP

- Has the focus been adjusted correctly? (p.37)
  Is the lens cover still attached?
  Has the front adjustable feet been adjusted so that the image angle is too big?
- If the image angle is too big, the image will be out of focus vertically. (p.34)
- Is the projector at the correct distance? The recommended distance from the projector to the screen is within 0.9–11.3 m (2.9–37.0 ft.). Set up the projector so that the projection distance is within this range. (p.16)

65

 Is the projector beam perpendicular to the screen? (p.34) Is the lens dirty? (p.72) Has condensation formed on the lens? If the projector is suddenly taken from a cold environment to a warm environment, condensation may form on the surface of the lens, and this may cause the images to appear fuzzy. Set the projector up in the room approximately one hour before it is to be used. If condensation forms on the lens, turn off the power and wait for the condensation to disappear. • Have the "Sync.<sup>▶</sup>", "Tracking<sup>▶</sup>" and "Position" been adjusted correctly? If the "Auto Setup" command in the "Video" menu is set to "OFF", press the [Auto] button on the remote control to adjust these settings. If the images have not been correctly adjusted after using the automatic setup function and after pressing the [Auto] button, adjust the settings manually using the respective menus. (p.37, 47) Are the image signal format settings correct? If a computer, component video<sup>II</sup> or RGB video source is connected to the projector, use the "Input Signal" command in the "Video" menu to select the signal format which matches the signal connected source. (p.47, 49) If a composite video video source is connected to the projector, use the "Video Signal" command in the "Video" menu to select the video signal format. (p.49) Are the cables connected correctly? (p.17-23) Has the correct resolution been selected? Set the computer so that the signals that are output are compatible with this projector. Refer to the documentation provided with your computer for details on changing the Image is distorted settings. (p.86) Image contains • Have the "Sync. ▶", "Tracking ▶" and "Position" been interference ixYour adjusted correctly? .con If the "Auto Setup" command in the "Video" menu is set to "OFF", press the [Auto] button on the remote control to adjust these settings. If the images have not been correctly FO adjusted after using the automatic setup function and after pressing the [Auto] button, adjust the settings manually using the respective menus. (p.37, 47) Is an extension cable being used? If an extension cable is used, electrical interference may affect the signals. Use the accessory cables and check if this helps.

66



 Are the image signal format settings correct? If a computer, <u>component video</u> or RGB video source is connected to the projector, use the "Input Signal" command in the "Video" menu to select the signal format which matches the signal connected source. (p.47, 49)
 If a <u>composite video</u> or <u>S-Video</u> source is connected to the projector, use the "Video Signal" command in the "Video" menu to select the video signal format. (p.49)

#### Only part of the image is displayed (Large/small)

• Is the [Zoom] button setting correct? Use the [Zoom] button to adjust the size of the image. (p.33)
<ul> <li>Has the "Aspect Ratio" setting been selected correctly?</li> <li>Use the "Aspect Ratio" command in the "Video" menu to set the aspect ratio to "4:3". (p.49)</li> </ul>
• Is the E-Zoom function being used to enlarge the image? Press the [ESC] button on the remote control to cancel E-Zoom. (p.45)
• Has the "Position" setting been adjusted correctly? Use the "Position" command in the "Video" menu to adjust. (p.47, 48)
• Has the correct resolution been selected? Set the computer so that the signals that are output are compatible with this projector. Refer to the documentation provided with your computer for details on changing the settings. (p.86)
<ul> <li>Change the resolution for the laptop computer or computer with a LCD screen.</li> <li>Change the resolution so that the image is displayed in the whole of the projection area, or set the image signal to external output only. (p.30)</li> </ul>
<ul> <li>Has the computer been set for dual display? If dual display has been activated in the Display Properties of the connected computer's Control Panel, the projector will only display about half of the image on the computer screen. To display the whole of the image on the computer screen, turn off the dual display setting. Refer to the video driver manual for the computer's monitor for further details.</li> </ul>




THE

#### The image colours are not right

• Has the image brightness been adjusted correctly? "Video" - "Brightness" (p.47, 48)
• Are the cables connected correctly? (p.17–23)
<ul> <li>Are the image signal format settings correct? If the "Input Signal" command in the "Video" menu is set to "YPbPr" or "YCbCr" when a computer is connected, the projected images will appear purplish. If a computer, component video → or RGB video source is connected to the projector, use the "Input Signal" command in the "Video" menu to select the signal format which matches the signal connected source. (p.47, 49) If a composite video → or S-Video → source is connected to the projector, use the "Video Signal" command in the "Video" menu to select the video signal format. (p.49)</li> </ul>
<ul> <li>Has the image <u>contrast</u></li> <li>been adjusted correctly?</li> <li>"Video" - "Contrast" (p.47, 48)</li> </ul>
• Has the colour been adjusted correctly? "Advanced" - "Color Adjustment" (p.52)
<ul> <li>Have the colour intensity and tint been adjusted correctly? (The colours may not exactly match the colours in the image on the computer screen or LCD screen, but this is normal and is not the sign of a problem.)</li> <li>"Video" - "Color", "Tint" (p.48)</li> </ul>
• Is the lamp due for replacement? When the lamp is nearly due for replacement, the image will become darker and the colour quality will become poorer. When this happens, the lamp should be replaced with a new one. (p.76)

#### Images appear dark

TOP

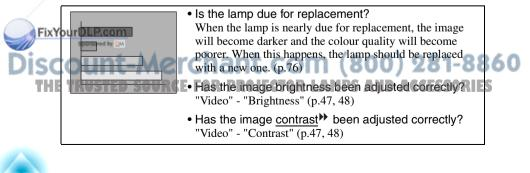


#### Images appear greenish/Images appear purplish

	• Do the input signal settings match the signals from the connected device? If the "Input Signal" command in the "Video" menu is set to "RGB" when a <u>component video</u> → signal source is connected to the projector, the images will appear greenish. If the "Input Signal" menu command is set to "YCbCr" or "YPbPr" when a computer is connected, the projected images will appear purplish. Select the correct signal format for the connected source. "Video" - "Input Signal" (p.47, 49)
--	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

#### No sound can be heard.


?	• Is the audio source connected correctly? (p.18, 24)
	• Has the correct audio input port been selected? Use the "Audio Input" command in the "Audio" menu to set the port for audio signal input. (p.50)
	• Is sound being output from the audio source? Check the volume for the audio source.
	<ul> <li>Has the volume been adjusted to the minimum setting?</li> <li>(p.50)</li> </ul>
	• Is A/V Mute mode active? The projector may be in A/V Mute mode. Press the [A/V Mute] button on the remote control to cancel the A/V Mute mode. (p.42)

#### The remote control does not work

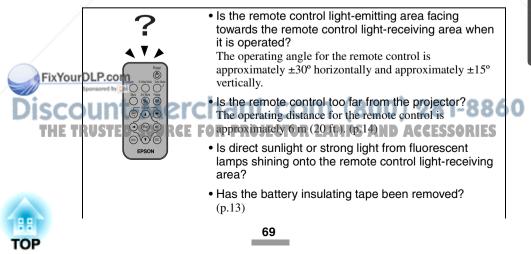

- Is there battery in the remote control? (p.74)
- Is the battery dead?
- $\bullet$  Has the battery been inserted correctly? (p.74)

The power does not turn off (after the [Power] button is pressed)

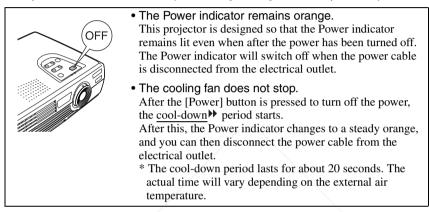





# **Appendices**

This chapter provides information on maintenance procedures to ensure the best level of performance for the projector for a long time.

Maintenance	72
Cleaning	
Cleaning the Projector Case	
Cleaning the Lens	
Cleaning the Air Filter	
Replacing Consumables	
Inserting the Battery	
Lamp Replacement Period	75
Replacing the Lamp	76
Resetting the Lamp Operating Time	77
Replacing the Air Filter	79
Optional Accessories	80
Glossary	81
List of ESC/VP21 Commands	84
Command List	
FixYourDLP.com • Communication Protocol	
Sponsored by DM • Cable Lavouts	
COLLINE of Supported Monitor Displays	91-986
THE TRUSTED Scomponent Video Input/RGB Video Input	ESSORI 86
component video inputitob video inputitioni	07
Composite Video /S-Video Input	
Composite Video/S-Video Input     Specifications	
Composite Video/S-Video Input	88



# Maintenance

This section describes maintenance tasks such as cleaning the projector and replacing consumable parts.

### Cleaning

You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.

#### Caution :

Be sure to read the separate Safety Instructions/World-Wide Warranty Terms before cleaning.

### **Cleaning the Projector Case**

Clean the projector case by wiping it gently with a soft cloth. If the projector is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the projector case. Then wipe the case again with a soft, dry cloth.

#### Caution :

Do not use volatile substances such as wax, alcohol or thinner to clean the projector case. These can cause the case to warp and make the coating finish peel off.

### **Cleaning the Lens**

Use a commercially-available air blower, or use a lens cleaning paper to gently wipe the lens.

#### Caution :

Do not rub the lens with harsh materials or subject the lens to shocks, as it can easily become damaged.








### Cleaning the Air Filter

If the air filter becomes clogged with dust, it can cause overheating and damage the projector.

Turn the projector upside down and use a vacuum cleaner to remove the dust from the air filter.

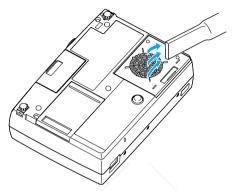

#### Tip :

- If the air filter is difficult to clean or if it is broken, it should be replaced. Contact your dealer for a spare air filter.
- Spare lamps are provided with a spare air filter. The air filter should also be replaced when the lamp is replaced.







### **Replacing Consumables**

This section describes how to replace the remote control battery, the lamp and the air filter.

#### Inserting the Battery

Use the following type of battery as a replacement. 1 CR2025 lithium battery

 
#### Caution :

*Be sure to read the Safety Instructions/World-Wide Warranty Terms before handling the battery.* 

#### Procedure


#### **1** Remove the battery holder.

While pushing the catch of the battery holder inwards, pull the battery holder out.



# **2** Remove the old battery and insert the new battery.

 
Check the position of the (+) mark inside the battery holder to ensure that that battery is inserted the correct way.




Push the battery holder in until it clicks.

#### Tip :

  Dispose of used batteries in accordance with local waste disposal regulations.





## Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

 





### Lamp Replacement Period

It is time to replace the lamp when:

• The message "Lamp Replace" appears on the screen for 30 seconds when projection starts



• When the 🕸 🌡 (Warning) indicator is flashing red at 0.5-second intervals

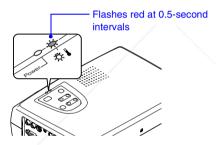

The projected image gets darker or starts to deteriorate

#### Tip :

• The replacement warning message is set to appear after about 1400 hours of lamp use in order to maintain the brightness and quality of the projected images. If you continue to use the lamp after this period, the possibility of the lamp breaking becomes greater. When the lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.

• The warning message appears after about 1400 hours of use, but the actual life of each maintain all lamp will vary depending on the characteristics of the lamp and on the way it has been used. Some lamps may stop operating before 1400 hours of use, so you should always have a spare lamp ready in case. THE T. Contact your dealer for a spare lamp: CTOR LAMPS AND ACCESSORIES





### Replacing the Lamp

#### Caution :

• If the lamp stops working and needs to be replaced, there is the danger that the lamp may break when handled.

If replacing the lamp of a projector that has been installed to the ceiling, you should always assume that the lamp is broken and remove the lamp cover very carefully.

 Wait until the lamp has cooled down sufficiently before opening the lamp cover. It takes a further one hour after the <u>cool-down</u> → period has finished for the lamp to be cool enough.

#### Procedure

**1** Turn off the projector power, wait for the cool-down period to end, and then disconnect the power cable.

The cool-down period lasts for about 20 seconds. The actual time will vary depending on the external air temperature.

**2** Wait until the lamp has cooled down, and then remove the lamp cover from the base of the projector.

 
It takes approximately one hour for the lamp to cool down by itself after the cooldown period has finished.

Put your finger into the recess, and pull straight out to remove the lamp cover.

#### Loosen the two lamp fixing screws.

Fix Your Use the screwdriver that is supplied with the spare lamp or a Phillips screwdriver to loosen the two lamp fixing screws that are securing the lamp to the projector.














### Take out the lamp.


5 Install the new lamp.

fixing screws.

Hold the lamp by the two tabs to lift it up and out from the projector.

 Hold the lamp so that it faces the correct way to fit into the projector, and then insert the lamp and tighten the two lamp

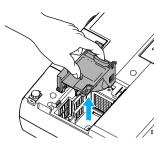






### 6 Install the lamp cover.

 Slide the cover in from the outside, and then push it in until it clicks into place.



### Tip :

- Install the lamp securely. If the lamp cover is removed, the lamp turns off automatically as a safety precaution. Moreover, the lamp will not turn on if the lamp or the lamp cover is not installed correctly.
- Spare lamps are provided with a spare air filter. The air filter should also be replaced when the lamp is replaced. (p.79)
- Dispose of used lamps properly in accordance with your local regulations.

### Resetting the Lamp Operating Time

FixYourDhe projector has a built-in counter which keeps track of the lamp operating time. When the cumulative operating time reaches a certain point, it causes the replacement warning message to be displayed. Therefore, the counter needs to be reset after the lamp has been replaced with a new one. You can do this using the configuration menu.

#### Tip :

Do not reset the lamp operating time except after the lamp has been replaced, otherwise the lamp replacement period will not be indicated correctly.






#### Procedure

Connect the power cable, and then press the [Power] button on either the projector's control panel or the remote control to turn on the power for the projector.


# **2** Press the [Menu] button on the remote control.

The configuration menu will be displayed.

**3** Select "Reset Lamp Timer" from the "About" menu and then press the [Enter] button.

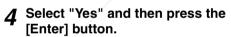

 The lamp operating time will then be reset.



Projector



Remote control

Lamp		1400H
Reset Lamp Tin	ner	Execute
Video Source		Computer
Input Signal		RGB
Frequency		HkHz
		VHz
SYNC Polarity		`H
		۷
SYNC Mode		
Resolution		x
► Refresh Rate		Hz



### FixYourDLP.com Sponsered by M Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES






### Replacing the Air Filter


#### Procedure


1 Turn off the projector power, wait for the <u>cool-down</u><sup>▶</sup> period to end, and then disconnect the power cable.

The cool-down period lasts for about 20 seconds. The actual time will vary depending on the external air temperature.

**2** Put your finger into the recess, and pull straight out to remove the air filter.

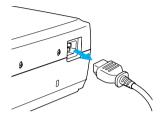

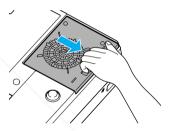

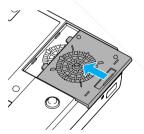

### **3** Install the new air filter.

Slide the cover in from the outside, and then push it in until it clicks into place.

#### Tip :

Dispose of used air filters properly in accordance with your local regulations.

### FixYourDLP.com Sponsered by M Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





# **Optional Accessories**

The following optional accessories are available for purchase if required. This list of optional accessories is current as of October 2002. Details of accessories are subject to change without notice.

Soft carry case ELPKS16 Use this case if you need to carry the projector by hand. Spare lamp ELPLP19D Use as a replacement for spent lamps. 50" portable screen ELPSC06 A compact screen which can be carried easily. (Aspect ratio 4:3) 60" screen ELPSC07 80" screen ELPSC08 100" screen ELPSC10 A portable roll-type screen. (Aspect ratio 4:3) VGA-HD15 PC cable ELPKC02 (1.8 m (6 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin) Use to connect the projector to a computer. VGA-HD15 PC cable ELPKC09 (3 m (9.8 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin) VGA-HD15 PC cable ELPKC10 (20 m (65.6 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin) Use this extension cable if the accessory computer cable is too short. Component video cable ELPKC19 (3 m (9.8 ft) - for mini D-Sub 15-pin/RCA male x 3) Use to connect a component video<sup>▶</sup> source. Remote control unit ELPST07 This is the same remote control as the projector's accessory remote control. Ceiling mount \* ELPMB11 Use when installing the projector to a ceiling. Ceiling plate \* ELPFC03 Pipe 370 (370 mm (14.57 inches)/silver)\* ELPFP04 Pipe 570 (570 mm (22.44 inches)/silver)\* ELPFP05 FixYDipDIZ700770 mm (30.31 inches)/silver)\* ELPFP06 Use when installing the projector to a high ceiling or a ceiling with veneer panels. Image presentation camera ELPDC02 28 800) THE TRUSTED SOURCE FOELPDC03ECTOR I AMPS AND ACCESSORIES ELPDC04 Use when projecting books, OHP films and slides. \* A special method of installation is required in order to suspend the projector from the ceiling. Please contact the place of purchase if you would like to use



this installation method.

# Glossary

Following is an explanation of some of the terms used in this guide which may be unfamiliar or which were not explained in the text of this guide itself. Further information can be obtained by referring to other commerciallyavailable publications.

	Aspect ratio	The ratio between an image's length and its height. HDTV images have an aspect ratio of 16:9 and appear elongated. The aspect ratio for standard images is 4:3.
	Colour temperature	The temperature of an object which is emitting light. If the colour temperature is high, the colours tend to take on a bluish tinge. If the colour temperature is lower, the colours tend to take on a reddish tinge.
	Component video	Video signals which have the video brightness signals and colour signals separated, in order to provide better image quality. In high-definition TV (HDTV), it refers to images which consist of three independent signals: Y (luminance signal), and Pb and Pr (colour difference signals).
	Composite video	Video signals which have the video brightness signals and colour signals mixed together. The type of signals commonly used by household video equipment (NTSC, PAL and SECAM formats). The carrier signal Y (luminance signal) and chroma (colour) signal which are contained in the colour bar are overlapped to form a single signal.
	Contrast	The relative brightness of the light and dark areas of an image can be increased or decreased in order to make text and graphics stand out more clearly, or to make them appear softer. Adjusting this particular property of an image is called "contrast adjustment".
	Cool-down	The cooling process for the projector's lamp unit continues even after the [Power] button on the projector's control panel or the remote control has been pressed to turn off the lamp. After the lamp turns off, the cooling fan continues operating, but all button operations are disabled. The length of time that this is happening is called the "cool-down period". The cool-down period lasts for about 20 seconds. The actual time will vary depending on the external air temperature.
/	Dolby Digital	A sound format developed by Dolby Laboratories. Normal stereo is a 2-channel format which uses two speakers. Dolby Digital is a 6-channel (5.1-channel) system which adds to this a centre speaker, two rear speakers and a sub-woofer.
Your CC E TI	HDTV DLP.com Sponsored by [M] DUNT-N RUSTED SO	An abbreviation for High-Definition Television. It refers to high- definition systems which satisfy the following conditions. • Vertical resolution of 750p or 1125i or greater (p = progressive scanning <sup>™</sup> , i = interlaced scanning <sup>™</sup> ) • Screen <u>aspect ratio</u> <sup>™</sup> of 16:9 • <u>Dolby Digital<sup>™</sup></u> audio reception and playback (or output) SORIES
		1



THI

	Interlaced scanning	A method of image scanning whereby the image data is divided into fine horizontal lines which are displayed in sequence starting from left to right and then from the top to the bottom of the screen. The even- numbered lines and odd-numbered lines are displayed alternately.
	Progressive scanning	A method of image scanning whereby the image data from a single image is scanned sequentially from top to bottom to create a single image.
	Refresh rate	The light-emitting element of a display maintains the same luminosity and colour for an extremely short time. Because of this, the image must be scanned many times per second in order to refresh the light-emitting element. The number of refresh operations per second is called the "refresh rate", and is expressed in hertz (Hz).
	Resize display	This function is use to project computer images that have a resolution or more than or less than the projector's panel resolution to be projected so that they fill the whole of the projection area.
	Security lock	A device consisting of a projector case with a hole in it that a commercially-available theft-prevention cable can be passed through in order to secure the device to a table or pillar. This projector is compatible with the Microsaver Security System manufactured by Kensington.
	SDTV	An abbreviation for Standard Definition Television. It refers to standard television systems which do not satisfy the conditions for High-Definition Television.
	sRGB	An international standard for colour intervals that was formulated so that colours which are reproduced by video equipment can be handled easily by computer operating systems (OS) and the Internet.
	SVGA	A type of video signal with a resolution of 800 (horizontal) x 600 (vertical) dots which is used by IBM PC/AT-compatible computers.
	S-Video	A video signal which has the luminance component and colour component separated in order to provide better image quality. It refers to images which consist of two independent signals: Y (luminance signal), and C (colour signal).
Fix	Sync. (Synchroni- sation) YourDLP.com	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images will not be of a good quality. The process of matching the phases of these signals (the relative position of the crests and troughs in the signal) is called "synchronisation". If the signals are not synchronized, problems such as flickering, blurriness and horizontal interference can occur.
Disc	Tracking E TRUSTED	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images will not be of a good quality. The process of matching the frequency of these signals (the number of crests in the signal) is called "tracking". If <b>ES</b> tracking is not carried out correctly, wide vertical stripes will appear in the projected images.



VGA	A type of video signal with a resolution of 640 (horizontal) x 480 (vertical) dots which is used by IBM PC/AT-compatible computers.
XGA	A type of video signal with a resolution of 1024 (horizontal) x 768 (vertical) dots which is used by IBM PC/AT-compatible computers.
YCbCr	The carrier signal which is contained in the colour bar signal used in modern TV transmissions. The name comes from the Y (luminance) signal and the CbCr (chroma (colour)) signals.
YPbPr	The carrier signal which is contained in the colour bar signal used in high-definition TV (HDTV) transmissions. The name comes from the Y (luminance) signal and the PbPr (colour difference) signals.





# List of ESC/VP21 Commands

### **Command List**

When a power ON command is sent to the projector, the power for the projector turns on. When the projector is in a command ready state, it returns the "3Ah" (:) code. Furthermore, when command processing is complete, the projector also returns a ":" code.

The ":" code status can be used to determine whether the projector is ready or busy. If command processing terminates with an error, an error message is output and then the ":" code is sent.

	Item	Command
Power ON/OFF	ON	PWR ON
	OFF	PWR OFF
Signal selection	Computer/Component Video (RGB)	SOURCE 11
	Computer/Component Video (YCbCr)	SOURCE 14
	Computer/Component Video (YPbPr)	SOURCE 15
	Video	SOURCE 41
	S-Video	SOURCE 42
	ON	MUTE ON
A/V Mute ON/OFF	OFF	MUTE OFF
A/V Mute Selection	Black	MSEL 00
	Blue	MSEL 01

### **Communication Protocol**

- Standard baud rate : 9600 bps
- Data length : 8 bits
- Parity : None
- Stop bit

### DISC Flow control Merch Nonet. COM (800) 281-8860 THE Connector shape URCE For D-Sub 9-pin (male) LAMPS AND ACCESSORIES


• Projector input port : Control (RS-232C)

: 1 bit



### **Cable Layouts**

- Connector shape : D-Sub 9 pin (male)
- Projector input connector : Control (RS-232C)

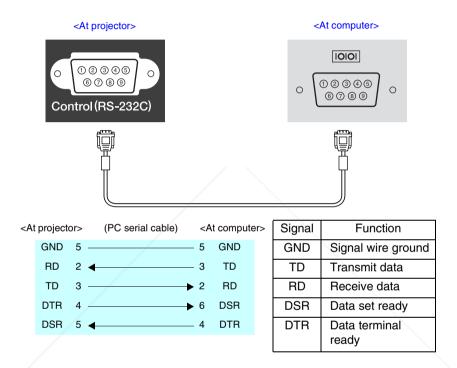





# **List of Supported Monitor Displays**

### Computer

Signal	<u>Refresh rate</u> ♥ (Hz)	Resolution (dots)	Resolutions for <u>resized</u> <u>display</u> ⊮ (dots)
PC98		640×400	800×500
EGA		640×350	800×438
<u>VGA</u> ►	60	640×480	800×600
VGACGA		640×400	800×500
VGAEGA		640×350	800×438
VGA text		720×400	800×444
VGA lexi		720×350	800×388
VESA	60/72/75/85,iMac*	640×480	800×600
<u>SVGA</u>	56/60/72/75/85,iMac*	800×600	800×600
<u>XGA</u> ▶	43i/60/70/75/85,iMac*	1024×768	800×600
MAC13"		640×480	800×600
MAC16"		832×624	800×600
MAC19"		1024×768	800×600
MAC21"		1152×870	800×600
NTSC		640×480	800×600
PAL/SECAM	/	720×540	800×600
<u>HDTV</u> ► (525i)			800×600
HDTV(525p)			800×600
HDTV(750p)	60	1280×720	800×450
HDTV(1125i)	60	1920×1080	800×450

\* Connection is not possible if the equipment does not have a VGA output port.

It may be possible to project signals which are not listed in the above table. **Fix However, not** all functions may be supportable with such signals.

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Signal	<u>Refresh rate</u> ⋫ (Hz)	Aspect ratio 4:3 Resolutions (dots)	Aspect ratio 16:9 Resolutions (dots)
<u>SDTV</u> →(525i) (D1)	60	800×600	800×450
SDTV (625i)	50	800×600	800×450
SDTV (525p) (D2)		800×600	800×450
<u>HDTV</u> (750p) 16:9 (D4)		800×600	800×450
HDTV (1125i) 16:9 (D3)		800×600	800×450

### Component Video Input/RGB Video Input

### Composite Video/S-Video Input

Signal	<u>Refresh rate</u> ⋫ (Hz)	Aspect ratio 4:3 Resolutions (dots)	Aspect ratio 16:9 Resolutions (dots)
TV (NTSC)		800×600	800×450
TV (PAL, SECAM)		800×600	800×450





# **Specifications**

Product name	Multimedia Projector EMP	-52		
Dimensions	309 (W) x 93 (H) x 219 (D) mm (12.2 (W) x 3.8 (H) x 8.6 (D) in.) (not including feet and lens)			
Panel size	0.5 in.			
Display method	Polysilicon TFT active mat	rix		
Drive method	Full-line 6-phase block seq	uential	writing	
Resolution	<u>SVGA</u> → 480,000 pixels (8	00 (W)	x 600 (H) dots) x 3	
Focus adjustment	Manual			
Zoom adjustment	Electronic (approx. 1 : 1.2)			
Lamp (light source)	UHE lamp, 130 W, Model	No.: EL	PLP19D	
Max. audio output	1W monaural			
Speaker	1			
Power supply	100–120 V AC, 2.2A 200–240 V AC, 1.0A 50/60 Hz			
Operating temperature	+5°-+35°C (41°-95°F ) (No condensation)			
Storage temperature	-10°-+60°C (14°-140°F ) (No condensation)			
Weight	Approx. 2.9 kg (6.4 lbs)			
Connectors	Computer/Component Video:	1	Mini D-Sub 15-pin (female) Blue	
	Monitor Out :	1	Mini D-Sub 15-pin (female) Black	
	Audio:	1	Stereo mini jack	
	Video:	1	RCA pin jack	
	S-Video:	1	Mini DIN 4-pin	
	Audio:	1	RCA pin jack	
FixYourDLP.com	Control (RS-232C):	1	D-Sub 9-pin (male)	

Sponsored by DM

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



#### Safety

USA UL1950 3<sup>rd</sup> Edition Canada CSA C22.2 No.950-95 (cUL) European Community The Low Voltage Directive (73/23/EEC) IEC60950 2<sup>nd</sup> Edition, +Amd.1, +Amd.2, +Amd.3, +Amd.4

#### EMC

USA FCC 47CFR Part15B Class B (DoC) Canada ICES-003 Class B


European Community The EMC Directive (89/336/EEC) EN55022, 1998 Class B EN55024, 1998 IEC61000-4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5, IEC61000-4-6, IEC61000-4-8, IEC61000-4-11, IEC61000-3-2, IEC61000-3-3


Australia/New Zealand AS/NZS 3548:1995, A1:1997, A2:1997 Class B CISPR Pub.22:1993, A1:1995, A2:1996, Class B





# Appearance

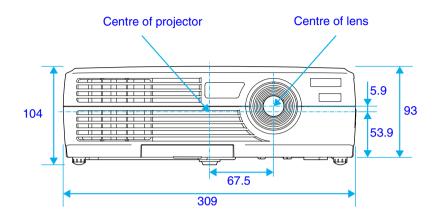

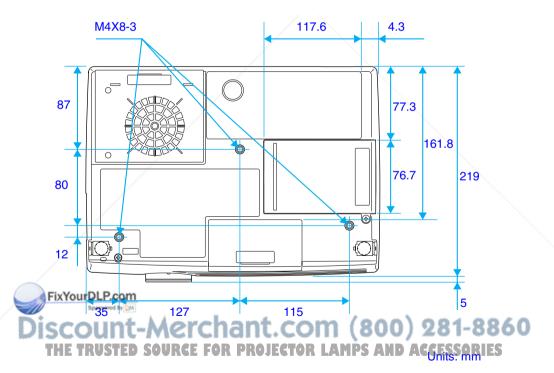



# Index

### **General Terms**

# Α

A/V Mute	
"About" Menu	54
"Advanced" Menu	
Air exhaust vent	8
Air filter	11
Air intake vent	11
Analogue-RGB	46, 54
Aspect ratio	44
"Audio" Menu	
Audio port	9, 18, 24
Auto Setup	

# В

Battery holder		74
Brightness4	7,	48

# С

Ceiling15	5, 53
Cleaning the Air Filter	73
Cleaning the Lens	72
Cleaning the Projector Case	72
Color	48
Color Adjustment	52
Color Mode Prompt	51
Color Mode 40, 47	7, 49
Color temperature	52
Component video	22
YourDLP.com Composite video	21
Computer/Component Video port	

lic	Computer/Component video port	
12	Connecting to a Computer Connecting to a Video Source	
TR	Connecting to a Video Source	21
	Contrast	47, 48
	Control (RS-232C) port	9
	Control panel	10

Cool-down	31, 61
Correcting Keystone Distortion	35
Cross	45

# Ε

Eligible computers	.17
E-Zoom	.45

# F

Focus	
Focus ring	8
Foot adjustment	
Freeze	
Frequency	54
Front adjustable foot	8

# G

Glossary
----------

# H

HDTV	
Help function	60

# 

Image size	16, 33
Indicators	8, 61
Input Signal	.47, 49, 54
Inserting the Battery	74

# Κ

Keystone	35	5
		5

# L

Lamp	50
Language52	
Lens cover8	



Fi

-

### Μ

Main menu	46
Menu	46
Monitor Out port	9

# Ν

No-Signal Msg51	l
-----------------	---

# 0

Operating distance (Remote control)	.14
Operating range (Remote control)	.14
Operating temperature	. 88
Optional accessories	. 80
Overheating	. 62

### Ρ

Part Names and Functions	8
Port	9, 30
Position	.37, 47, 48
Power cable	1, 28
Power indicator	8
Power inlet	11
Projection angle	
Projection distance	16
Projection	29
Prompt	51

# R

RCA video cable	21
Rear Proj	15, 53
Refresh Rate	55
Remote control	

# Remote control light-emitting area ......12

Remote control light-receiving area	<b>PR</b> 11
Replacing the Air Filter	79
Replacing the Lamp	76
"Reset All" Menu	55

54, 77
86
55, 86
53

# S

### Т

Tint	48
Tone	50
Tracking	37, 38, 47
Translucent screen	15
Turning off	<sup>31</sup> 281-8860

Using the Configuration Menu Functions

TOP

92

#### Index

# V

Video	
"Video" Menu	46
Video port	9
Video Signal	
Video Source	54
Volume	

## W

Warning indicator	8
When Having Some Trouble	61
Wide-screen Projection	44

## Υ

YCbCr	30,	48,	54
YPbPr	30,	48,	54

### Ζ

Zoom
------









### **DECLARATION of CONFORMITY**

According to 47CFR, Part 2 and 15 Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers

We	:EPSON AMERICA, INC.
Located at	:3840 Kilroy Airport Way
	MS: 3-13
	Long Beach, CA 90806
Tel	:562-290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR 2.909. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name :EPSON

FixYourDLP.qvie of Product

:Projector

Discount-Merchant com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



### FCC Compliance Statement For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification or Declaration of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FixYourDLP.com Sponsored by M Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

#### **General Notice:**

EPSON is a registered trademark of SEIKO EPSON CORPORATION. Macintosh, Mac, and iMac are registered trademarks of Apple Computer, Inc. IBM is a registered trademark of International Business Machines Corporation. Windows and Windows NT are trademarks of Microsoft Corporation in the United States of America.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

## FixYourDLP.com Sprease With Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES









This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

# Sponsors:

FixYourDLP.com

Sponsored by DM

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com