

Lamp Replacement - For models PT-52LCX66/PT-56LCX66/PT-61LCX66/PT-52LCX16/PT-56LCX16/PT-61LCX16

CAUTION:


Because of the possibility of injury, strictly follow the replacement procedure below.

For USA Only

Hg-LAMP CONTAINS MERCURY,
Manage in Accord with
Disposal Laws, See:
www.lamprecycle.org
or
1-888-843-9788

Lamp replacement procedure

- 1 Turn power off, wait until power indicator stops blinking red, then unplug the power cord from the wall outlet and confirm that the area around the lamp unit has cooled down.

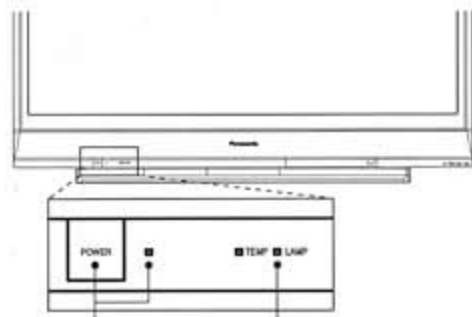

POWER button /POWER indicator LAMP indicator

Please wait more than one hour for lamp replacement.


[If you need to replace the lamp more urgently]

- The projection display has a forced cooling feature. After the POWER button is turned OFF, and during the first minute of the normal cooling fan operation, press the VOL+ button on the projection display and ▲ button on the remote control at same time for more than 5 seconds. The cooling fan operates for about 10 minutes. The LAMP indicator flashes red 5 times every 5 seconds.


Note:

Remove Front Cover after Front Door is opened.


- 2 Pull on both ends of the Front Cover ① with your fingertips to remove it.

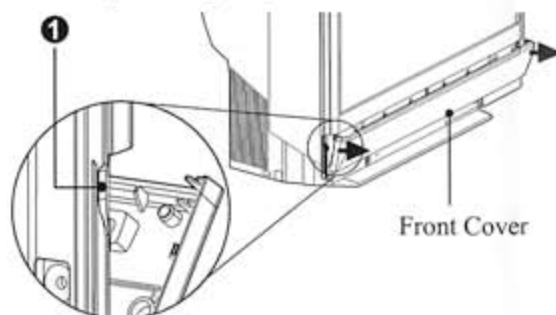

- 3 (1) Turn the Lamp Cover Lock/Open Knob to the left.
(2) Pull the Lamp Cover out and down to open it.

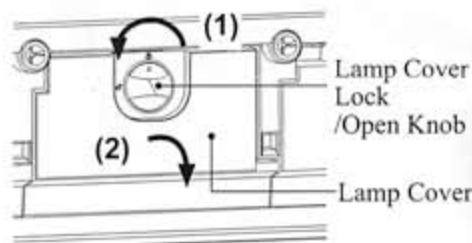


- 4 (1) Turn the Lamp Unit Lock/Open Knob to the left.
(2) Grasp the Lamp Unit Lock/Open Knob and slowly remove the Lamp Unit as shown.

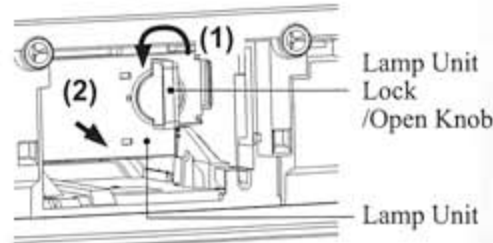

CAUTION


- The lamp unit is hot right after use and may cause burns if touched.
- Please allow the lamp unit to cool before handling or replacing it.

- 5 (1) Insert the new Lamp Unit being careful of the insertion direction.
• Press on the arrow mark to confirm proper insertion.
(2) Turn the Lamp Unit Lock/Open Knob to the right until it clicks.

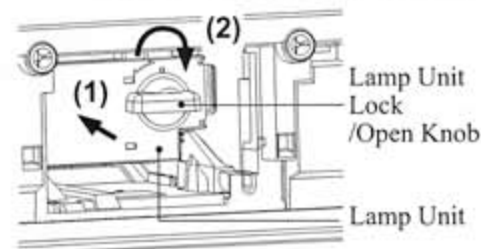


- Properly dispose of the old lamp. Please see the operating instructions for the projection display.
- Secure the lamp unit and lamp unit housing door. If they are not secured, a protective circuit will not allow the lamp to turn on.
- At this point, confirm that the lamp unit will not come out by pulling on the Lock/Open Knob.

- 6 (1) Close the Lamp Cover.
(2) Turn the Lamp Cover Lock/Open Knob to the right.

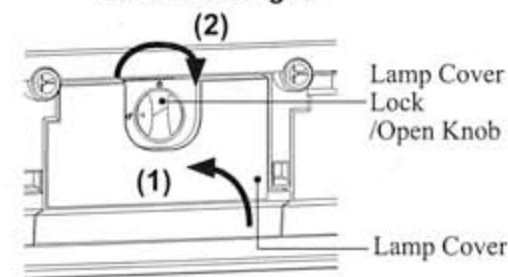

- 7 Be sure that the Hook on the Front Cover is securely fastened to the unit as shown.

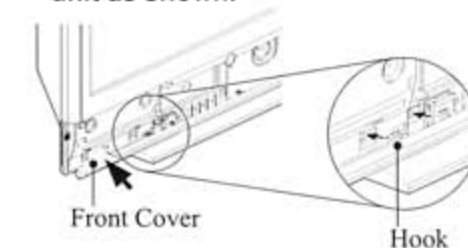


After lamp replacement, follow the procedure below

Warning:

Perform lamp time reset only when the lamp has been replaced.

Lamp time reset procedure

- 1 Be sure the power cord is plugged into a properly grounded wall outlet. Then, press the POWER button on the projection display or the remote control to turn the unit on.
- 2 While pressing the VOL- button on the projection display, hold down the 0 button on the remote control at same time for more than 5 seconds.

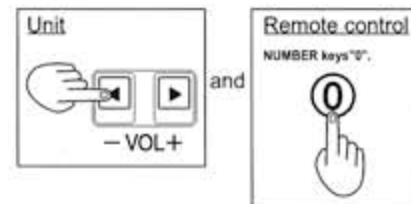

- 3 When reset procedure is complete, the following screen will appear.



- This screen may be different from the actual screen.

When lamp time reset is finished, the LAMP indicator goes out.