

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

#### About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

# Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com





# **User's Guide**

Multimedia Projector

EB-W6

EB-X6

EB-S6



# **Notations Used in This Guide**



## Safety Indications

So that you can use the projector safely and correctly, symbols are applied in the documentation and on the projector to indicate possible harm to the user or to others and the risk of damage to property.

The indications and their meaning are as follows. Make sure you understand them properly before reading the guide.

	ndicates the possibility of death or serious injury if this symbol is ignored or if sufficient care is not taken.	
Caution	Indicates the possibility of injury or damage to property if this symbol is ignored or if sufficient care is not taken.	

## General Information Indications

Attention	Indicates procedures which may result in damage or injury if sufficient care is not taken.
	Indicates additional information and points which may be useful to know regarding a topic.
	Indicates a page where detailed information regarding a topic can be found.
<b>*</b>	Indicates that an explanation of the underlined word or words in front of this symbol appears in the glossary of terms. See the "Glossary" section of the "Appendices". p.98
Procedure	Indicates operating methods and the order of operations.  The procedure indicated should be carried out in the order of the numbered steps.
[ (Name) ]	Indicates the name of the buttons on the remote control or the control panel.  Example: [Esc] button
"(Menu Name)"	Indicates configuration menu items. Example: "Image" - "Brightness"



# **Contents**

Part Names and Functions	_	<del>-</del>	Troubleshooting		
	6				
Front/Top		Using the Help	49		
Rear (EB-W6 only)	7	Problem Solving	51		
Rear (EB-X6/S6 only)	8	Reading the Indicators			
Control Panel (EB-W6/X6 only)		When the Indicators Provide No Help			
Control Panel (EB-S6 only)		·			
Remote Control (EB-W6 only)	11	Appendices			
Remote Control (EB-X6/S6 only)					
Base	15	Installation Methods	64		
Useful Functions		Cleaning			
		Cleaning the Projector's Surface			
Changing the Projected Image	17	Cleaning the Lens	65		
Switching by Automatic Detection of Input Signal (Source Search)		Cleaning the Air Filter and Air Intake Vent			
Direct Switching by Remote Control (EB-W6 only)	18	Replacing Consumables			
Functions for Enhancing Projection		Replacing the Remote Control Batteries			
Selecting the Projection Quality (Selecting Color Mode)	19	Replacing the Lamp	67		
Setting Auto Iris		Replacing the Air Filter	71		
Hiding the Image and Sound Temporarily (A/V Mute)	22	Saving a User's Logo	72		
Freezing the Image (Freeze)		Screen Size and Distance			
Changing the Aspect Ratio		EB-W6			
Enlarging Part of the Image (E-Zoom)		EB-X6			
Security Functions		EB-S6			
Managing Users (Password Protect)		Connecting to External Equipment	78		
Restricting Operation (Control Panel Lock)	34	Connecting to an External Monitor (EB-X6/S6 only)			
Anti-Theft Lock		Connecting and Removing a USB Device (EB-W6 only)			
		Connecting a USB Device	79		
Configuration Menu		Reading the Indicators			
		Removing a USB Device	79		
Using the Configuration Menu (For EB-W6)		Inserting and Ejecting a SD Card (EB-W6 only)			
Using the Configuration Menu (For EB-X6)	38	Inserting a SD Card			
Using the Configuration Menu (For EB-S6)	39	Reading the SD Card Access Lamp	80		
List of Functions		Ejecting a SD Card	81		
		Connecting with USB Cable for Projection (USB Display)			
Signal Menu FixYourDLP.com	41	How to Connect (For EB-W6)	82		
Image Menu Signal Menu FixYourDLP.com Settings Menu	43	How to Connect (For EB-X6/S6)			
Extended Menu	44	Connecting a USB Cable			
Info Menu (Display only)	46	Page Up/Down by Remote Control			
Reset Menu THE TRUSTED SOURCE FO	K P 47 J	Operating the Mouse Pointer by Remote Control (Wireless Mouse fun			

Using Slideshow (EB-W6 only)	90
Image Files that can be Projected in a Slideshow	90
Basic Slideshow Operations	
Setting Image File Display and Slideshow	
Optional Accessories and Consumables	97
Glossary	98
ESC/VP21 Commands	100
Command List	
Cable Layouts	
USB Connection Setup	101
List of Supported Monitor Displays	102
EB-W6	
EB-X6	105
EB-S6	107
Specifications	109
Specifications	
Operating Requirements of Supplied Software	
Appearance	
Index	


# **Projector Features**



#### Ease of use

## ■ The A/V mute slide makes it easy to project and store


You can stop and resume projection easily by opening and closing the A/V mute slide which makes giving clear presentations easier.



# ■ A single foot design means you do not have to make any difficult levelling adjustments

You can easily make height adjustments with one hand.


Quick Start Guide

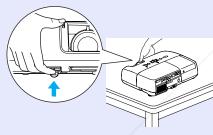

### ■ Connecting with USB cable for projection (USB Display)

You can project what's on the computer screen simply by connecting a Windows computer with a USB cable.

Quick Start Guide



# ■ Projecting images from a USB storage device or SD card without using a computer (EB-W6 only)

Connect the USB storage device or SD card to the projector, and you can project JPEG images of photographs shot with a digital camera and so on, as a slideshow. This makes projection easy, since it is not necessary to connect a computer. p.90

#### **Enhanced security functions**

## ■ Password Protect to restrict and manage users

By setting a password you can restrict who can use the projector. p.31

# Control Panel Lock restricts button operation on the control panel

You can prevent people from changing the settings on the projector without permission.  $\bigcirc$  p.34

## ■ Equipped with various anti-theft devices

The projector is equipped with the following security devices.  $\bigcirc$  p.35

- Security slot
- Security cable installation point

## Easy to handle

### ■ Direct power On/Off

In places where power is managed centrally, such as in a conference room, the projector can be set to power on and off automatically when the power source to which the projector is connected is switched on or off.

## ■ No cool down delay

After turning the projector's power off, you can disconnect the projector's power cable without having to wait for the projector to cool down first.


THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

The illustration on this page is of the EB-W6.

# **Part Names and Functions**



# Front/Top

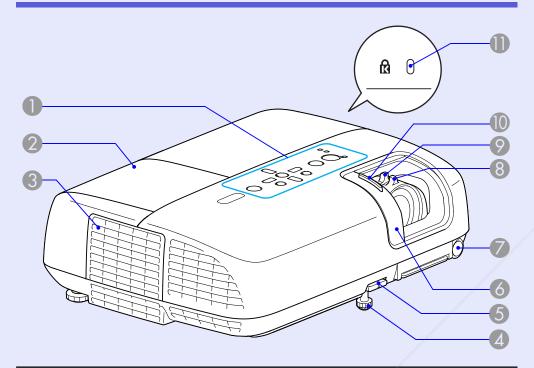


Name	Function
Control panel	<b>p</b> .9
2 Lamp cover	Open this cover when replacing the projector's lamp. p.68
3 Air exhaust vent	Caution  Do not projects that may become warped or otherwise affected by heat near the air exhaust vent and do not put your face or hands near the air exhaust vent while projection is in progress.

Nama	Function
Name	Function
Front adjustable feet	Extend and adjust the position of the projected image when the projector is placed on a surface such as a desk.   Quick Start Guide
<b>5</b> Foot adjust lever	Pull out the foot lever to extend and retract the front foot. • Quick Start Guide
<b>6</b> A/V mute slide	Slide shut when not using the projector to protect the lens. By closing during projection you can hide the image and the sound (A/V Mute). • Quick Start Guide, p.22
Remote receiver	Receives signals from the remote control.  • Quick Start Guide
8 Focus ring	Adjusts the image focus.  Quick Start Guide
Zoom ring (EB-W6/X6 only)	Adjusts the image size.   Quick Start Guide
A/V mute slide knob	Slide the knob to open and close the A/V mute slide.
¶ Security slot (பி)	The security slot is compatible with the Microsaver Security System manufactured by Kensington. p.35

nt.com (800) 281-8860 ROJECTOR LAMPS AND ACCESSORIES



# Rear (EB-W6 only)

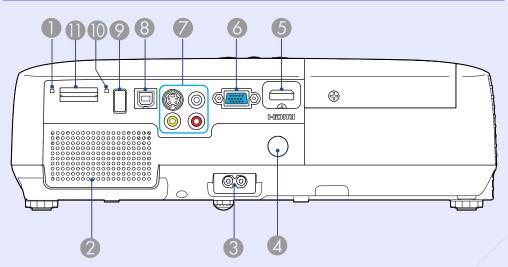


Name  SD Card Access	Function  Displays SD card access status.				mouse pointe can also use from a comp
Lamp  2 Speaker			9	USB port (Type A)	Connect a digi device to proje on the device.
Power inlet	Connects to the power cable.  Quick Start Guide		10	USB indicator	Indicates the s
A Remote receiver	Receives signals from the remote control.  • Quick Start Guide		1	SD card slot	Insert an SD ca
6 HDMI input port	For signals from a computer or HDMI- compatible video sources. • Quick Start Guide FixYourDLP.com	_			
6 Computer input port	For video signals from a computer and component video signals from other video sources.	t.C	OI OR	M (800) 28 LAMPS AND ACCE	S1-8860 SSORIES

	Name	Function
7	S-Video input port	For <u>S-video</u> <sup>▶</sup> signals from video sources.
	Video input port	For <u>composite video</u> signals from video sources.
	Audio input port	Connects to the audio output port of the equipment you want to project from and inputs the audio. • Quick Start Guide
8	USB port (Type B)	<ul> <li>You can use a number of functions by connecting a computer via a USB cable and making connection settings.</li> <li>Connect to a computer by USB cable to project images from the computer. p.82</li> <li>You can Page Up/Down and operate a mouse pointer using the remote control. You can also use this port to control the projector from a computer. p.86</li> </ul>
9	USB port (Type A)	Connect a digital camera or USB storage device to project a slideshow of images stored on the device. p.79, 90
10	USB indicator	Indicates the status of USB port (Type A) by flashing or being lit. p.79
0	SD card slot	Insert an SD card, and project a stored image file as a slideshow. • p.80, 90



# Rear (EB-X6/S6 only)

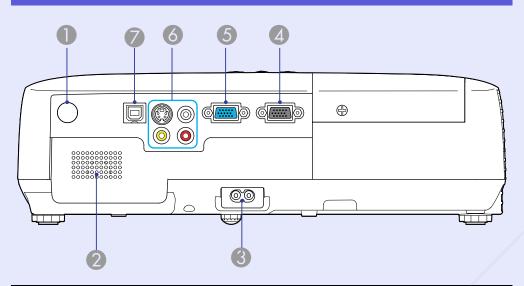


Name	Function
Remote receiver	Receives signals from the remote control.  • Quick Start Guide
2 Speaker	
3 Power inlet	Connects to the power cable.  Quick Start Guide
<b>Monitor Out port</b>	Outputs the image signal from the computer connected to the Computer input port to an external monitor. This is not available for <a href="mailto:component video">component video</a> signals or other signals being in any port other than the Computer input port.

	Name	Function
5	Computer input port	For video signals from a computer and component video signals from other video sources.
6	S-Video input port	For <u>S-video</u> <sup>▶</sup> signals from video sources.
	Video input port	For <u>composite video</u> signals from video sources.
	Audio input port	Connects to the audio output port of the equipment you want to project from and inputs the audio. • Quick Start Guide
7	USB port (Type B)	You can use a number of functions by connecting a computer via a USB cable and making connection settings.  • Connect to a computer by USB cable to project images from the computer.   • You can Page Up/Down and operate a mouse pointer using the remote control. You can also use this port to control the projector from a computer.   • p.86

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



# Control Panel (EB-W6/X6 only)

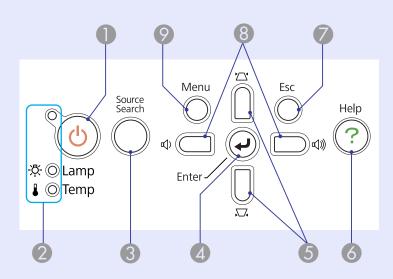

Name	Function
<b>①</b> [也] button	Turns the projector power on or off.  Quick Start Guide
Status indicators	The color of the indicators and whether they are flashing or lit indicates the status of the projector. p.51
[Source Search]     button	Changes to the next input source that is connected to the projector and is sending an image. p.17


FixYourDLP.com
Sponsored by M

Name	Function
4 [Enter] button	If pressed during projection of computer signal images, it automatically adjusts the tracking, synchronization, and position to project the optimum image.  When a configuration menu or a help screen is displayed, it accepts and enters the current selection and moves to the next level.  EB-W6 p.37, EB-X6 p.38
⑤ [□] [□] buttons	Corrects keystone distortion.  If pressed when a configuration menu or a help screen is displayed, these buttons select menu items and setting values.  • Quick Start Guide, EB-W6 • p.37, EB-X6 • p.38
[Help] button	Displays and closes the help screen which shows you how to deal with problems if they occur. p.49
[Esc] button	Stops the current function.  If pressed when a configuration menu is displayed, it moves to the previous menu level.  EB-W6 p.37, EB-X6 p.38
<b>⑧</b> [Φ] [Φ] buttons	Press to adjust the volume.  If pressed when a configuration menu or a help screen is displayed, these buttons select menu items and setting values.  • Quick Start Guide, EB-W6 • p.37, EB-X6 • p.38
9 [Menu] button	Displays and closes the configuration menu. EB-W6 p.37, EB-X6 p.38

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES




# **Control Panel (EB-S6 only)**

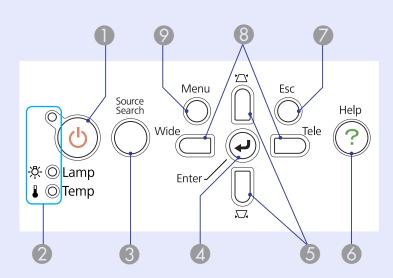

Name	Function				If pressed whe
<b>①</b> [也] button	Turns the projector power on or off.  Quick Start Guide				screen is displication items and setting and setting and setting are setting as a set of the set of
Status indicators	The color of the indicators and whether they are flashing or lit indicates the status of the projector. p.51	9	[Menu] but	tton	Displays and o
[Source Search]     button	Changes to the next input source that is connected to the projector and is sending an image. p.17				
4 [Enter] button	If pressed during projection of computer signal images, flomatically adjusts the tracking, synchronization, and position to project the optimum image.  When a configuration menu or a help screen is displayed, it accepts and enters the current selection and moves to the next level. p.39				

	Name	Function
5	[쯔] [쯔] buttons	Corrects keystone distortion.  If pressed when a configuration menu or a help screen is displayed, these buttons select menu items and setting values.  • Quick Start Guide, p.39
6	[Help] button	Displays and closes the help screen which shows you how to deal with problems if they occur. p.49
7	[Esc] button	Stops the current function.  If pressed when a configuration menu is displayed, it moves to the previous menu level.  p.39
8	[Wide] [Tele] buttons	Press to adjust Tele/Wide. Press [Tele] to make the projected image size smaller, and press [Wide] to make it larger.  If pressed when a configuration menu or a help screen is displayed, these buttons select menu items and setting values.  • Quick Start Guide, p.39
9	[Menu] button	Displays and closes the configuration menu.  p.39

# Remote Control (EB-W6 only)

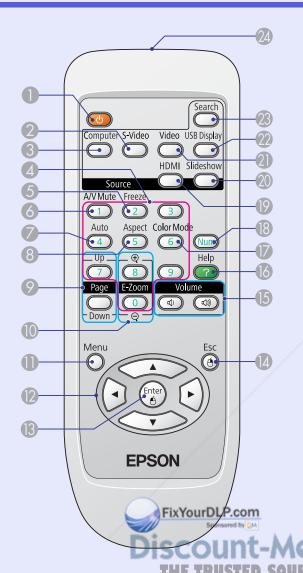

	Name	Function
0	[也] button	Turns the projector power on or off.  Quick Start Guide
2	[S-Video] button	Changes to images from the S-Video input port.    port.    p.18
3	[Computer] button	Changes to images from the Computer input port.    port.    p.18
4	Numeric buttons	Use these buttons when entering a password.  p.31
5	[Freeze] button	Images are paused or unpaused. p.23
6	[A/V Mute] button	Turns the video and audio on or off. <b>☞</b> p.22
7	[Auto Setup] button	If pressed during projection of computer signal images, it automatically adjusts the tracking, synchronization, and position to project the optimum image.
8	[Aspect] button	The <u>aspect ratio</u> changes each time the button is pressed. <b>p.24</b>
9	[Page] buttons (+) (-)	You can Page Up/Down between pages projected by USB display.  p.82 Page Up/Down between slides of a slideshow can be made.  p.90 Page Up/Down is enabled when the projector is connected to a computer with a USB cable.  p.86
TOR	[E-Zoom] buttons (⊕) (⊖) LAMPS AND ACCE	<ul> <li>(+) Enlarges the image without changing the projection size.</li> <li>(-) Reduces parts of the image that have been enlarged using the [⊕] button.</li> <li>p.29</li> </ul>



Name	Function
(Menu] button	Displays and closes the configuration menu.  p.37
D [ button	If pressed when a configuration menu or a help screen is displayed, these buttons select menu items and setting values. p.37, 49  Select an item or photograph during slideshow projection. p.90  When using the Wireless Mouse function, the mouse pointer moves in the direction you press the button. p.87
[Enter] button	When a configuration menu or a help screen is displayed, it accepts and enters the current selection and moves to the next level.  p.37, 49  When using the Wireless Mouse function, this functions as the left mouse button.  p.87
[Esc] button	Stops the current function. If pressed when a configuration menu is displayed, it moves to the previous level. p.37, 49 When using the Wireless Mouse function, this functions as the right mouse button. p.87
[Volume] buttons (や) (ベ)	(➪) Lowers the volume. (➪)) Raises the volume.
[Help] button	Displays and closes the help screen which shows y ow to deal with problems if they occur.
[Color Mode] button	Each time the button is pressed, the color mode changes. P. 19 ED SOURCE FOR PRO

Name	Function
[Num] button	Use these buttons when entering a password.  p.31
[HDMI] button	Changes to images from the HDMI input port.  p.18
② [Slideshow] button	Changes to slideshow images. p.18
[Video] button	Changes to images from the Video input port.  p.18
[USB Display] button	Changes to USB Display images. p.18
[Source Search] button	Changes to the next input source that is connected to the projector and is sending an image. p.17
Remote control light-emitting area	Outputs remote control signals.

Each time the button is pressed, the color CIT COM (800) 281-8860 mode changes. For projector LAMPS AND ACCESSORIES



# Remote Control (EB-X6/S6 only)



FixYourDLP.com

N	<b>-</b> .:
Name	Function
<b>①</b> [也] button	Turns the projector power on or off. <b>Quick</b> Start Guide
[Source Search] button	Changes to the next input source that is connected to the projector and is sending an image. p.17
[Menu] button	Displays and closes the configuration menu. EB-X6    p.38, EB-S6    p.39
[Enter] button	When a configuration menu or a help screen is displayed, it accepts and enters the current selection and moves to the next level. EB-X6 p.38, EB-S6 p.39 When using the Wireless Mouse function, this functions as the left mouse button. p.87
[Auto Setup] button	If pressed during projection of computer signal images, it automatically adjusts the tracking, synchronization, and position to project the optimum image. p.41
[Page] buttons (+) (-)	You can Page Up/Down between pages projected by USB Display.   p.82 Page Up/Down is enabled when the projector is connected to a computer with a USB cable.  p.86
[E-Zoom] button (+) (-)	<ul> <li>(+) Enlarges the image without changing the projection size.</li> <li>(-) Reduces parts of the image that have been enlarged using the [+] button.</li> </ul>
[A/V Mute] button	Turns the video and audio on or off. p.22
[Freeze] button	Images are paused or unpaused. p.23




Name	Function			Name		
[Volume] button	The volume adjustment screen is displayed. You can adjust the volume by pressing the  [◀]/[▶] buttons.		16	Remote con light-emittin area		Outputs remot Guide
Numeric buttons	Use these buttons when entering a password.  p.32					
② [◀][▶] buttons	If pressed when a configuration menu or a help screen is displayed, these buttons select menu items and setting values.  • Quick Start Guide, EB-X6 • p.38, EB-S6 • p.39  When using the Wireless Mouse function, the mouse pointer moves in the direction you press the button. • p.87					
[Esc] button	Stops the current function. If pressed when a configuration menu is displayed, it moves to the previous level.  EB-X6 p.38, EB-S6 p.39  When using the Wireless Mouse function, this functions as the right mouse button. p.87					
[Help] button	Displays and closes the help screen which shows you how to deal with problems if they occur. p.49	_				
<b>⑤</b> [▲] [▼] button	If pressed when a configuration menu or a help screen is displayed, these buttons select menu items and setting values.  EB-X6	t.c	TOR	M (800 LAMPS AND	) 28 ACCE	31-8860 SSORIES

Name	Function
Remote control light-emitting area	Outputs remote control signals.



## **Base**

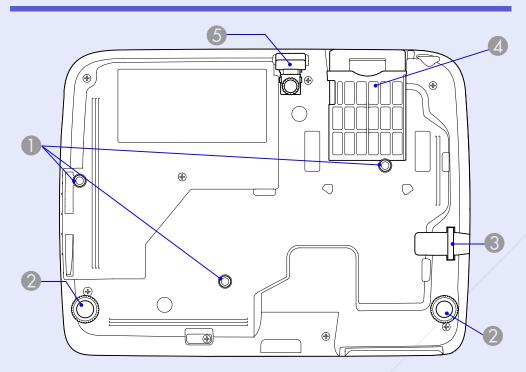

Name	Function
Air filter (Air intake vent)	This prevents dust and other foreign particles from getting inside the projector when air is drawn in. The projector displays a warning message when it is time to clean or replace the air filter. • p.65, 71
Front adjustable feet	<b>☞</b> p.6

Name	Function	
Suspension bracket fixing points (3 points)	Attach the optional ceiling mount here when suspending the projector from a ceiling.  p.64, 97	
Rear foot (2 points)	Turn to extend and retract to adjust the horizontal tilt.    Cuick Start Guide	
Security cable installation point	Pass a mercially available anti-theft wire lock through here when you want to secure the projector to a fixed object. p.35	

here when you want to secure the (800) 281-8860 a fixed object. Sp. 35 cf for projector LAMPS AND ACCESSORIES



# **Useful Functions**

This chapter explains useful functions for giving presentations and so on, and the security functions.

Changing the Projected Image17	Changing the Aspect Ratio	<b>2</b> 4
• Switching by Automatic Detection of Input Signal (Source Search)17	Switching methods Changing the aspect ratio of video equipment images	25
• Direct Switching by Remote Control (EB-W6 only)18	Changing the aspect of computer images (For EB-X6/S6) Changing the aspect of computer image/HDMI image	
Functions for Enhancing Projection19	(For EB-W6) • Enlarging Part of the Image (E-Zoom)	
• Selecting the Projection Quality (Selecting Color Mode)19	Security Functions	31
Changing color mode by remote control (EB-W6 only)19	Managing Users (Password Protect)	31
Changing color mode with the configuration menu20	Type of Password Protect	31
• Setting Auto Iris21	Setting Password Protect	31
Hiding the Image and Sound Temporarily	Entering the Password	33
(A/V Mute)22	<ul> <li>Restricting Operation (Control Panel Lock)</li> </ul>	34
	Anti-Theft Lock	35
• Freezing the Image (Fre	Installing the wire lock	

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

# **Changing the Projected Image**




Use the following methods to switch images for projection.

- Switching by source search
   The projector automatically detects signals being input from connected equipment, and the image being input from the equipment is projected.
- Direct switching (EB-W6 only)
   Switch by pressing the button for the target input port on the remote control.

# Switching by Automatic Detection of Input Signal (Source Search)

You can project the target image quickly because the [Source Search] button skips input ports where no image is being input.

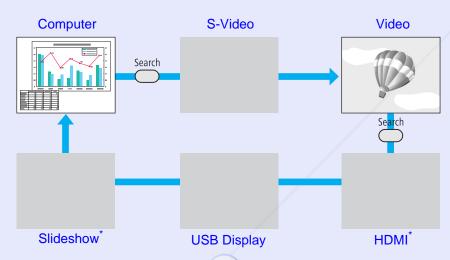


\* Switching to HDMI and Slide are only available with EB-W6.

#### **Procedure**


When your video equipment is connected, start playback before beginning this operation.


Using the remote control

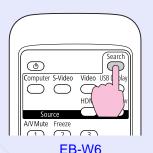



Using the control panel

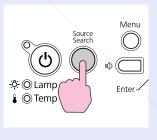

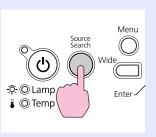


**EB-W6/X6** 

EB-S6

When two or more pieces of equipment are connected, press the [Source Search] button until the target image is projected.

iscount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

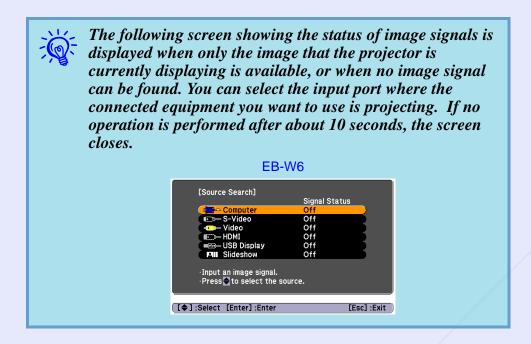

# **Direct Switching by Remote Control (EB-W6 only)**

You can switch directly to the targeted source by pressing a button on the remote control.



Refer to the following for button operation. Refer to the following for button operation. Source for projector LAMPS AND ACCESSORIES

# **Functions for Enhancing Projection**



# **Selecting the Projection Quality (Selecting Color Mode)**

You can easily obtain the optimum image quality simply by selecting the setting that best corresponds to your surroundings when projecting. The brightness of the image varies depending on the mode selected.

Mode	Application
Game	Ideal for use in a bright room. This is the brightest mode and reproduces shadow tones well.
Presentation	Ideal for making presentations using color materials in a bright room.
Text	Ideal for making presentations using black-and- white materials in a bright room.
Theater	Ideal for watching films in a dark room. This gives images a natural tone.
Photo*1	Ideal for projecting still pictures, such as photos, in a bright room. This makes images vivid and brings them into contrast.
Sports*2	Ideal for watching TV programmes in a bright room. This makes images vivid and brings them to life.
sRGB <sup>▶▶</sup>	Ideal for images that conform to the sRGB color standard.
Blackboard	Even if you are projecting onto a blackboard (greenboard), this setting gives your images a natural tint, just like when projecting onto a screen.

<sup>\*1</sup> Selectable only with the following signal inputs.

Computer, HDMI Digital-RGB (EB-W6 only), USB Display, Slideshow (EB-W6 only)


\*2 Selectable only with the four rig signal inputs.

Component video, S-Video, composite video, HDMI component


(EB-W6 only)

Changing color mode by remote control (EB-W6 only)

## Procedure

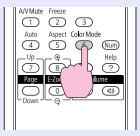

Each time you press the button, the color mode name is displayed on the screen and the color mode changes.

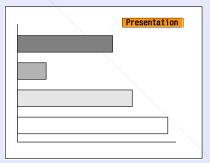

If you press the button while the color mode name is displayed on the screen, it changes to the next color mode.

Select a Color Mode name.

menu.

Press the [Menu] button to close the configuration

Changing color mode with the configuration menu

## Procedure



Press the [Menu] button and select "Image" - "Color Mode" in the configuration menu.

EB-W6 **p.37** 


EB-X6 **☞ p.38** 


EB-S6 **p.39** 

## Using the remote control




Using the control panel

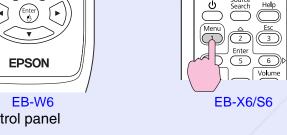

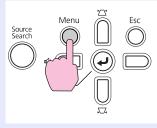

**EB-W6/X6** 

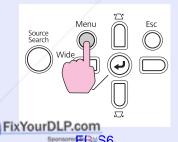

**EPSON** 

Merchant.com (800) 281-8860

# **Setting Auto Iris**

By automatically setting the luminance according to the brightness of the displayed image, it lets you enjoy deep and rich images.

## Procedure



Press the [Menu] button and select "Image" - "Auto Iris" in the configuration menu.

EB-W6 **p.37** 

EB-X6 **p.38** 

EB-S6 **p.39** 

### Using the remote control



EB-W6
Using the control panel





EB-W6/X6

2 Select "On".

The set value is stored for each color mode.


Press the [Menu] button to close the configuration menu.



This item can be selected only when "Game" or "Theater" is selected as the "Color Mode" setting in the "Image" menu.


# Hiding the Image and Sound Temporarily (A/V Mute)

You can use this when you want to focus the audience's attention on what you are saying, or if you do not want to show details such as when you are changing between files during presentations from a computer.

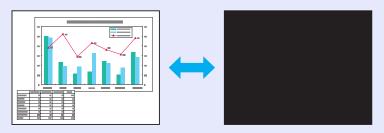

#### **Procedure**

#### Remote control

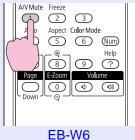





EB-X6/S6

### Projector



Each time you press the button, or the A/V mute slide is opened or closed, A/V Mute turns on or off.




- If you use this function when projecting moving images, the images and sound continue to be played back by the source, and you cannot return to the point where A/V Mute was activated.
- From the remote control you can choose to display black, blue, or logo as the A/V mute display using the "Extended" - "Display" - "A/V Mute" setting in the configuration menu. p.44
- When the A/V mute slide is closed and A/V Mute begins, the power supply can be set to automatically turn off after about 30 minutes by setting "Extended" - "Operation" -"Lens Cover Timer" in the configuration menu. p.45


# Freezing the Image (Freeze)

When the moving image on the screen is frozen, the image continues to project, so you can project a moving image one frame at a time like a still photo. Also, you can perform operations such as changing between files during presentations from a computer without projecting any images if the Freeze function is activated beforehand.

#### Procedure

#### Remote control

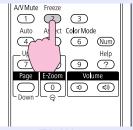

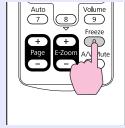

EB-X6/S6

FixYourDLP.com



Each time you press the button, Freeze turns on or off.



ount-Merchant.com (800) 281-8860

- Audio does not stop.
- The image source continues to play back the moving images even while the screen is frozen, so it is not possible to resume projection from the point where it was paused.
- If the [Freeze] button is pressed while the configuration menu or a help screen is displayed, the menu or help screen being displayed is cleared.
- Freeze still works while E-Zoom is being used.



# **Changing the Aspect Ratio**


When you connect video equipment and project images that have been recorded in digital video or onto DVDs in 16:9 wide-screen format, change the <u>aspect ratio</u>. Changing the aspect ratio is also required when you want to project computer images at full size.


Switching methods and types of aspect ratio are as follows.

# Switching methods

Procedure

EB-W6

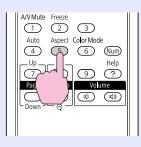

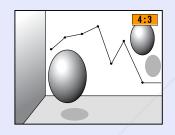

Each time you press the button, the aspect name is displayed on the screen and the aspect changes.

If you press the button while the aspect name is displayed on the screen, it changes to the next aspect mode.


## EB-X6/S6




Press the [Menu] button and select "Signal" - "Aspect" from the configuration menu.

EB-X6 p.38 EB-S6 p.39


Using the remote control

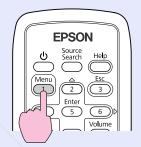

Using the control panel

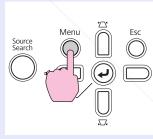



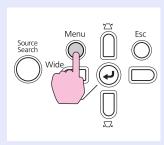


EB-S6




iscount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



Press the [Enter] button to display the "Aspect" screen.

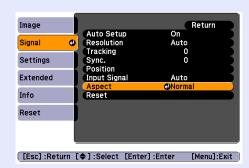


3 Select the aspect ratio and press the [Enter] button.




Your selected aspect is set.

## Changing the aspect ratio of video equipment images


## **EB-X6/S6**

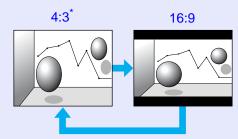

\* During 720p/1080i signal input, the display has a zoom ratio of 4:3 (display of image with left and right cut off).

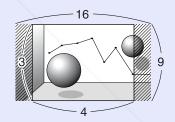

## EB-W6

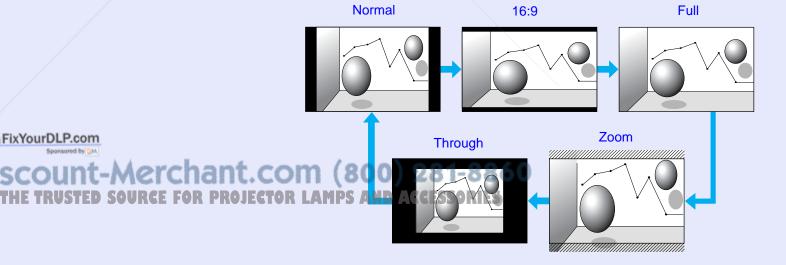



## ■ Changing the aspect of computer images (For EB-X6/S6)

When projecting input images from the Computer Input port, the aspect ratio can be changed as follows.

	Setting	Explanation	Projection example	
Normal	During image input from Computer Input port	Projects to the full projection size retaining the aspect of the input image.		
4:3		Projects to the full projection size at an aspect of 4:3. Apply when you want to project images with a 5:4 aspect ratio (1280 × 1024, etc.) at full projection size.	During 1280 × 1024 signal input	
16:9		Projects at aspect ratio 16:9. Apply when you	Normal 4:3  During 1280 × 1024 signal input	_
		want to project a full screen on a 16:9 screen.		



When some portions of an image are missing or not all of the image can be projected during computer image projection, set "Resolution" in the configuration menu to "Wide" or "Normal" according to the panel size of the computer. p.41

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



## ■ Changing the aspect of computer image/HDMI image (For EB-W6)

When projecting input images from the Computer input port or HDMI input port, the aspect ratio can be changed as follows. For EB-W6 the projection size is 1280 x 800 dots (aspect ratio 16:10) due to WXGA panel resolution. When projecting on to 16:9 screens, set the aspect to "16:9".

	Cotting	Evalenation	Projection example
Normal	Setting  During image input	Explanation Projects to the full projection size retaining the	Projection example During 1024 × 768 signal input
	from Computer input port	aspect of the input image.	1024 — 1280 — 1280 — 1800 — 1067 — 10
Auto	During image input from HDMI input	Projects in an appropriate aspect based on	During 1280 × 800 signal input
	port	information from the signal being input.	1280 1280   1280   1800   1800
16:9		Projects to the full projection size at an aspect of	During 1024 × 768 signal input
		16:9.	$\begin{array}{c c} & & & & & & & & & & & & & & & & \\ \hline & & & &$
Full		Projects to full projection size.	During 1024 × 768 signal input
	D		8 00



Setting	Explanation	Projection example
Zoom	Projects to full projection size in the lateral direction retaining the aspect ratio of input image. Parts that extend beyond the projection size are not projected.	During 1024 × 768 signal input
Through	Projects at the resolution of the input image size to the center of the screen. This is ideal for clearer projection. When image resolution is above $1280 \times 800$ , the periphery of the image is not projected.	During 800 × 600 signal input  During 1400 ×1050 signal input  1280  1050  800  1050  800  10400  1400  1400




When some portions of an image are missing or not all of the image can be projected during computer image projection, set "Resolution" in the configuration menu to "Wide" or "Normal" according to the panel size of the computer. p.41



# **Enlarging Part of the Image (E-Zoom)**

This is useful when you want to expand images such as graphs and tables to see them in greater detail.

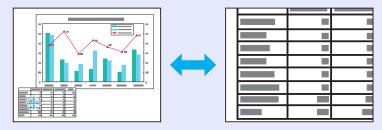

## Procedure



Start E-Zoom.

#### Remote control









EB-X6/S6




Move the cross to the area of the image that you want to enlarge.

#### Remote control

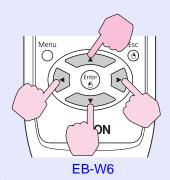

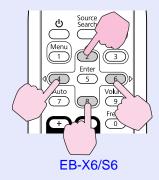

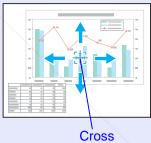








# Enlarge.

#### Remote control

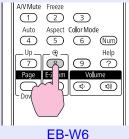



EB-X6/S6

Each time the button is pressed, the area is enlarged. You can enlarge quickly by holding the button down.

You can reduce the enlarged image by pressing the [-] button. Press the [Esc] button to cancel.



- The enlargement ratio appears on the screen. The selected area can be enlarged to between 1 to 4 times in 25 incremental steps.
- Hold down the  $[\blacktriangle][\blacktriangledown][\blacktriangle][b]$  button to scroll the image.

# **Security Functions**

The projector has the following enhanced security functions.

- Password protect You can limit who can use the projector.
- Control Panel Lock You can prevent people from changing the settings on the projector without permission.
- Anti-Theft Lock The projector is equipped with various types of anti-theft security devices.

# **Managing Users (Password Protect)**

When the Password Protect function is activated, people who do not know the password cannot use the projector to project images even if the projector power is on. Furthermore, the user's logo that is displayed when you turn on the projector cannot be changed. This acts as an anti-theft device as the projector cannot be used even if it is stolen. At the time of purchase the Password Protect function is not activated.

## Type of Password Protect

The following two kinds of password protect settings can be made according to how the projector is being used.

#### 1. "Power On Protect"

When "Power On Protect" is "On", the password must be entered whenever the projector is turned on after it has been disconnected from the power supply to which it was connected the last time the password was entered. If the correct password is not entered, projection does not start.

## 2."User's Logo Protect"

FixYourDLP.com Even if someone tries to change the user's logo set by the owner of the projector, it cannot be changed. When "User's Logo Protect" is set to "On" the following setting changes are prohibited.

- Capturing a user's logo
- Changing settings of "Display Background", "Startup Screen", and "A/V Mute" in the "Display" setting in the configuration menu.

## Setting Password Protect

Use the following procedure to set Password Protect.


#### **Procedure**




## Hold down the [Freeze] button for about five seconds.

The password protect setting menu is displayed.

#### Remote control

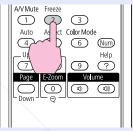





EB-X6/S6



• If Password Protect is already activated, you must enter the password.

If the password is entered correctly, the password protect setting menu is displayed. T'Entering the Password"

When the password is set, stick the password protect sticker in a visible position on the projector as a further theft deterrent.



2

## Turn on "Power On Protect".

- (1) Select "Power On Protect", and then press the [Enter] button.
- (2) Select "On", and then press the [Enter] button.
- (3) Press the [Esc] button.
- 3

# Turn on "User's Logo Protect".


- (1) Select "User's Logo Protect", and then press the [Enter] button.
- (2) Select "On", and then press the [Enter] button.
- (3) Press the [Esc] button.
- 4


## Set the password.

- (1) Select "Password", and then press the [Enter] button.
- (2) When the message "Change the password?" is displayed, select "Yes" and then press the [Enter] button. The default setting for the password is "0000". Change this to your own desired password. If you select "No", the screen shown in step 1 is displayed again.

(3) Enter a four digit number using the numeric buttons. (With the EB-W6, enter the digit while holding down the [Num] button.) The number entered is displayed as "\* \* \* \*". When you enter the fourth digit, the confirmation screen is displayed.

#### Remote control

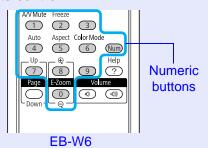

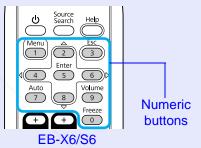

(4) Re-enter the password.

The message "Password accepted." is displayed. If you enter the password incorrectly, a message is displayed prompting you to re-enter the password.



## Entering the Password

When the password entry screen is displayed, enter the password using the numeric buttons on the remote control.

#### Procedure

Enter the password by using the numeric buttons. (With the EB-W6, enter the digit while holding down the [Num] button.)

When you enter the correct password, projection begins.

## **Attention**

- If an incorrect password is entered three times in succession, the message "The projector's operation will be locked." is displayed for about five minutes, and then the projector switches to standby condition. If this happens, disconnect the power plug from the electrical outlet and then reinsert it and turn the projector's power back on. The projector displays the password entry screen again so that you can enter the correct password.
- If you have forgotten the password, make a note of the "Request Code: xxxxx" number that appears on the screen and contact the nearest address provided in the Support and Service Guide.
- Epson Projector Contact List
- If you continue to repeat the above operation and input the wrong password thirty times in succession, the following message is displayed and the projector does not accept any more password entries. "The projector's operation will be locked. Contact Epson as described in your documeration." Epson Projector Contact List



# **Restricting Operation (Control Panel Lock)**

Do one of the following to lock the operation buttons on the control panel.

- Full lock
   All of the buttons on the control panel are locked. You cannot perform any operations from the control panel, including turning the power on or off.
- Partial lock
  All of the buttons on the control panel, except for the [ $\circlearrowleft$ ] button, are locked.

This is useful at events or shows when you want to deactivate all buttons and only project, or at schools when you want to limit button operation. The projector can still be operated using the remote control.

## **Procedure**



Press the [Menu] button and select "Settings" - "Control Panel Lock" in the configuration menu.


**EPSON** 

EB-W6 **p.37** 


EB-X6 **p.38** 

EB-S6 p.39


## Using the remote control

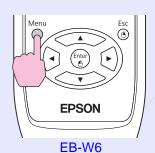

## Using the control panel

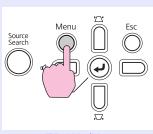



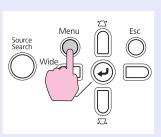

EB-S6





EB-S6

Check the buttons you can use and the operations they perform in the guide under the menu.

2 Select either "Full Lock" or "Partial Lock".







# Select "Yes" when the confirmation message is displayed.

The control panel buttons are locked according to the setting you chose.



You can release the control panel lock by one of the following two methods.

- From the remote control, select "Off" from "Settings" "Control Panel Lock" in the configuration menu.
- When you press and hold down the [Enter] button on the control panel for about seven seconds, a message is displayed and the lock is released.


## **Anti-Theft Lock**

As the projector is often setup on ceiling mounts and left in rooms unattended, it is possible that someone may try and take the projector, so the projector includes the following security devices.

- Security slot
  The security slot is compatible with the Microsaver Security System
  manufactured by Kensington. You can find details about the Microsaver
  Security System on the Kensington homepage
  http://www.kensington.com/
- Security cable installation point
   A commercially available theft-prevention wire lock can be passed through the installation point to secure the projector to a desk or pillar.

## Installing the wire lock

Pass an anti-theft wire lock through the installation point. See the documentation supplied with the wire lock for locking instructions.

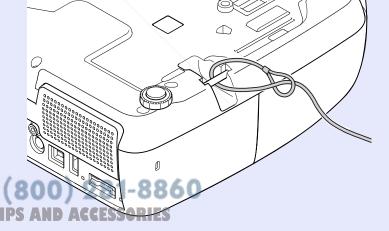



# **Configuration Menu**


This chapter explains how to use the configuration menu and its functions.

Using the Configuration Menu (For EB-W6)	. 37
Using the Configuration Menu (For EB-X6)	. 38
Using the Configuration Menu (For EB-S6)	. 39
List of Functions	. 40
• Image Menu	40
Signal Menu	41
Settings Menu	43
Extended Menu	44
Info Menu (Display only)	46
Reset Menu	




#### 


## **Using the Configuration Menu (For EB-W6)**

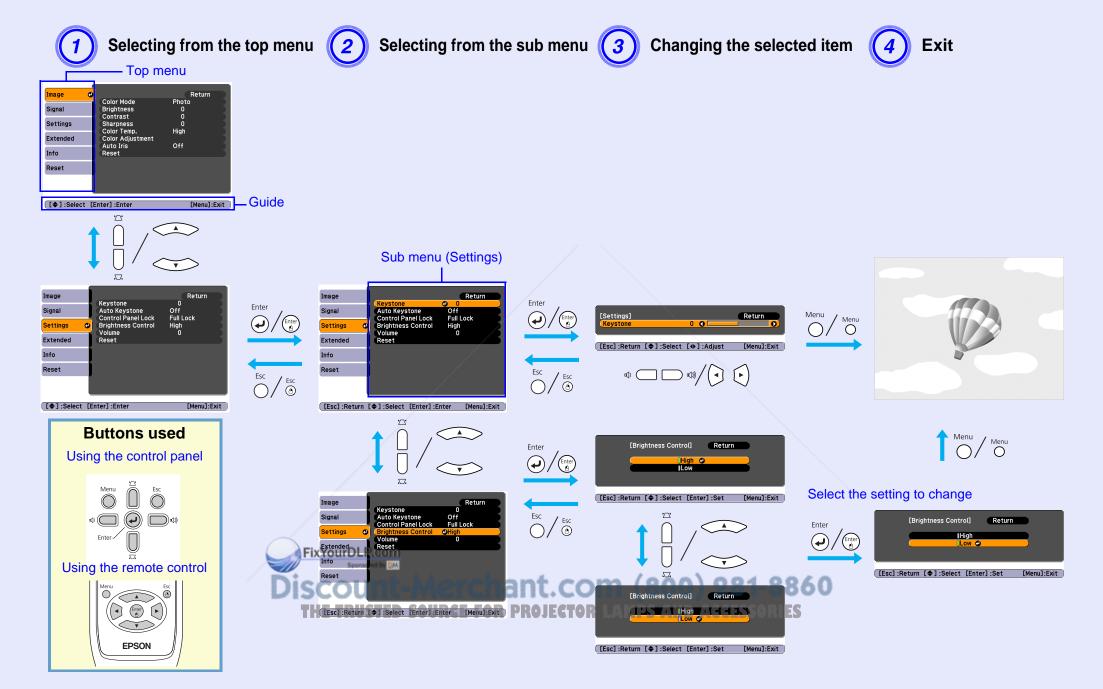

## **Using the Configuration Menu (For EB-X6)**

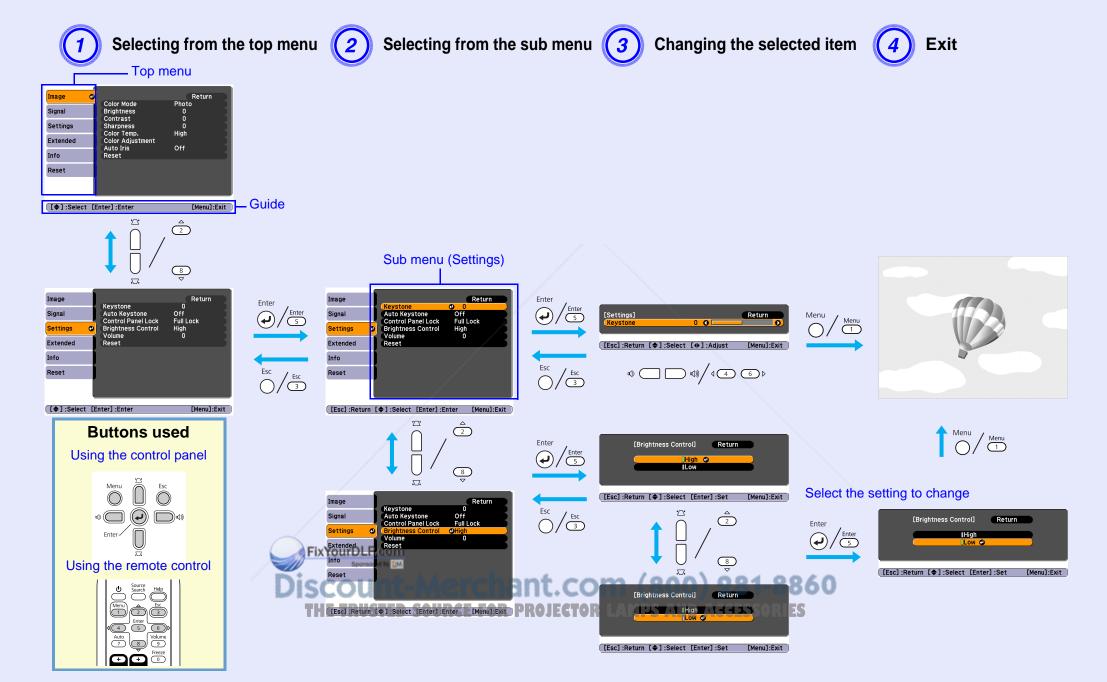

## **Using the Configuration Menu (For EB-S6)**

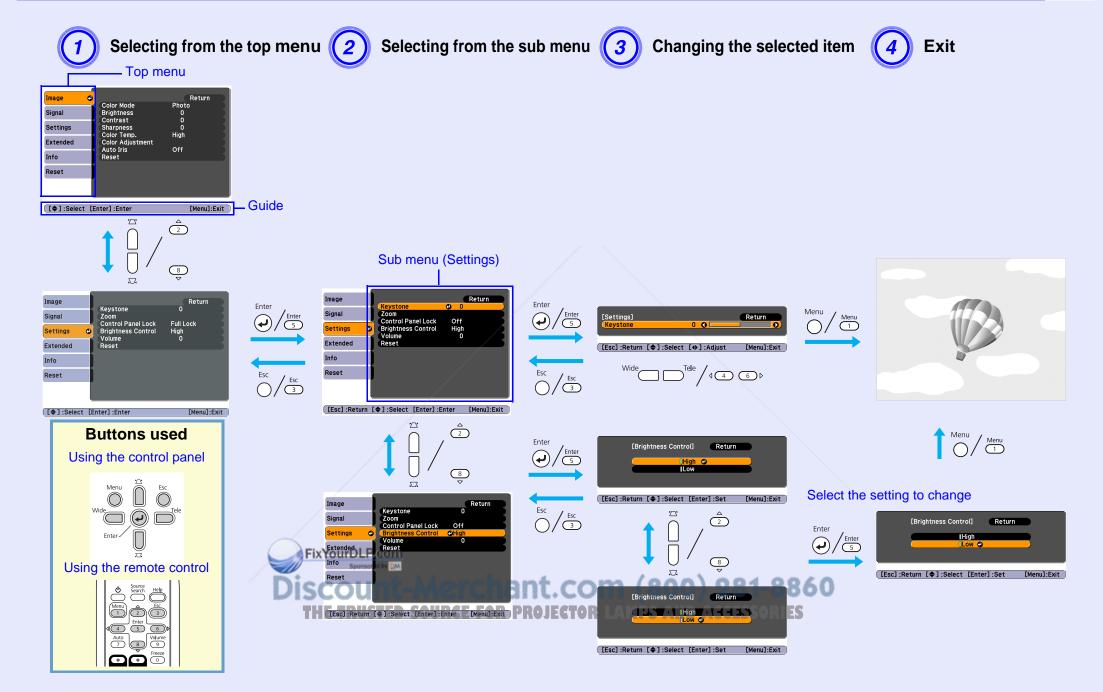


### **List of Functions**


#### **Image Menu**

Items that can be set vary depending on the image signal currently being projected as shown in the following screen shots. Setting details are saved for each image signal.

#### **Computer image**

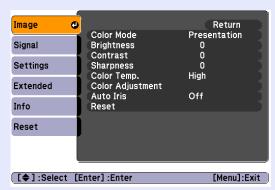

#### Component video // Composite video // S-video //

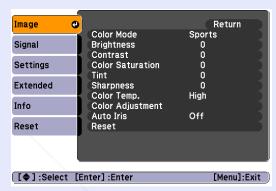


Sub Menu	Function			
Color Mode	You can select the quality of the image to suit your surroundings. p.19			
Brightness	You can adjust the image brightness.			
<u>Contrast</u> →	You can adjust the difference between light and shade in the images.			
Color Saturation	You can adjust the color saturation for the images.			
Tint	(Adjustment is only possible when NTSC signals are being input if you use composite video/S-video.)			
	You can adjust the image tint.			
Sharpness	You can adjust the image sharpness.			
Color Temp.	You can adjust the overall tint of the image. When "High" is selected the image becomes tinged with blue, and when "Low" is selected the image			
	becomes tinged with red.			
	(This item cannot be selected if "sRGB" is selected as the "Color Mode" setting in the "Image" menu.)			
Color Adjustment	Red, Green, Blue: You can adjust the saturation of each color individually.			
	(This iternot be selected if "sRGB" is selected as the "Color Mode" setting in the "Image" menu.)			
Auto Iris	(This item was be selected only when "Game" or "Theater" is selected as the "Color Mode" setting in the "Image" menu.)			
	Set to On/Off to adjust luminance according to the image.   p.21			
Reset	You can reset all adjustment values in the "Image" menu to their default settings. To return all menu items to their default settings, see p.47			




#### **Signal Menu**

Items that can be set vary depending on the image signal currently being projected as shown in the following screen shots. Setting details are saved for each image signal.


#### **Computer image**

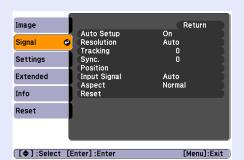


#### **HDMI** image (EB-W6 only)

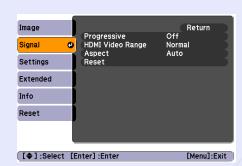

#### Component video<sup>▶</sup>

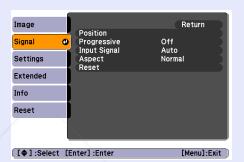

#### Composite video<sup>→</sup>/S-video

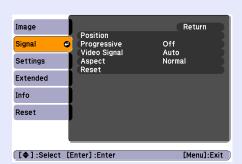

Sub Menu	Function			
Auto Setup	You can select whether the image is automatically adjusted to the optimum state (On) or not (Off) when the input signal changes. • p.58			
Resolution	When set to "Auto", the resolution of the input signal is automatically identified. When set to "Auto", if parts of the projected image are missing, set "Wide" for a wide screen or "Normal" in case of a 4:3 or 5:4 screen depending on the size of the computer panel.			
<u>Tracking</u>	You can adjust computer images when vertical stripes appear in the images.   p.58			
Sync.	You can adjust computer images when flickering, fuzziness, or interference appear in the images. p.58			
Position	You can adjust the display position up, down, left, and right so that all of the image is projected if a part of the image is missing.			
<u>Progressive</u> →	(Component video and HDMI can be set only during 480i/576i signal input)  Off: IP conversion is carried out for each field in the screen. This is ideal for viewing images with a large amount of movement.  On: interlace (i) signals are converted into progressive (p) signals. This is ideal for viewing still images.			
HDMI Video Range (EB-W6 only)	(This cannot be set when a digital RGB signal is input) When the projector's HDMI input port is connected to a DVD player and so on, the projector's video range can be set according to the DVD player's viagosetting.com			
Input Signal	You can select the input signal from the Computer input port.  If set to "Auto" the input signal is set automatically according to the connected equipment.  If colors do not appear correctly when set to "Auto", select the appropriate signal according to the connected equipment.			
Video Signal	If set to "Auto", video signals are recognized automatically. If interference appears in the image or a problem occurs such as no image is being projected when set to "Auto", select the appropriate signal according to the connected equipment.			
Aspect	You can set the <u>aspect ratio</u> for projected images. p.24			




Sub Menu	Function	
Reset	You can reset all adjustment values in the "Signal" menu to their default settings, except for "Input Signal".	
	To return all menu items to their default settings, see p.47	





### **Settings Menu**

#### **EB-W6/X6**

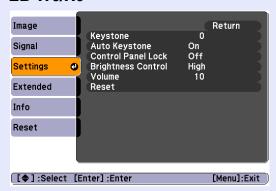

#### EB-S6



Sub Menu	Function			
Keystone	ou can correct vertical keystone distortion in images.  Quick Start Guide			
Auto Keystone (EB-W6/X6 only)	rforms automatic keystone correction. his can only be specified when "Front" is selected from "Extended" - "Projection".)			
Zoom (EB-S6 only)	Tele/Wide.  Yele" makes the projected image size smaller, "Wide" makes it larger.)			
Control Panel Lock	You can use this to restrict operation of the projector's control panel. p.34			
Brightness Control	You can set the lamp brightness to one of two settings.  Select "Low" if the images being projected are too bright such as when projecting images in a dark room or onto a small screen. When "Low" is selected, the amount of electricity consumed and the lamp's operating life are changed as follows, and fan rotation noise during projection is reduced. Electrical consumption: about a 40 W decrease, lamp life: about 1.3 times longer			
Volume	You can adjust the volume.			
Reset	You can reset all adjustment values in the "Settings" menu to their default settings.  To return all menu items to their default settings, see p.47			



#### **Extended Menu**



Sub Menu	Function
Display	You can make settings related to the projector's display.
	Messages: You can set whether to display (On) or not display (Off) the source name when you change the input source, the color mode name
	when you change the Color Mode, a message when no image signal is input, and so on.
	Display Background*1: You can set the screen status for when no image signal is available to "Black", "Blue", or "Logo".
	Startup Screen*1: You can set whether the startup screen (the image projected when starting the projector) is displayed (On) or not (Off).
	A/V Mute*1: You can set the screen displayed during A/V Mute as "Black", "Blue", or "Logo".
User's logo	You can change the user's logo that is displayed as a background and displayed during A/V Mute. p.72
Projection	You can choose one of the following settings according to the way the projector is setup. p.64
	"Front" "Front/Ceiling" "Rear" "Rear/Ceiling"
	You can change the setting as follows by pressing down the [A/V Mute] button on the remote control for about five seconds.
	"Front" ↔ "Front/Ceiling"
	"Rear" ↔ "Rear/Ceiling"



Sub Menu	Function
Operation	Direct Power On: You can set whether Direct Power On is enabled (On) or disabled (Off).
	When it is set to "On" and the projector power cable is connected to an electrical outlet, be aware that sudden surges of electricity may cause the projector to turn on automatically.
	Sleep Mode: When set to "On", this turns off the power automatically when no image signal is input and no operations are performed.
	Sleep Mode Timer: When Sleep Mode is set to "On", you can set how long the projector should wait before turning off the power from 1 to 30 minutes.
	Lens Cover Timer: When set to "On", this turns off the power automatically 30 minutes after the lens cover is closed.
	High Altitude Mode: Set this to "On" when using the projector above an altitude of 1500 m.
USB Type B	Connect the projector to a computer with a USB cable, and set to "USB Display" to project the image on the computer. • p.82
	Set to "Wireless Mouse" to operate the mouse pointer by remote control. p.87
	Set to "Page Up/Down" to page up/down by remote control. p.86
Link 21L	You can set whether to use the utility software EMP Link 21L (On) or not (Off). Set this to "On" and use it after installing the USB
	communication driver.
Language	You can set the language for message displays.
Reset	You can reset "Display *1" and "Operation*2" in the "Extended" menu to their default settings.
	To return all menu items to their default settings, see p.47

<sup>\*1</sup> When "User's Logo Protect" is set to "On" in "Password Protect", settings concerning user's logo cannot be changed. You can make changes after setting "User's Logo Protect" to "Off". • p.31




<sup>\*2</sup> Except for "High Altitude Mode".




#### Info Menu (Display only)

Lets you check the status of the image signals being projected and the status of the projector. Items displayed vary depending on the image signal currently being projected as shown in the following screen shots.


## Signal from the computer image/<u>component</u> <u>video</u>\*\*/HDMI image (EB-W6 only)

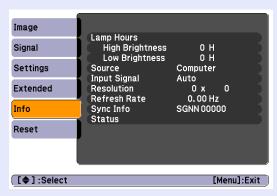

#### Composite video >>/S-video >>

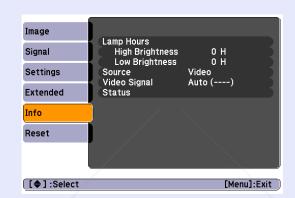

## USB Display/Slideshow (EB-W6 only)

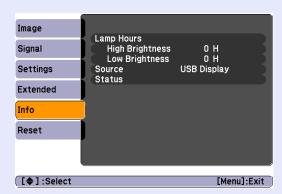

Sub Menu	Function			
Lamp Hours	You can display the cumulative lamp operating time*.			
	When it reaches the lamp warning time, the characters are displayed in yellow.			
Source	You can display the input port name for the connected equipment currently being projected.			
Input Signal	Displays the "Input Signal" setting from the "Signal" menu according to "Source".			
Resolution	You can display the input resolution.			
Video Signal	You can display the content of "Video Signal" set in the "Signal" menu.			
Refresh Rate	You can display the refresh rate.			
Sync Info	You can display the image signal information.			
	This information may be needed if service is required.			
Status	This is information about problems that have occurred on the projector.			
	This info on may be needed if service is required.			

<sup>\*</sup> The cumulative use time is disprayed as "0H" for the first 10 hours. After 10 hours or more, one hour is added for each subsequent hour.

#### THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



#### **Reset Menu**



Sub Menu	Function		
Reset All	You can reset all items in all menus to their default settings.		
	The following items are not reset to their defaults: "Input Signal", "User's Logo", "Lamp Hours", and "Language".		
Reset Lamp Hours	You can clear the cumulative Lamp Hours use time, and return it to "0H". Reset it when you replace the lamp.		



# **Troubleshooting**

This chapter describes how to identify problems and what to do if a problem is found.

Using the Help	49
Problem Solving	51
Reading the Indicators	51
U Power indicator lights red	52
☼ · I Indicator is lit or flashing orange	
When the Indicators Provide No Help	55
Problems relating to images	56
Problems when projection starts	
Other problems	



### **Using the Help**

If a problem occurs with the projector, Help uses on-screen displays to assist you in solving the problem. By answering the questions, you can make the correct settings.


#### Procedure




#### Press the [Help] button.

The help screen is displayed.


#### Using the remote control

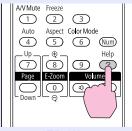


EB-W6

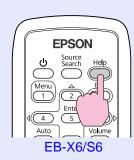

#### Using the control panel

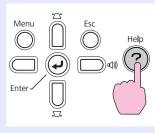

**EB-W6/X6** 

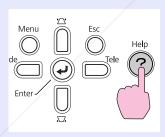


EB-S6


FixYourDLP.com




#### Select a menu item.

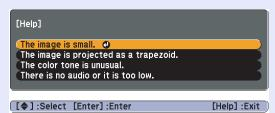


#### Using the remote control

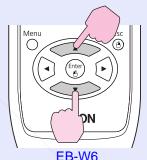

Using the control panel

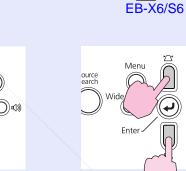

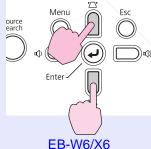

EB-S6

:-Merchant.com (800) 281-8860






#### Confirm the selection.

#### Using the remote control



Using the control panel



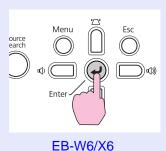

ource earch Wide Tele
Enter

Questions and solutions are displayed as shown on the screen below.

Press the [Help] button to exit Help.



- If Help does not provide a solution to the problem, refer toro JECTOR LAMPS AND ACCESSORIES
  "Problem Solving". 

  p.51
- Displayed help contents differ with the model of projector.

### **Problem Solving**




If you are having a problem with the projector, first check the projector's indicators and refer to "Reading the Indicators" below. If the indicators do not show clearly what the problem might be, refer to "When the Indicators Provide No Help". 

p.55

#### **Reading the Indicators**

The projector is provided with the following three indicators that indicate the operating status of the projector.

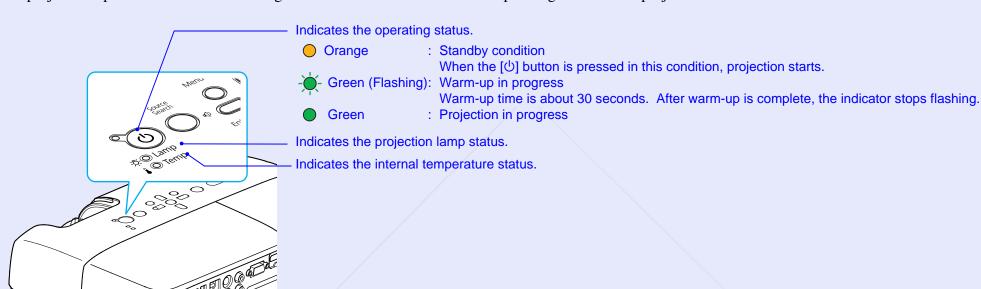

Refer to the following table to see what the indicators mean and how to remedy problems that they indicate.

If all indicators are off, check the power pable is connected correctly and that the power is being supplied normally. Sometimes, when the power cable is unplugged, the  $\circlearrowleft$  indicator remains lit for a short period which is not a fault.

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



#### ■ <sup>()</sup> Power indicator lights red

Problem

●: Lit - : Flashing: ○: Off

Status	Cause	Remedy or Status
() Red	Internal Error	Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the <i>Support and Service Guide</i> . Epson Projector Contact List
Red		
少 ● Red	Fan Error Sensor Error	Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Support and Service Guide. Epson Projector Contact List
₽ - Red		
Charles Red	Auto Iris error	Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the <i>Support and Service Guide</i> . Epson Projector Contact List
Red		
∪ ■ Red	High Temp Error (overheating)	The lamp turns off automatically and projection stops. Wait for about five minutes. After about five minutes the projector switches to standby condition, so check the following two points.
<b>☆</b> ○		<ul> <li>Check that the air filter and air exhaust vent are clear, and that the projector is not positioned against a wall.</li> <li>If the air filter is clogged, clean or replace it. p.65, 71</li> </ul>
<b>↓</b> ● Red		If the error continues after checking the points above, stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Support and Service Guide. Epson Projector Contact List
		When using at an altitude of 1500 m or more, set "High Altitude Mode" to "On". • p.45



●: Lit - : Flashing: ○: Off

Status	Cause	Remedy or Status
Red B-Red I	Lamp Error Lamp Failure Lamp Cover Open	<ul> <li>Check the following two points.</li> <li>Take out the lamp and check if it is cracked. p.68</li> <li>Clean the air filter. p.65</li> <li>If it is not cracked - Re-fit the lamp and turn on the power.</li> <li>If the error continues - Replace the lamp with a new lamp and turn on the power.</li> <li>If the error continues - Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Support and Service Guide.</li> <li>Epson Projector Contact List</li> </ul>
		If it is cracked - Replace it with a new lamp, or contact your local dealer for further advice. If replacing the lamp yourself, be careful to avoid pieces of broken glass (you cannot continue projecting until the lamp is replaced).  Epson Projector Contact List
		Check that the lamp cover and the lamp are securely installed.   p.68  If the lamp cover or the lamp is not securely installed, the lamp does not switch on.  When using at an altitude of 1500 m or more, set "High Altitude Mode" to "On".   p.45



#### ■ 🌣 🌡 Indicator is lit or flashing orange

Warning

●: Lit - : Flashing ○: Off ○: Varies according to the projector status

Status	Cause	Remedy or Status
_		<ul> <li>(This is not a problem. However, if the temperature rises too high again, projection stops automatically.)</li> <li>Check that the air filter and air exhaust vent are clear, and that the projector is not positioned against a wall.</li> <li>If the air filter is clogged, clean or replace it. p.65, 71</li> </ul>
Ů	Replace Lamp	Replace it with a new lamp. p.68 If you continue to use the lamp after the replacement period has passed, the possibility that the lamp may explode increases. Replace it with a new lamp as soon as possible.



- If the projector is not operating properly, even though the indicators are all showing normal, refer to "When the Indicators Provide No Help". © p.55
- If an indicator is displaying a status not described in the tables, stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Support and Service Guide. Epson Projector Contact List





#### When the Indicators Provide No Help

If any of the following problems occur and the indicators do not offer a solution, refer to the pages given for each problem.

#### Problems relating to images

- No images appear p.56 Projection does not start, the projection area is completely black, the projection area is completely blue, and so on.
- Moving images are not displayed p.56 Moving images being projected from a computer appear black and nothing is projected.
- Projection stops automatically p.56
- The message "Not supported." is displayed 
  p.57
- The message "No Signal." is displayed p.57
- Images are fuzzy or out of focus p.57

image are not correct, and so on.


- Interference or distortion appears in images p.58 Problems such as interference, distortion, or black & white checked patterns appear.
- The image is truncated (large) or small, or the aspect is not suitable p.58 Only part of the image is displayed, or the height and width ratios of the
- Image colors are not right p.59 The whole image appears purplish or greenish, images are black & white. colors appear dull, and so on. (Computer monitors and LCD screens have different color reproduction
  - performance, so the colors projected by the projector and the colors appearing on the monitor may necessarily match, but this is not a sign of a problem.)
- Images appear dark 🖝 💽 Scount-Merchant.com (800) 281-8860
- Nothing appears on the external monitor (EB-X6/S6 only) **p.59**

#### Problems when projection starts

■ Power does not turn on ● p.60

#### Other problems

- No sound can be heard or the sound is faint p.61
- The remote control does not work **p.61**







#### ■ Problems relating to images

#### ■ No images appear

Check	Remedy
Did you press the [θ] button?	Press the [O] button to turn the power on.
Are the indicators switched off?	The power cable is not connected correctly or power is not being supplied normally.  Connect the projector's power cable correctly.   Quick Start Guide  Check that your electrical outlet or power source is functioning correctly.
Is A/V Mute active?	Press the [A/V Mute] button on the remote control to cancel A/V Mute. p.22
Is the A/V mute slide closed?	Open the A/V mute slide.
Are the configuration menu settings correct?	Reset all of the settings. "Reset" - "Reset All" p.47
Is the projected image completely black?	Some input images, such as screen savers, may be completely black.
Only when projecting computer images	
Is the image signal format setting correct?	Change the setting according to the signal for the connected equipment. Signal - "Video Signal" p.41
Only when projecting images from a video source	

#### ■ Moving images are not displayed

Check	Remedy
Is the computer's image signal being output to the LCD and	Change the image signal to external output only. Computer's documentation
the monitor?	
Only when projecting images from a laptop computer or a computer with a built-in LCD screen	

#### **■** Projection stops automatically

Check	/	Remedy
Is "Sleep Mode" set to "On"?	MINIOUIDEI JOOIII	Press the [ $\cup{U}$ ] button to turn the power on. If you do not want to use "Sleep Mode", change the setting to "Off". Textended" - "Operation" - "Sleep Mode" p.45

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



#### ■ The message "Not supported." is displayed

Check	Remedy
Is the image signal format setting correct?	Change the setting according to the signal for the connected equipment. "Signal" - "Video Signal" p.41
Only when projecting images from a video source	
	Refer to the computer's documentation for how to change the image signal resolution and the refresh rate
correspond to the mode?	output from the computer. Tist of Supported Monitor Displays" p.102
Only when projecting computer images	

#### ■ The message "No Signal." is displayed

Check	Remedy
Are the cables connected correctly?	Check that all the cables required for projection are securely connected.  Quick Start Guide
Is the correct input port selected?	Change the image by pressing the [Source Search] button on the remote control or the control panel.  p.17
Is the power for the computer or video source turned on?	Turn the power on for the equipment.
Are the image signals being output to the projector?  Only when projecting images from a laptop computer or a computer with a built-in LCD screen	If the image signals are only being output to the computer's LCD monitor or to the accessory monitor, you need to change the output to an external destination as well as the computer's own monitor. For some computer models, when the image signals are output externally, they no longer appear on the LCD monitor or accessory monitor. Computer's documentation, under a title such as "External output" or "Connecting an external monitor".  If the connection is made while the power of the projector or computer is already turned on, the function [Fn] key that changes the computer's image signal to external output may not work. Turn the power for the computer and the projector off and then back on again.

#### ■ Images are fuzzy or out of focus

Check	Remedy
Is the focus adjusted correctly?	Turn the focus ring to adjust the focus. • Quick Start Guide
Is the projector at the correct distar FixYourDLP.com	Is the projection distance outside the recommended range?
Spansored by DM	Install within the recommended range.   p.75
	Lower the projection angle to reduce the amount of keystone correction.
Has condensation formed on the lens?	If the projector is suddenly taken from a cold environment to a warm environment, or if sudden ambient temperature changes occur, condensation may form on the surface of the lens, and this may cause the images
	to appear fuzzy. Set the projector up in the room about one hour before it is used. If condensation forms on
	the lens, turn the projector off and wait for the condensation to disappear.



#### ■ Interference or distortion appear in images

Check	Remedy
Is the image signal format setting correct?	Change the setting according to the signal for the connected equipment. Signal - "Video Signal" p.41
Only when projecting images from a video source	
Are the cables connected correctly?	Check that all the cables required for projection are securely connected.
Is an extension cable being used?	If an extension cable is used, electrical interference may affect the signals. Use the cables supplied with the projector to check if the cables you are using may be causing the problem.
Is the correct resolution selected?	Set the computer so that the signals being output are compatible with the projector.
Only when projecting computer images	■ "List of Supported Monitor Displays" p.102
Are the "Sync." and "Tracking" settings adjusted	Press the [Auto] button on the remote control or the [Enter] button on the control panel to perform automatic
correctly?	adjustment. If the images are not adjusted correctly after using automatic adjustment, you can make the
Only when projecting computer images	adjustments from "Sync." and "Tracking" in the configuration menu. "Signal" - "Tracking", "Sync." p.41

#### ■ The image is truncated (large) or small, or the aspect is not suitable

Check	Remedy
Is a wide panel computer image being projected?	Change the setting according to the signal for the connected equipment. Signal - "Resolution" p.41
Only when projecting computer images	
Is the image still being enlarged by E-Zoom?	Press the [Esc] button on the remote control to cancel E-Zoom.   p.29
Is "Position" adjusted correctly?	Press the [Auto] button on the remote control or the [Enter] button on the control panel to perform automatic adjustment of the computer image being projected. If the images are not adjusted correctly after using automatic adjustment, you can make the adjustments from "Position" in the configuration menu.  Apart from computer image signals, you can adjust other signals while projecting by adjusting "Position" in the configuration menu. "Signal" - "Position" p.41
Is the computer set for dual display?	If dual display is activated in the "Display Properties" of the computer's control panel, only about half of the
Only when projecting computer images	image on the computer screen is projected. To display the entire image on the computer screen, turn off the dual display setting. Computer video driver documentation
Is the correct resolution selected? FixYourDLP.com	Set the computer so that the signals being output are compatible with the projector.
Only when projecting computer images	"List of Supported Monitor Displays" p.102  Computer documentation



#### ■ Image colors are not right

Check	Remedy
Do the input signal settings match the signals from the	Change the following settings according to the signal for the connected equipment.
connected device?	When projecting images from equipment connected to Computer Input port, see 🖝 "Signal" - "Input
	Signal" p.41
	When projecting images from equipment connected to Video or S-Video, see "Signal" - "Video Signal"
	p.41
Is the image brightness adjusted correctly?	Adjust the "Brightness" setting in the configuration menu. "Image" - "Brightness" p.40
Are the cables connected correctly?	Check that all the cables required for projection are securely connected.
Is the "Contrast <sup>▶</sup> " setting adjusted correctly?	Adjust the "Contrast" setting in the configuration menu.  "Image" - "Contrast" p.40
Is the color adjusted correctly?	Adjust the "Color Adjustment" setting in the configuration menu. Timage" - "Color Adjustment" p.40
Are the color saturation and tint adjusted correctly?	Adjust the "Color Saturation" and "Tint" settings in the configuration menu. Tint" settings in the configuration menu.
Only when projecting images from a video source	Saturation", "Tint" p.40

#### ■ Images appear dark

Check	Remedy
Are the image brightness and luminance adjusted correctly?	
	"Image" - "Brightness" p.40 "Settings" - "Brightness Control" p.43
Is the "Contrast" setting adjusted correctly?	Adjust the "Contrast" setting in the configuration menu.
	"Image" - "Contrast" p.40
Is the lamp due for replacement?	When the lamp is nearly ready for replacement, the images become darker and the color quality becomes
	poorer. When this happens, replace the lamp with a new lamp. • p.67

#### ■ Nothing appears on the external monitor (EB-X6/S6 only)

Check	Remedy
Are images from a port other than the Computer Input port	The only images that can be displayed on an external monitor are computer images from the Computer Input
being projected?	port. • p.78

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



#### ■ Problems when projection starts

#### ■ Power does not turn on

Check	Remedy
Did you press the [θ] button?	Press the [ $\circlearrowleft$ ] button to turn the power on.
Are the indicators switched off?	The power cable is not connected correctly or power is not being supplied normally.
	Connect the projector's power cable correctly.
	Check that your electrical outlet or power source is functioning correctly.
Do the indicators turn on and off when the power cable is touched?	There is probably a poor contact in the power cable, or the power cable may be defective. Reinsert the power cable. If this does not solve the problem, stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Support and Service Guide. Epson Projector Contact List
Is the control panel lock set to "Full Lock"?	When you press and hold down the [Enter] button on the control panel for about seven seconds, a message is displayed and the lock is released. • p.34
Was the power cable plugged back in immediately after Direct Power Off, or is the breaker turned off?	When the operation to the left is performed when "Direct Power On" is set to "On", the power may not turn back on. Press the [ $\circlearrowleft$ ] button to turn the power back on.



#### Other problems

#### ■ There is no audio or the audio is too low

Check	Remedy
Is the audio source connected correctly?	Check that the cable is connected to the Audio port.
Is the volume adjusted to the minimum setting?	Adjust the volume so that sound can be heard.
Is A/V Mute active?	Press the [A/V Mute] button on the remote control to cancel A/V Mute.   p.22
Is the audio cable's specification "No resistance"?	When using a commercially available audio cable, make sure it is labelled "No resistance".

#### ■ The remote control does not work

Check	Remedy
Is the remote control light-emitting area pointing towards the remote receiver on the projector when it is operated?	Point the remote control towards the remote receiver.  The operating angle for the remote control is about 30° horizontally, and about 15° vertically.
Is the remote control too far from the projector?	The operating range for the remote control is about 6 m.
Is direct sunlight or strong light from fluorescent lamps shining onto the remote receiver?	Set the projector up in a location where strong light does not shine onto the remote receiver.
Are the batteries dead or have the batteries been inserted correctly?	Make sure the batteries are inserted correctly or replace the batteries with new ones if necessary. p.66
Was a remote control button pressed for more than 30 seconds?	If any of the buttons on the remote control are pressed down for more than 30 seconds, the remote control stops sending signals (remote control's sleep mode). When the button is released, normal remote control operation resumes. This can prevent the batteries from running down accidentally because Sleep Mode operates when the remote control is stored in a bag or if an object is placed on top of it.



# **Appendices**



This chapter provides information on maintenance procedures to ensure the best level of performance from the projector for a long time to come.

Installation Methods	. 64	Connecting and Removing a USB Device	
Cleaning	. 65	(EB-W6 only)	79
Cleaning the Projector's Surface		Connecting a USB Device	
• Cleaning the Lens		Reading the Indicators	79
• Cleaning the Air Filter and Air Intake Vent		Removing a USB Device	79
Replacing Consumables	. 66	Inserting and Ejecting a SD Card	00
Replacing the Remote Control Batteries		(EB-W6 only)	
• Replacing the Lamp		Inserting a SD Card	80
Lamp replacement period		Reading the SD Card Access Lamp	80
How to replace the lamp		Ejecting a SD Card	81
Resetting the lamp operating time		Connecting with USP Cable for Projection	
Replacing the Air Filter	71	Connecting with USB Cable for Projection	02
Air filter replacement period		(USB Display)	
How to replace the air filter	71	How to Connect (For EB-W6)	
Saving a User's Logo	.72	• How to Connect (For EB-X6/S6)	
		When connecting for the first time	
Screen Size and Distance		From the second time	85
• EB-W6		Connecting a USB Cable	86
• EB-X6	76	Page Up/Down by Remote Control	86
EB-S6  FixYourDLP.com  Sportsored by DM  Sportsored by DM  Sportsored by DM  Sportsored by DM  Sportsored by DM	77	<ul> <li>Operating the Mouse Pointer by Remote Control</li> </ul>	
Connecting to External Equipment			87
		Wireless mouse operation (EB-W6 only)	
<ul> <li>Connecting to an External Monitor (EB-X6/S6 only).</li> </ul>	/8	Wireless Mouse operation (EB-X6/S6 only)	



Using Slideshow (EB-W6 only)90	List of Supported Monitor Displays	102
• Image Files that can be Projected in a Slideshow90	• EB-W6	102
• Basic Slideshow Operations	Computer images (analog RGB) Component Video Composite video/S-video Input signal from HDMI input port  • EB-X6  Computer images (analog RGB) Component Video Composite video/S-video  • EB-S6  Computer images (analog RGB) Component Video	
Consumables	Composite video/S-video  Specifications	
ESC/VP21 Commands       100         • Command List       100         • Cable Layouts       100         USB connection       100         • USB Connection Setup       101	<ul> <li>Specifications</li> <li>Operating Requirements of Supplied Software Appearance</li> </ul> Index	109 113



### **Installation Methods**



The projector supports the following four different projection methods. Install according to the conditions of the installation location.




#### / Warning


- A special method of installation is required when suspending the projector from a ceiling (ceiling mount). If it is not installed correctly, it could fall causing an accident and injury.
- If you use adhesives on the ceiling mount to prevent the screws from loosening, or if you use things such as lubricants or oils on the projector, the projector case may crack causing it to fall from its ceiling mount. This could cause serious injury to anyone under the ceiling mount and could damage the projector. When installing or adjusting the ceiling mount, do not use adhesives to prevent the screws from loosening and do not use oils or lubricants and so on.

#### **Attention**


Do not use the projector on its side. This may cause malfunctions to occur.

- Project images from front of the screen. (Front projection)
- Project images from behind a translucent screen. (Rear projection)






• Suspend the projector from the ceiling and project images from front of the screen. (Front/Ceiling projection)

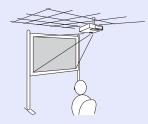

• Suspend the projector from the ceiling and project images from behind a translucent screen. (Rear/Ceiling projection)





- An optional ceiling mount is required when suspending the projector from a ceiling. p.97
- You can change the setting as follows by pressing down the [A/V Mute] button on the remote control for about five seconds.

"Front" ↔"Front/Ceiling" Set "Rear" or "Rear/Ceiling" in the configuration menu. **p.44** 

unt-Merchant.com (800) 281-8860

### **Cleaning**



You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.

#### **Cleaning the Projector's Surface**

Clean the projector's surface by wiping it gently with a soft cloth. If the projector is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the projector's surface.

#### **Attention**

Do not use volatile substances such as wax, alcohol, or thinner to clean the projector's surface. The quality of the case may change or become discolored.

#### **Cleaning the Lens**

Use a commercially available cloth for cleaning glasses to gently wipe the lens.

#### **Attention**

Do not rub the lens with harsh materials or subject the lens to shocks, as it can easily become damaged.


### Cleaning the Air Filter ar Air Intake Vent

Clean the air filter and the air intake vent when the following message is displayed.

"The projector is overheating. Make sure nothing is blocking the air vent, and clean or replace the air filter" 
"How to replace the air filter" p.71

#### **Attention**

If dust collects on the air filter it can cause the internal temperature of the projector to rise, and this can lead to problems with operation and shorten the optical engine's service life. Clean the air filter immediately when the message is displayed.

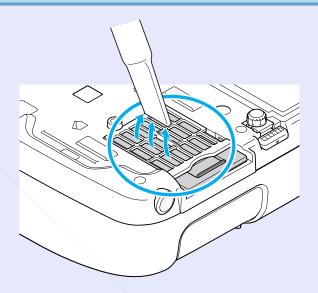



- If a message is frequently displayed, even after cleaning, it is time to replace the air filter. Replace it with a new air filter. 
   p.71
- It is recommended that you clean these parts at least once every three months. Clean them more often than this if using the projector in a particularly dusty environment.

### **Replacing Consumables**

This section explains how to replace the remote control batteries, the lamp, and the air filter.

#### **Replacing the Remote Control Batteries**

If delays in the responsiveness of the remote control occur or if it does not operate after it has been used for some time, it probably means that the batteries are becoming flat. When this happens, replace them with new batteries. Have two spare AA-size alkaline or manganese dry batteries ready to use. You can only use AA-size alkaline or manganese dry batteries.

#### **Attention**

Make sure you read the Safety Instructions/Support and Service Guide before handling the batteries. Safety Instructions

#### **Procedure**



#### Remove the battery cover.

While pushing the battery cover catch, lift the cover up.







#### Replace the old batteries with new batteries.



#### Caution

Check the positions of the (+) and (-) marks inside the battery holder to ensure the batteries are inserted the correct way.

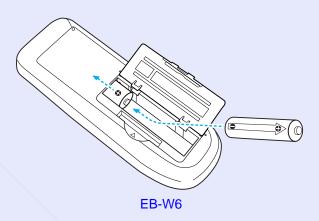


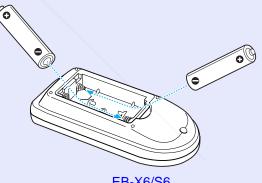



#### Replace the battery cover.

Press the battery cover until it clicks into place.

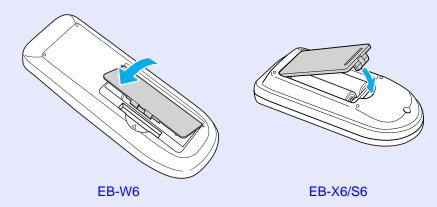

### **Replacing the Lamp**


#### Lamp replacement period

It is time to replace the lamp when:

• The message "Replace the lamp." is displayed.



• The lamp indicator flashes orange.

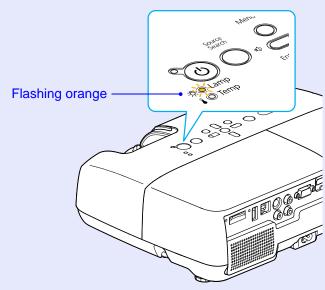

The illustration is of the EB-W6.

• The projected image gets darker or starts to deteriorate.

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

#### **Attention**

- The lamp replacement message is set to appear after the following time periods in order to maintain the initial brightness and quality of the projected images. "Brightness Control" p.43
- When used continually at high brightness: About 2900 hours
- When used continually at low brightness: About 3900 hours
- If you continue to use the lamp after the replacement period has passed, the possibility that the lamp may explode increases. When the lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.
- Depending on the characteristics of the lamp and the way it has been used, the lamp may become darker or stop working before the lamp warning message appears. You should always have a spare lamp ready in case it is needed.

#### How to replace the lamp



#### Warning

When replacing the lamp because it has stopped illuminating, there is a possibility that the lamp may be broken.

If replacing the lamp of a projector which has been installed on the ceiling, you should always assume that the lamp is broken, and you should stand to the side of the lamp cover, not underneath it. Remove the lamp cover gently. Small pieces of glass may fall out when the lamp cover is opened. If pieces of glass get into your eyes or mouth, seek medical advice immediately.




#### Caution


Wait until the lamp has cooled down sufficiently before removing the lamp cover. If the lamp is still hot, burns or other injuries may result. It takes about one hour after the power has been turned off for the lamp to be cool enough.

#### **Procedure**

- 1
- After you turn off the projector's power and the confirmation buzzer beeps twice, disconnect the power cable.
- 2
- Wait until the lamp has cooled down, then remove the lamp cover.


Loosen the lamp cover fixing screw with the screwdriver supplied with the new lamp or a + head screwdriver. Then slide the lamp cover straight forward and lift it to remove.

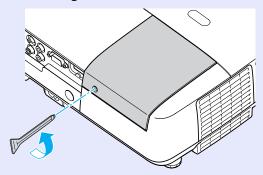

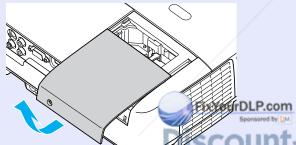




Loosen the two lamp fixing screws.

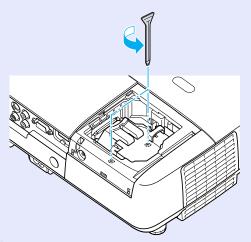

4

### Take out the old lamp.

If the lamp is cracked, replace it with a new lamp, or contact your local dealer for further advice. Epson Projector Contact List

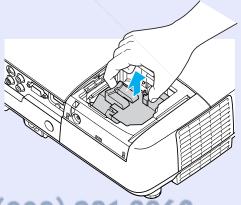



SCOUNT-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES



#### Install the new lamp.


Insert the new lamp along the guide rail in the correct direction so that it fits in place, push down firmly at the location marked "PUSH", and once it is fully inserted tighten the two screws.

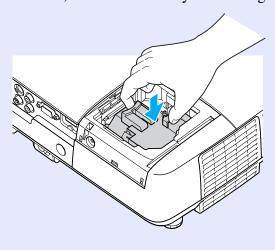

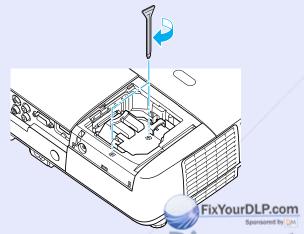



#### Replace the lamp cover.

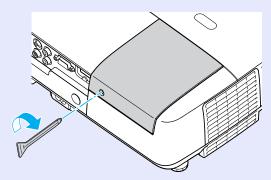

#### **Attention**

- Make sure you install the lamp securely. If the lamp cover is removed, the lamp turns off automatically as a safety precaution. If the lamp or the lamp cover is not installed correctly, the lamp does not turn on.
- This product includes a lamp component that contains mercury (Hg). Please consult your local regulations regarding disposal or recycling. Do not dispose of it with normal waste.

#### Resetting the lamp operating time

The projector records how long the lamp is turned on and a message and indicator notify you when it is time to replace the lamp. After replacing the lamp, make sure you reset the lamp hours in the configuration menu.

**p.47** 



Only reset the lamp operating time after the lamp has been replaced. Otherwise the lamp replacement period is not indicated correctly.

#### **Replacing the Air Filter**

#### Air filter replacement period

It is time to replace the air filter when:

- The air filter is ripped.
- The message is displayed even though the air filter has been cleaned.

#### How to replace the air filter

The air filter can be replaced even when the projector is suspended from a ceiling.

#### Procedure


- After you turn off the projector's power and the confirmation buzzer beeps twice, disconnect the power cable.
- Remove the air filter. Put your finger into the recess of the air filter and slide it forward to

remove it.



#### Install the new air filter.

Slide the air filter in from the outside and push until it clicks into place.

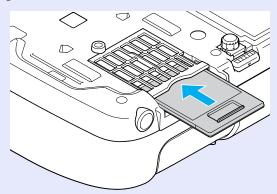



Dispose of used air filters properly in accordance with your local regulations.

Material quality of the frame section: Polycarbonate, ABS resin

Material quality of the filter section: Polyurethane form



## Saving a User's Logo

You can save the image that is currently being projected as a user's logo.




When registering a user logo, the current user logo is erased and the default setting is not resumed.

#### **Procedure**




Project the image you want to use as the user's logo, and then press the [Menu] button.

Using the remote control

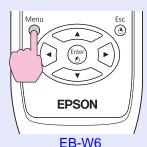

Using the control panel



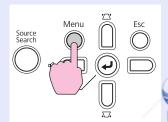

EB-W6/X6



From the configuration menu, select "Extended" - "User's Logo".

EB-W6 p.37 EB-X6 p.38

EB-S6 **p.39** 

Check the buttons you can use and the operations they perform in the guide under the menu.





- If "User's Logo Protect" from "Password Protect" is set to "On", a message is displayed and the user's logo cannot be changed. You can make changes after setting "User's Logo Protect" to "Off". p.31
- If "User's Logo" is selected when Keystone, E-Zoom, or Aspect are being performed, the function currently being performed is cancelled.

SCOUNT-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES




When "Choose this image as the User's Logo?" is displayed, select "Yes".




When you press the [Enter] button on the remote control or the control panel, the screen size may change as it changes to the resolution of the image signal.


4

Move the box to select the part of the image to use as the user's logo.

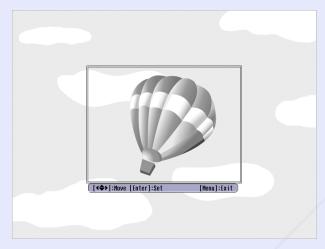


Using the remote control

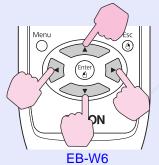


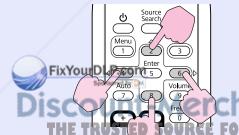

**EB-X6/S6** 

Using the control panel

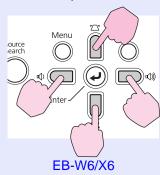


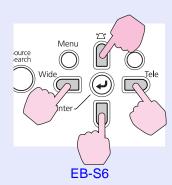



You can save at up to  $400 \times 300$  dots in size.

- When "Select this image?" is displayed, select "Yes".
- Select the zoom factor from the zoom setting screen.

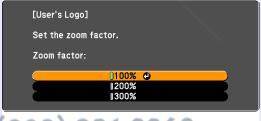

[Esc]:Return [�]:Select [Enter]:Set [Menu]:Exit

FOR PROJECTOR LAMPS AND ACCESSORIES





When the message "Save this image as the User's Logo?" is displayed, select "Yes".

The image is saved. After the image has been saved, the message "Completed" is displayed.



Saving the user's logo may take about 15 seconds. Do not use the projector or any connected equipment while it is saving. This may cause malfunctions to occur.

## **Screen Size and Distance**



See the following table to choose the best position for your projector. The values are only a guide.

#### EB-W6

Units: cm (in.)

Units: cm (in.)

			/· ·	
	Inits:	cm I	(ın	١
U	71 III.O.	OIII I	<b>\                                    </b>	,

			\ /
16:10 Screen Size		Projection Distance  (2)  Minimum (Wide) to Maximum (Tele)	₿
30"	$65 \times 40$ (26 × 16)	94 to 113 (37 to 45)	0 (0)
40"	86 × 54 (34 × 21)	126 to 152 (50 to 60)	0 (0)
50"	110 × 67 (43 × 26)	158 to 191 (62 to 75)	0 (0)
60"	$130 \times 81$ $(51 \times 32)$	191 to 230 (75 to 90)	0 (0)
80"	170 × 110 (67 × 43)	255 to 307 (101 to 121)	0 (0)
100"	220 × 130 (87 × 51)	320 to 385 (126 to 152)	0 (0)
120"	$260 \times 160$ (102 × 63)	385 to 463 (152 to 182)	0 (0)
150"	$320 \times 200$ (126 × 79)	482 to 579 (190 to 228)	0 (0)
200"	430 × 270 (169 × 106)	644 to 774 (253 to 305)	0 (0)
250"	540 × 340 (213 × 134)	806 to 968 (317 to 381)	0 (0)

4:3	Screen Size	Projection Distance  (a)  Minimum (Wide) to Maximum (Tele)	₿
30"	61 × 46 (24 × 18)	106 to 129 (42 to 51)	0 (0)
40"	81 × 61 (32 × 24)	143 to 173 (56 to 68)	0 (0)
50"	$100 \times 76$ $(39 \times 30)$	180 to 217 (71 to 85)	0 (0)
60"	120 × 91 (47 × 36)	216 to 260 (85 to 103)	0 (0)
70"	$140 \times 110$ (55 × 43)	253 to 304 (100 to 120)	0 (0)
80"	$160 \times 120$ (63 × 47)	290 to 348 (114 to 137)	0 (0)
100"	$200 \times 150$ $(79 \times 59)$	363 to 436 (143 to 172)	0 (0)
150"	$300 \times 230$ $(118 \times 91)$	546 to 656 (215 to 258)	0 (0)
200"	410 × 300 (161 × 118)	729 to 876 (287 to 345)	0 (0)
235"	$480 \times 360$ (189 × 142)	857 to 1030 (338 to 406)	0 (0)

			···· (····)
16:	9 Screen Size	Projection Distance  Minimum (Wide) to Maximum (Tele)	₿
30"	$66 \times 37$ $(26 \times 15)$	96 to 116 (38 to 46)	+2 (+0.8)
400	89 × 50	130 to 156	+3
40"	$(35 \times 20)$	(51 to 62)	(+1.1)
50"	$110 \times 62$	163 to 196	+3
50"	$(43 \times 24)$	(64 to 77)	(+1.4)
60"	$130 \times 75$	196 to 236	+4
60	$(51 \times 30)$	(77 to 93)	(+1.6)
70"	$150 \times 87$	229 to 276	+5
70	$(59 \times 34)$	(90 to 109)	(+1.9)
80"	$180 \times 100$	263 to 316	+6
80	$(71 \times 39)$	(103 to 124)	(+2.2)
100"	$220 \times 120$	329 to 396	+7
100	$(87 \times 47)$	(130 to 156)	(+2.7)
150"	$330 \times 190$	495 to 596	+10
130	$(130 \times 75)$	(195 to 234)	(+4.1)
200"	$440 \times 250$	662 to 795	+14
200	$(173 \times 98)$	(261 to 313)	(+5.5)
260"	$580 \times 320$	861 to 1035	+18
200	$(228 \times 126)$	(339 to 407)	(+7.1)





Units: cm (in.)

+7 (+2.7)

+9 (+3.4)

+10 (+3.7)

### EB-X6

Units: cm (in.)

		Projection Distance 🗛	_
4:3 Screen Size		Minimum (Wide) to Maximum (Tele)	₿
30"	61 × 46 (24 × 18)	84 to 101 (33 to 40)	-5 (-1.9)
40"	81 × 61 (32 × 24)	113 to 136 (44 to 53)	-6 (-2.5)
50"	$100 \times 76 (39 \times 30)$	142 to 171 (56 to 67)	-8 (-3.1)
60"	120 × 91 (47 × 36)	171 to 206 (67 to 81)	-10 (-3.8)
80"	160 × 120 (63 × 47)	229 to 275 (90 to 108)	-13 (-5)
100"	200 × 150 (79 × 59)	287 to 345 (113 to 136)	-16 (-6.3)
150"	300 × 230 (118 × 91)	432 to 519 (170 to 204)	-24 (-9.4)
200"	410 × 300 (161 × 118)	577 to 693 (227 to 273)	-32 (-12.5)
250"	510 × 380 (201 × 150)	722 to 867 (284 to 341)	-40 (-15.6)
300"	610 × 460 (240 × 181)	867 to 1041 (341 to 410)	-48 (-18.8)


16:9 Screen Size		i rojection bistance	
		Minimum (Wide) to Maximum (Tele)	₿
30"	$66 \times 37 \ (26 \times 15)$	91 to 110 (36 to 43)	+1 (+0.4)
40"	89 × 50 (35 × 20)	123 to 148 (48 to 58)	+1 (+0.5)
50"	$110 \times 62 \ (43 \times 24)$	155 to 186 (61 to 73)	+2 (+0.7)
60"	$130 \times 75 \ (51 \times 30)$	186 to 224 (73 to 88)	+2 (+0.8)
80"	180 × 100 (71 × 39)	249 to 300 (98 to 118)	+3 (+1.1)
100"	220 × 120 (87 × 47)	313 to 376 (123 to 148)	+3 (+1.4)
150"	330 × 190 (130 × 75)	471 to 566 (185 to 223)	+5 (+2)

Projection Distance (A)

629 to 755 (247 to 297)

787 to 945 (310 to 372)

866 to 1040 (341 to 409)

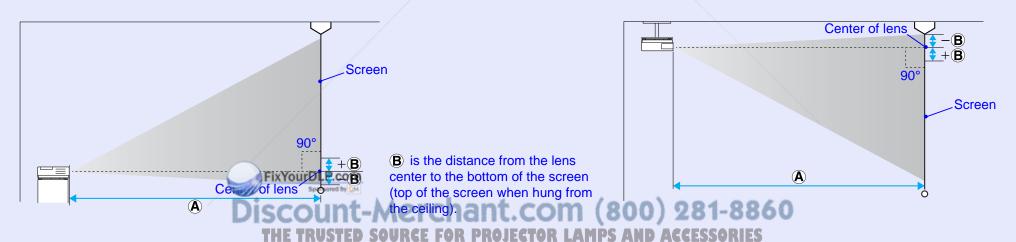

200"

250"

275"

 $440 \times 250 (173 \times 98)$ 

 $550 \times 310 \ (217 \times 122)$ 

 $610 \times 340 (240 \times 134)$ 




## EB-S6

Units: cm (in.)

		Projection Distance 🕒	₿
4:3 Screen Size		Minimum (Wide) to Maximum (Tele)	Minimum (Wide) to Maximum (Tele)
30"	61 × 46 (24 × 18)	87 to 119 (34 to 47)	-4 to +2 (-1.7 to +0.9)
50"	$100 \times 76 (39 \times 30)$	147 to 200 (58 to 79)	-7 to +4 (-2.8 to +1.4)
60"	120 × 91 (47 × 36)	177 to 240 (70 to 95)	-9 to +4( -3.4 to +1.7)
70"	140 × 110 (55 × 43)	207 to 281 (82 to 110)	-10 to +5 (-4 to +2)
80"	160 × 120 (63 × 47)	237 to 321 (93 to 126)	-11 to +6 (-4.5 to +2.3)
100"	200 × 150 (79 × 59)	297 to 402 (117 to 158)	-14 to +7 (-5.7 to +2.9)
150"	300 × 230 (118 × 91)	447 to 605 (176 to 238)	-22 to +11 (-8.5 to +4.3)
200"	410 × 300 (161 × 118)	597 to 807 (235 to 318)	-29 to +15 (-11.3 to +5.7)
300"	610 × 460 (240 × 181)	897 (353)	-43 (-17)
350"	$710 \times 530 \ (280 \times 209)$	1047 (412)	-50 (-19.8)

Units: cm (in.)

16:9 Screen Size		Projection Distance <b>(</b>	₿
		Minimum (Wide) to Maximum (Tele)	Minimum (Wide) to Maximum (Tele)
30"	$66 \times 37 \ (26 \times 15)$	95 to 130 (37 to 51)	+2 to +9 (+0.6 to +3.4)
50"	$110 \times 62 (43 \times 24)$	161 to 218 (63 to 86)	+3 to +14 (+1 to +5.6)
60"	$130 \times 75 \ (51 \times 30)$	193 to 262 (76 to 103)	+3 to +17 (+1.2 to +6.8)
70"	150 × 87 (59 × 34)	226 to 306 (89 to 120)	+4 to +20 (+1.4 to +7.9)
80"	180 × 100 (71 × 39)	259 to 350 (102 to 138)	+4 to +23 (+1.6 to +9)
100"	220 × 120 (87 × 47)	324 to 438 (128 to 173)	+5 to +29 (+2 to +11.3)
150"	$330 \times 190 \ (130 \times 75)$	487 to 659 (192 to 259)	+8 to +43 (+3 to +16.9)
200"	$440 \times 250 \ (173 \times 98)$	651 to 880 (256 to 346)	+10 to +57 (+4 to +22.6)
300"	660 × 370 (260 × 146)	978 (385)	+15 (+6)
320"	710 × 400 (280 × 157)	1043 (411)	+16 (+6.4)

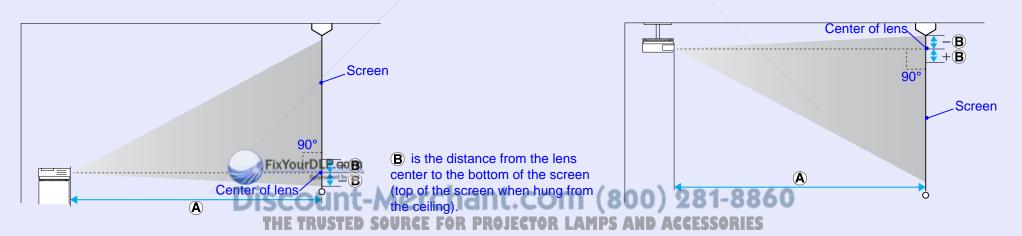


## **Connecting to External Equipment**

## **Connecting to an External Monitor (EB-X6/S6 only)**

Computer images being input the Computer Input port can be displayed on an external monitor and the screen at the same time when connected to the projector. This means that you can check projected images on an external monitor when giving presentations even if you cannot see the screen.

Connect to an external monitor using the cable supplied with the monitor.

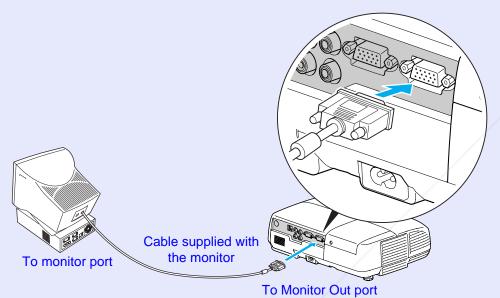



- Component video signals and images from equipment connected to the Video port and S-Video port cannot be output to an external monitor.
- The setting gauge for stone, the configuration and help screen, and so on are not output to an external monitor.

t.com (800) 281-8860

## Connecting and Removing a USB Device (EB-W6 only)



You can connect a digital camera, hard disk drive and USB memory compatible with USB 2.0 or 1.1. You can project image files from a connected digital camera or USB storage device in Slideshow.

**p.90** 

### **Connecting a USB Device**

This section explains how to connect USB devices using the digital camera as an example.

Connect with a specified USB cable or one supplied with the digital camera.



Use a USB cable of up to 3 meters in length. If the cable length is over 3 meters, the slideshow may not operate normally.



#### **Attention**

- Normal operation is not possible when using a USB hub. Connect the projector directly to a digital camera or USB storage device.
- When connecting a USB compatible hard disk drive, be sure to use the hard disk drive's accessory AC adaptor.

## **Reading the Indicators**

The USB indicator colors are lit as follows to indicate the status of the USB device connected to the projector.

 	r • .		0.00
•	Lit	•	Off
	பட		vii

Indicators	Status
(orange)	A USB device is connected.
(green)	A Slideshow of images from the connected device is
	being played.
	A USB device is not connected.

## Removing a USB Device

After finishing projecting, use the following procedure to remove USB devices from the projector.

#### **Procedure**



Turn off power for the digital camera or USB device.



Remove from the projector's USB port (Type A).

To digital camera's USB port

**USB** cable

THEATRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

## Inserting and Ejecting a SD Card (EB-W6 only)



You can project image files from a inserted SD card or SDHC (SD High Capacity) card in Slideshow. p.90
From here on these are referred to as SD cards.
The following explains how to insert and eject SD cards.

### **Inserting a SD Card**


#### **Attention**

Insert the SD card so that it faces the correct direction. Inserting a card in the wrong direction may result in malfunction or damage.

#### **Procedure**

# Insert the SD card into the card slot with its top surface facing up.

Firmly insert the card as far as it can go.

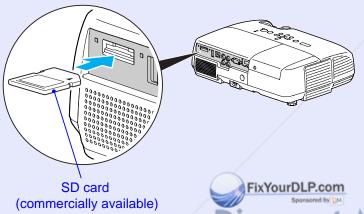

## Reading the SD Card Access Lamp

The SD card access lamp is lit or flashing as follows to indicate the access status of the SD card.

	***
Lamp	Status
*	Reading data from the SD card.
	SD card is standing by.
	SD card is not being accessed.

Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

## **Ejecting a SD Card**

### **Attention**


Do not remove the card while its access lamp is flashing. You may damage the card or projector.

#### Procedure



Lightly press the SD card.

The SD card ejects.

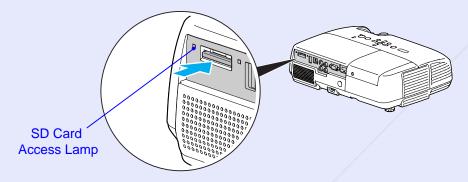

(2) Grip the SD card and pull it straight out.



## **Connecting with USB Cable for Projection (USB Display)**




The projector can project computer images when connected via the supplied USB cable to a Windows computer. This function is called USB Display. Computer images can quickly be projected simply by connecting with a USB cable.

#### **Attention**

Do not connect via a USB hub: connect the projector directly to the computer.


### **How to Connect (For EB-W6)**

#### **Procedure**

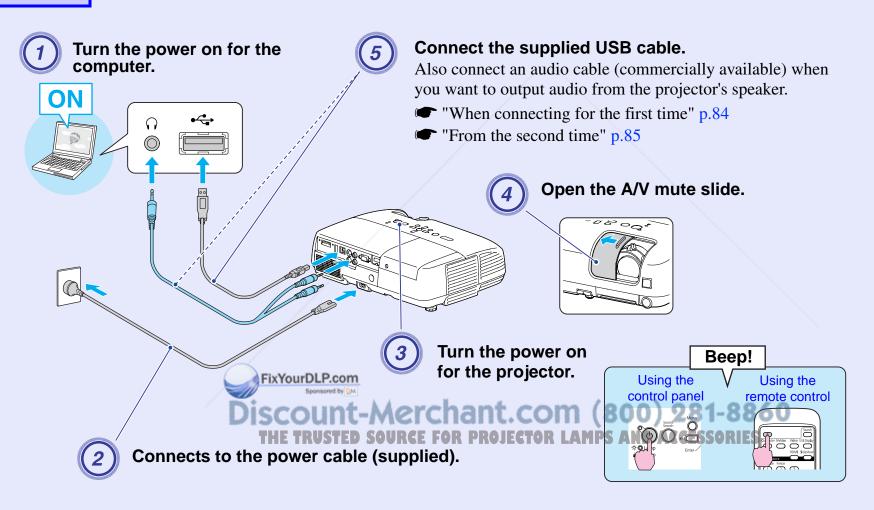

## **How to Connect (For EB-X6/S6)**

#### Procedure

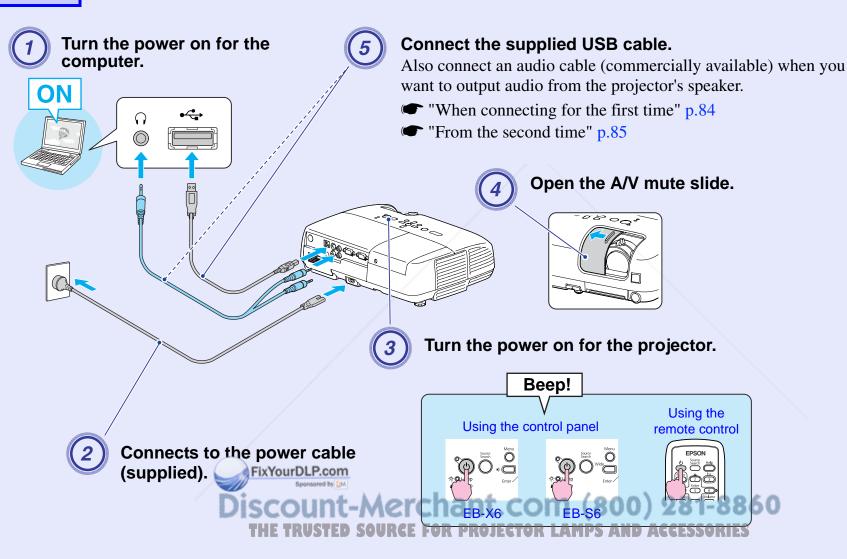


### When connecting for the first time

When you are using Windows 2000, double-click "My Computer" - "EPSON\_PJ\_UD" - "EMP\_UDSE.EXE", on your computer.



## Driver installation starts automatically.

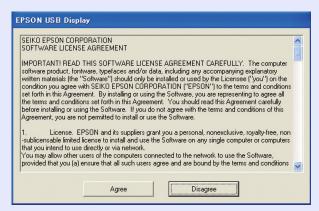

When using user authorization with a Windows 2000 computer, a Windows error message may be displayed and installation may not be possible. In this case, update Windows to the latest status and then reconnect. For more details, contact the nearest address provided in the Support and Service Guide. Epson Projector Contact List



### Select "Agree".


You cannot run USB Display if the driver is not installed. Be sure to select "Agree". If you want to cancel installation, select "Disagree".





### Computer images are projected.

It may take a little time before computer images are projected. Until computer images are projected, leave the equipment as it is and do not disconnect the USB cable or turn off the power to the projector.

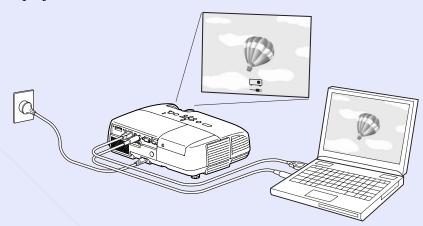



- When images are not projected, click "All Programs" "EPSON Projector" "EPSON USB Display" "EPSON USB Display".
- When automatic installation is not performed, doubleclick "EMP\_UDSE.EXE" under "My Computer" -"EPSON P.I UD".
- To uninstall the driver, click "Change/Remove" under "Start" "Control Panel" "Add or Remove Programs" "EPSON USB Display".
- Disconnecting
  The projector can be disconnected simply by
  disconnecting the USB cable. There is no need to use the
  "Safely Remove Hardware" feature in Windows.



#### From the second time

### Computer images are projected.


It may take a little time before computer images are projected. Leave the equipment as it is during this period.

## **Connecting a USB Cable**



Connect the computer's USB port and the USB port (Type B) on the rear of the projector with a supplied USB cable to use functions other than those available with USB Display. Refer to the pages indicated for method of use. Further, these functions cannot be used simultaneously with USB Display.

- Use the [Page] (+)/(-) buttons on the remote control to Page Up/ Down. **p.86**
- Operating the mouse pointer by remote control. p.87
- Control by sending commands from the computer to the projector.
- **p.100**

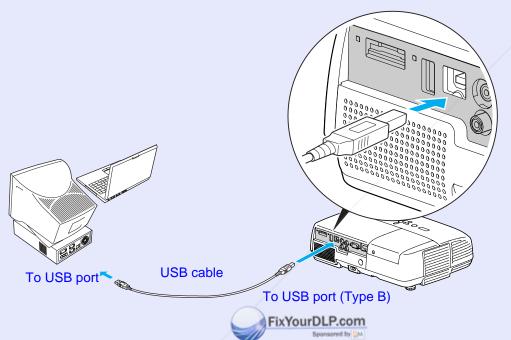

### Page Up/Down by Remote Control

When projecting a computer screen image, you can operate Page Up/ Down with the supplied remote control if the computer is not nearby.

#### **Procedure**



Connect the computer to the projector by USB cable.

EB-W6 **p.82** EB-X6/S6 p.83



Set "Extended" - "USB Type B" to "Page Up/Down" under the configuration menu.

- When using USB Display, set "Extended" "USB Type B" to "USB Display" under the configuration menu. p.82
- You cannot use the Page Up/Down function and the Wireless Mouse function simultaneously. 

  p.87


#### Compatible computer

Windows 98/98SE/2000/Me/XP Home Edition/XP Professional Vista Home Basic/Vista Home Premium/Vista Business/Vista Enterprise/Vista Ultimate

Mac OS X 10.3 to 10.5

ount-Merchant.com (800) 281-8860

Example of Use: When showing a slideshow in PowerPoint, the previous and next slides are displayed as follows.

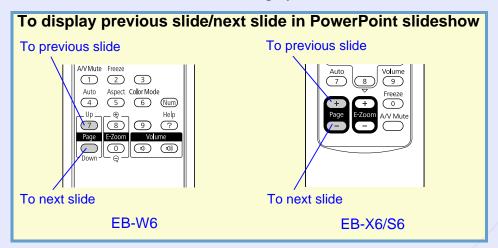

# Operating the Mouse Pointer by Remote Control (Wireless Mouse function)

The supplied remote control has a mouse pointer operation function. This function is called Wireless Mouse function.

You can use this when the current input source is the computer or HDMI (EB-W6 only).



- You cannot use the Wireless Mouse function during use of USB Display.
- You cannot use the Wireless Mouse function and Page Up/ Down simultaneously.

#### **Procedure**



Connect the computer to the projector by USB cable.

EB-W6 p.82 EB-X6/S6 p.83



Set "Extended" - "USB Type B" to "Wireless Mouse" under the configuration menu.

#### Compatible computer

Windows 98/98SE/2000/Me/XP Home Edition/XP Professional Vista Home Basic/Vista Home Premium/Vista Business/Vista Enterprise/Vista Ultimate

Mac OS X 10.3 to 10.5





Right click




- You may not be able to use the Wireless Mouse function depending on your version of the Windows or Macintosh operating system.
- You may need to make settings on the computer side to use the mouse. Refer to the computer's documentation for more detailed information.

After connecting, you can use the mouse pointer in the following ways.

### ■ Wireless mouse operation (EB-W6 only)


### **Moving mouse pointer**

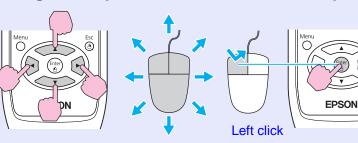

Mouse click operation

Double click: Press the button rapidly twice.

#### Drag and drop

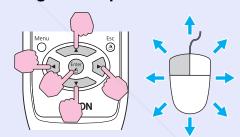


- (1) Hold down [Enter] and press [ ] to drag.
- (2) Release [Enter] at any position to drop.



#### ■ Wireless Mouse operation (EB-X6/S6 only)

#### **Moving mouse pointer**


#### Mouse click operation

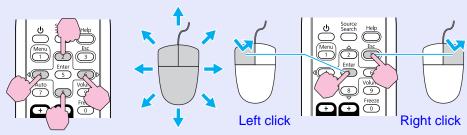

Double click: Press the button rapidly twice.

- When the left and right mouse buttons are set oppositely on your computer, the remote control operations are also reversed.
- You cannot use the Wireless Mouse function when using the following functions.
- Using the Configuration Menu
- Using the Help Menu
- Using E-Zoom
- Capturing a user's logo
- Adjusting the volume

### **Drag and drop**

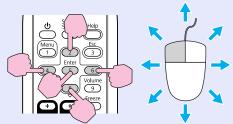

- (1) Hold down [Enter] and press
- [▲▶▼◀] to drag.
- (2) Release [Enter] at any position to drop.



## **Using Slideshow (EB-W6 only)**



You can make presentations by connecting the projector to a digital camera, USB storage device or SD card. The image files stored on these devices can be projected directly. This makes projection easy, since it is not necessary to connect a computer.

### Image Files that can be Projected in a Slideshow

The image files that can be projected in a slideshow are as follows.

Туре	File type (extension)	Comment
Still images only	.jpg	Shall be JPEG files that support the Exif standard. Images with a resolution above 8176 x 6144 cannot be projected. The horizontal/vertical pixel count of the image shall be multiples of 8.



- USB storage devices that have a security function cannot be used.
- Due to the characteristics of JPEG files, if the compression ratio is high the image may not be projected properly.
- Movie files cannot be projected.

## **Basic Slideshow Operations**

The following explains the basic operating method for Slideshow. The following operations are all performed by remote control. Therefore the button names refer to buttons on the remote control.

### Starting Slideshow

#### **Procedure**

## Slideshow starts automatically when the projector is connected to a USB storage device or SD card.


Refer to the following for how to connect a USB storage device or SD card.

Connecting a USB storage device: p.79

Connecting a SD card: p.80



During projection of images from another source, the projector will switch to the device you connect as soon as you press the [Slideshow] button.

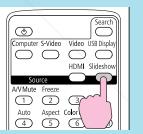





### Exiting Slideshow

#### **Procedure**

## To end a slideshow, remove the connected USB storage device or SD card.

Refer to the following for how to remove a USB storage device or SD card.

Removing a USB storage device: p.79


Removing a SD card: p.81

#### Slideshow file browser screen

The following kind of screen is displayed when the slideshow begins. This screen is called the file browser screen.



When the projector is connected to multiple storage devices, the following kind of drive selection screen is displayed containing icons that indicate the type of storage. In this case, press the [5] button, and after selecting the drive for the content you want to display, press the [Enter] button.

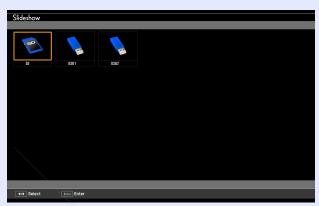



You can connect up to 5 storage devices simultaneously: 1 SD card and 4 USB storage devices.

The following explains the file browser screen.



The following table explains about each menu item and content of the file browser screen and how they work when selected and accepted with the [Enter] button.

Item names	Function				
Status display	This lets you check the drive, folder, current page be displayed and total number of pages.				
Control panel (top)	Back to Top: Previous page: Select drive:	Moves to one level upper folder. Displays the previous page when there is a previous page. Move to a drive selection screen.			

FixYourDLP.com

Item names		Function			
Contents screen	<ul> <li>Press the [ ] but thumbnailed image file are surrounded.</li> <li>The contents screet to the number of feet to the number of feet when you select a button, the selecte.</li> <li>When you select a the contents of the.</li> <li>When you select the contents of the when you select the contents of the upper folder. When this icon is not discovered.</li> </ul>	ch cannot be displayed in thumbnails			
Control panel	Option:	Displays the option screen.			
(bottom)		<b>p</b> .95			
	Next page:	Displays the next page when there			
		is a next page.			
	Slideshow: Starts Slideshow.				
Operation guide	Operation guide is d	isplayed according to the item			
	selected. Can operate with the button concerned.				



When contents cover several pages, change page displays by pressing [Page] (+) / (-).

DISCOUNT-MERCHANT.COM (800) 281-880
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

### Playing individual images

#### Procedure

Press the [ ] button, and position the cursor on the image file you want to project.

FixYourDLP.com





## Press the [Enter] button.

The selected image file is played.





• Position the cursor on the image file, press the [Esc] button, and the following sub-menu is displayed. In this state, you can also play the image file by pressing the [Enter] button.



• During play, press the [ ] button to switch between image files.

### Running Slideshow

You can play image files in a folder one by one in sequence. This function is known as Slideshow. Run Slideshow by the following procedure. The following explains how to run a slideshow on the contents screen being displayed.

#### **Procedure**

- In the file browser screen, display the folder you want to run Slideshow.
- Press the [ ] button and position the cursor over "SlideShow" at the control panel (bottom).
- Press the [Enter] button.

The slideshow runs and images in the folder are projected sequentially one by one.

When the last image is projected in the slideshow, the file browser screen is automatically displayed again. When "Continuous Play" on the option screen is set to "On", the slideshow is automatically repeated. p.95



- When you want to start a slideshow from a particular image file, play the file and press the [Enter] button.
- When you want to play a slideshow of image files in a particular folder, position the cursor on the folder in the browser and press the [Esc] button. Select "Slideshow" from the displayed submenu, and press the [Enter] button.




• You can set conditions such as projecting repeatedly and adding transition effects between images. To change image files automatically when running a slideshow, set the screen switching time in the option menu to other than "No". (When the screen switching time is set to "No", you must change slides manually.)

### Rotating images

You can rotate the image being played in 90° units. You can also rotate images being played in a slideshow. Use the following procedure to rotate images.

#### Procedure

- 1 Display a single image file or run a slideshow.
- When an image is displayed, press the [ ] button or [ ] button.

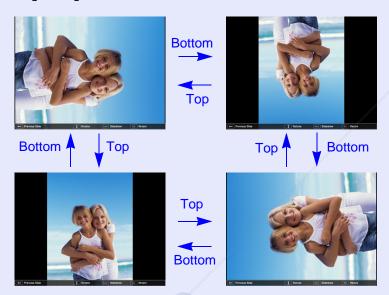

FixYourDLP.com

## **Setting Image File Display and Slideshow.**

To set the browser's image display order and set Slideshow, display the option menu.

#### Procedure

Press the [ ] button on the file browser screen, position the cursor over "Option" at the control panel (bottom), and press the [Enter] button.

The option screen is displayed.



Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES





Position the cursor over the item you want to change, press the [Enter] button, and the setting becomes effective.

Refer to the following table for details of each item.

Item	Function
Display Setting	Sets the order of files for display. Files can be selected in order of name or ascending order of update.
Continuous Play	Sets whether to play Slideshow repeatedly.
Screen switching time	Sets the display time for one file in a slideshow. You can set "No" or "1 to 60 sec". If you set "No", images are not switched automatically.
Effect	Sets transition effects between images.



Press the [ ] button, position the cursor on "OK", and then press the [Enter] button.

## **Optional Accessories and Consumables**



Prepare the following options and consumables. Purchase depending on usage. The following list of optional accessories and consumables is current as of: 2008.07. Details of accessories are subject to change without notice and availability may vary depending on the country of purchase.

### Optional accessories

Soft carrying case ELPKS16B

Use this case if you need to travel with the projector.

60" portable screen ELPSC07 80" portable screen ELPSC08 100" screen ELPSC10

Portable roll-type screens (Aspect ratio 4:3)

50" portable screen ELPSC06

A compact screen that can be carried easily. (Aspect ratio 4:3)

HD-15 cable ELPKC02

(1.8m - for mini D-Sub15-pin/mini D-Sub 15pin)

This is the same as the computer cable supplied with the projector.

HD-15 cable ELPKC09

(3m - for mini D-Sub15-pin/mini D-Sub 15pin)

HD-15 PC cable ELPKC10

(20 m - for mini D-Sub15-pin/mini D-Sub 15pin)

Use one of these longer cables if the computer cable bundled with the product is too short.

Component video cable ELPKC19

(3 m - for mini D-Sub 15-pin/RCA male×3)

Use to connect a <u>component video</u> source

Ceiling plate ELPFC03

Pipe 370 (370 mm silver)\* ELPFP04

Pipe 570 (570 mm silver)\* ELPFP05

Pipe 770 (770 mm silver)\* ELPFP06

Ceiling mount (For use with the ceiling plate) ELPMB18 Use when installing the projector on a ceiling.

\* A special method of installation is required to suspend the projector from a ceiling. Contact your dealer or the nearest address provided in the *Support and Service Guide* if you want to use this installation method. \* Epson Projector Contact List

#### Consumables

Lamp unit ELPLP41

Use as a replacement for used lamps.

Air filter (by 2) ELPAF13

Use as a replacement for used air filters.

### 9

## **Glossary**

This section briefly explains terms that are used with the projector and difficult terms that are not explained in the text of this guide. For details, refer to other commercially available publications.

Aspect ratio	The width-to-height ratio of a projected image or screen. When the width-to-height ratio is 16:9 or 16:10, the elongated screen is known as wide-screen. The aspect ratio for standard images is 4:3.
Component Video	A video signal which has the luminance component and color component separated to provide better image quality. Refers to images that consist of three independent signals: Y (luminance signal), Pb and Pr (color difference signals).
Composite video	Video signals that have the video brightness signals and color signals mixed together. The type of signals commonly used by household video equipment (NTSC, PAL, and SECAM formats). The carrier signal Y (luminance signal) and chroma (color) signal that are contained in the color bar are overlapped to form a single signal.
Contrast	The relative brightness of the light and dark areas of an image can be increased or decreased to make text and graphics stand out more clearly, or to make them appear softer. Adjusting this particular property of an image is called "contrast adjustment".
Dolby Digital	A sound format developed by Dolby Laboratories. Normal stereo is a 2-channel format that uses two speakers. Dolby Digital is a 6-channel (5.1-channel) system which adds to this a center speaker, two rear speakers, and a sub-woofer.
HDTV	An abbreviation for High-Definition Television that refers to high-definition systems which satisfy the following conditions.  • Vertical resolution of 720p or 1080i or greater (p = progressive), i = interlace)  • Screen aspect ratio of 16:9  Dolby Digital audio reception and playback (or output)
Interlace	A method of image scanning whereby the image data is divided into fine horizontal lines that are displayed in sequence starting from left to right and then from top to bottom. The even-numbered lines and odd-numbered lines are displayed alternately.
Progressive	A method of image scanning whereby the image data from a single image is scanned sequentially from top to bottom to create a single image.
Refresh rate	The light-emitting element of a display maintains the same luminosity and color for an extremely short time. Because of this, the image must be scanned many times per second to refresh the light-emitting element. The number of refresh operations per second is called the Refresh rate and is expressed in hertz (Hz).
SDTV	An abbreviation for Standard Definition Television that refers to standard television systems which do not satisfy the conditions for HDTV High-Definition Television.
Squeeze mode	In this mode, wide-screen images in 16:9 mode are compressed in the horizontal direction so that they are stored on the recording medium as 4:3 images.  W' these images are played back by the projector in squeeze mode, they are restored to their original 16:9 format.
sRGB	A gernational standard for color intervals that was formulated so that colors that are reproduced by video equipment can be handled easily by computer operating systems (OS) and the Internet. If the connected source has an sRGB mode, set both the projector and the connected signal source to sRGB.
SVGA	A type of video signal with a resolution of 800 (horizontal) × 600 (vertical) dots that is used by IBM PC/AT-compatible computers.
S-Video	A video signal which has the luminance component and color component separated to provide better image quality. Refers to images that consist of two independent signals: Y (luminance signal) and C (color signal).



SXGA	A type of video signal with a resolution of 1280 (horizontal) × 1024 (vertical) dots that is used by IBM PC/AT-compatible computers.
Synchronization	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images are not of a good quality. The process of matching the phases of these signals (the relative position of the crests and the troughs in the signal) is called Synchronization. If the signals are not synchronized, flickering, blurriness, and horizontal interference occur.
Tracking	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images are not of a good quality. The process of matching the frequency of these signals (the number of crests in the signal) is called Tracking. If tracking is not carried out correctly, wide vertical stripes appear in the signal.
VGA	A type of video signal with a resolution of 640 (horizontal) × 480 (vertical) dots that is used by IBM PC/AT-compatible computers.
XGA	A type of video signal with a resolution of 1024 (horizontal) × 768 (vertical) dots that is used by IBM PC/AT-compatible computers.

## **ESC/VP21 Commands**



### **Command List**

The ESC and VP21 commands are commands sent from the computer to control the projector.

When the power ON command is transmitted to the projector, the power turns on and it enters warm-up mode. When the projector's power has turned on, a colon ":" (3Ah) is returned.

When a command is input, the projector executes the command and returns a ":", and then accepts the next command.

If the command being processed terminates due to a problem, an error message is output and a ":" is returned.

	Item	Command
Power ON/OFF	ON	PWR ON
	OFF	PWR OFF
Signal selection	Video	SOURCE 41
	S-Video	SOURCE 42
	HDMI (EB-W6 only)	SOURCE 30
	USB Display	SOURCE 51
	Slideshow (EB-W6 only)	SOURCE 52
A/V Mute ON/OFF	ON	MUTE ON
	OFF	MUTE OFF
A/V Mute selection	Black	MSEL 00
	Blue	MSEL 01
	Logo	MSEL 02
	Item	Command
	nem -	Computer Port
Signal selection	Computer (Auto)	SOURCE 1F
	Computer FixYourDLP.com	SOURCE 11

## **Cable Layouts**

#### USB connection

Connector shape: USB (Type B)

At the projector>
(Type B)

<sup>\*</sup> Add a Carriage Return (CR) code (0Dh) to the end of each command and transmit.

## **USB Connection Setup**

To control the projector with ESC/VP21 commands using communication via USB connection, it is necessary to set "Extended" - "USB Type B" from the configuration menu to something other than "USB Display". In addition to that, the following preparations are required.

#### Procedure

Download the USB driver (USB-COM Driver) from the Epson Web site to your computer.

Go to <a href="http://www.epson.com">http://www.epson.com</a> and select the support section of your local Epson Web site.

Install the downloaded USB driver onto your computer.

Read the instructions displayed on the download screen.

Set "Extended" - "Link 21L" to "On" from the projector's configuration menu.

## **List of Supported Monitor Displays**



### EB-W6

### Computer images (analog RGB)

Signal	Refresh Rate Resolution		Aspect Mode					
Signal	(Hz)	(dots)	Normal	16:9	Full	Zoom	Through	
VGAEGA	70	640×350	1280×700	1280×720	1280×800	1280×700	640×350	
<u>VGA</u> ►►	60/72/75/85, iMac*1	640×480/640×360*2	1066×800	1280×720	1280×800	1280×800	640×480	
<u>SVGA</u> ▶▶	56/60/72/75/85, iMac*1	800×600/800×450*2	1066×800	1280×720	1280×800	1280×800	800×600	
<u>XGA</u> ▶▶	60/70/75/85, iMac*1	1024×768/1024×576*2	1066×800	1280×720	1280×800	1280×800	1024×768	
	60	1280×768	1280×768	1280×720	1280×800	1280×768	1280×768	
WXGA	60	1360×768	1280×722	1280×720	1280×800	1280×722	1280×768	
	60/75/85	1280×800	1280×800	1280×720	1280×800	1280×800	1280×800	
WXGA+	60/75/85	1440×900	1280×800	1280×720	1280×800	1280×800	1280×800	
WSXGA+*3	60	1680×1050	1280×800	1280×720	1280×800	1280×800	1280×800	
	70/75/85	1152×864	1066×800	1280×720	1280×800	1280×800	1280×800	
<u>SXGA</u> ≯	60/75/85	1280×1024	1000×800	1280×720	1280×800	1280×800	1280×800	
	60/75/85	1280×960	1066×800	1280×720	1280×800	1280×800	1280×800	
SXGA+	60/75/85	1400×1050	1066×800	1280×720	1280×800	1280×800	1280×800	
UXGA	60	1600×1200	1066×800	1280×720	1280×800	1280×800	1280×800	
MAC13"	67	640×480	1066×800	1280×720	1280×800	1280×800	640×480	
MAC16"	75	832×624	1066×800	1280×720	1280×800	1280×800	832×624	
MAC19"	75	1024×768	1066×800	1280×720	1280×800	1280×800	1024×768	
WIACIS	60 FixYour	DLP.com 1024×768	1066×800	1280×720	1280×800	1280×800	1024×768	
MAC21"	75 Disco	1152×870	1059×800	1280×720	1280×800	1280×800	1152×800	

<sup>\*1</sup> Connection is not possible if the equipment does not have a VGA output port. JECTOR LAMPS AND ACCESSORIES

Even when signals other than those mentioned above are input, it is likely that the image can be projected. However, not all functions may be supported.

<sup>\*2</sup> Letterbox signal

<sup>\*3</sup> This is limited to selection of "Wide" from "Resolution" on the configuration menu.



### **■ Component Video**

Units: dots

Signal	Refresh rate	Resolution	Aspect Mode				
Signal	(Hz)		Normal	16:9	Full	Zoom	Through
<u>SDTV</u> → (480i)	60	720×480/720×360*	1066×800	1280×720	1280×800	1280×800	640×480
SDTV(576i)	50	720×576/720×432*	1066×800	1280×720	1280×800	1280×800	768×576
SDTV(480p)	60	720×480/720×360*	1066×800	1280×720	1280×800	1280×800	640×480
SDTV(576p)	50	720×576/720×432*	1066×800	1280×720	1280×800	1280×800	768×576
<u>HDTV</u> → (720p)	50/60	1280×720	1280×720	1280×720	1280×800	1280×720	1280×720
HDTV(1080i)	50/60	1920×1080	1280×720	1280×720	1280×800	1280×720	1280×800

<sup>\*</sup> Letterbox signal

### ■ Composite video/S-video

Units: dots

Signal	Refresh rate Resolution		Aspect Mode				
Signal	(Hz)	Resolution	Normal	16:9	Full	Zoom	Through
TV (NTSC)	60	720×480/720×360*	1066×800	1280×720	1280×800	1280×800	640×480
TV(PAL, SECAM)	50	720×576/720×432*	1066×800	1280×720	1280×800	1280×800	768×576

<sup>\*</sup> Letterbox signal



## ■ Input signal from HDMI input port

Units: dots

Signal	Refresh rate Resolution		Aspect Mode				
Signal	(Hz)	Resolution	16:9	Full	Zoom	Through	
<u>VGA</u>	60	640×480/640×360*	1280×720	1280×800	1280×800	640×480	
<u>SVGA</u>	60	800×600	1280×720	1280×800	1280×800	800×600	
<u>XGA</u> ►	60	1024×768	1280×720	1280×800	1280×800	1024×768	
SXGA₩	60	1280×960	1280×720	1280×800	1280×800	1280×800	
SAUA	60	1280×1024	1280×720	1280×800	1280×800	1280×800	
SXGA+	60	1400×1050	1280×720	1280×800	1280×800	1280×800	
UXGA	60	1600×1200	1280×720	1280×800	1280×800	1280×800	
<u>SDTV</u> → (480i)	60	720×480/720×360*	1280×720	1280×800	1280×800	640×480	
SDTV(480p)	60	720×480/720×360*	1280×720	1280×800	1280×800	640×480	
SDTV(576i)	50	720×576/720×432*	1280×720	1280×800	1280×800	768×576	
SDTV(576p)	50	720×576/720×432*	1280×720	1280×800	1280×800	768×576	
<u>HDTV</u> → (720p)	50/60	1280×720	1280×720	1280×800	1280×720	1280×720	
HDTV(1080i)	50/60	1920×1080	1280×720	1280×800	1280×720	1280×800	
HDTV(1080p)	50/60	1920×1080	1280×720	1280×800	1280×720	1280×800	

<sup>\*</sup> Letterbox signal



### EB-X6

## ■ Computer images (analog RGB)

Units: dots

Signal	Refresh rate	Resolution		Aspect Mode	
Signal	(Hz)	Resolution	Normal	4:3	16:9
VGAEGA	70	640×350	1024×560	1024×768	1024×576
<u>VGA</u>	60/72/75/85/iMac*1	640×480/640×360*2	1024×768	1024×768	1024×576
<u>SVGA</u> ▶	56/60/72/75/85/ iMac*1	800×600/800×450*2	1024×768	1024×768	1024×576
<u>XGA</u> ▶	60/70/75/85/iMac*1	1024×768/1024×576*2	1024×768	1024×768	1024×576
	60	1280×768	1024×614	1024×768	1024×576
WXGA	60	1360×768	1024×578	1024×768	1024×576
	60/75	1280×800	1024×640	1024×768	1024×576
WXGA+	60	1440×900	1024×640	1024×768	1024×576
	70/75	1152×864	1024×768	1024×768	1024×576
<u>SXGA</u> ₩	60	1280×1024	960×768	1024×768	1024×576
	60	1280×960	1024×768	1024×768	1024×576
SXGA+	60	1400×1050	1024×768	1024×768	1024×576
MAC13"	67	640×480	1024×768	1024×768	1024×576
MAC16"	75	832×624	1024×768	1024×768	1024×576
MAC19"	75	1024×768	1024×768	1024×768	1024×576
WIACI9	60	1024×768	1024×768	1024×768	1024×576
MAC21"	75	1152×870	1016×768	1024×768	1024×576

<sup>\*1</sup> Connection is not possible if the

Even when signals other than those mentioned above are input, it is likely that the image can be projected. However, not all functions may be supported.

ipment does not have a VGA output port.

<sup>\*2</sup> Letterbox signal

## ■ Component Video

Units: dots

Signal	Signal Refresh rate Resolution		Aspect Mode		
Signal	(Hz)	Resolution	4:3	16:9	
<u>SDTV</u> → (480i)	60	720×480/720×360*	1024×768	1024×576	
SDTV(576i)	50	720×576/720×432*	1024×768	1024×576	
SDTV(480p)	60	720×480/720×360*	1024×768	1024×576	
SDTV(576p)	50	720×576/720×432*	1024×768	1024×576	
<u>HDTV</u> → (720p)	50/60	1280×720	1024×768	1024×576	
HDTV(1080i)	50/60	1920×1080	1024×768	1024×576	

<sup>\*</sup> Letterbox signal

## ■ Composite video/S-video

Units: dots

Signal	Refresh rate	Resolution	Aspec	t Mode
Signal	(Hz)	Resolution	4:3	16:9
TV (NTSC)	60	720×480/720×360*	1024×768	1024×576
TV(PAL, SECAM)	50	720×576/720×432*	1024×768	1024×576

<sup>\*</sup> Letterbox signal



### **EB-S6**

## ■ Computer images (analog RGB)

Units: dots

Signal	Refresh rate Resolution		Aspect Mode		
Signal	(Hz)	Resolution	Normal	4:3	16:9
VGAEGA	70	640×350	800×438	800×600	800×450
<u>VGA</u> **	60/72/75/85/iMac*1	640×480/640×360*2	800×600	800×600	800×450
<u>SVGA</u> ▶	56/60/72/75/85/ iMac*1	800×600/800×450*2	800×600	800×600	800×450
<u>XGA</u> ►►	60/70/75/85/iMac*1	1024×768/1024×576*2	800×600	800×600	800×450
	60	1280×768	800×480	800×600	800×450
WXGA	60	1360×768	800×451	800×600	800×450
	60/75	1280×800	800×500	800×600	800×450
WXGA+	60	1440×900	800×500	800×600	800×450
	70/75	1152×864	800×600	800×600	800×450
<u>SXGA</u> ►	60	1280×1024	750×600	800×600	800×450
	60	1280×960	800×600	800×600	800×450
SXGA+	60	1400×1050	800×600	800×600	800×450
MAC13"	67	640×480	800×600	800×600	800×450
MAC16"	75	832×624	800×600	800×600	800×450
MAC19"	75	1024×768	800×600	800×600	800×450
	60	1024×768	800×600	800×600	800×450
MAC21"	75	1152×870	794×600	800×600	800×450

<sup>\*1</sup> Connection is not possible if the

sored by QM

Even when signals other than those mentioned above are input, it is likely that the image can be projected. However, not all functions may be supported.

ipment does not have a VGA output port.

<sup>\*2</sup> Letterbox signal

## ■ Component Video

Units: dots

Signal	Refresh rate <sup>▶</sup>	Resolution	Aspect Mode		
Signal	(Hz)	Resolution	4:3	16:9	
<u>SDTV</u> → (480i)	60	720×480/720×360*	800×600	800×450	
SDTV(576i)	50	720×576/720×432*	800×600	800×450	
SDTV(480p)	60	720×480/720×360*	800×600	800×450	
SDTV(576p)	50	720×576/720×432*	800×600	800×450	
<u>HDTV</u> → (720p)	50/60	1280×720	800×600	800×450	
HDTV(1080i)	50/60	1920×1080	800×600	800×450	

<sup>\*</sup> Letterbox signal

### ■ Composite video/S-video

Units: dots

Signal	Refresh rate	Resolution	Aspect Mode		
Signal	(Hz)	Resolution	4:3	16:9	
TV (NTSC)	60	720×480/720×360*	800×600	800×450	
TV(PAL, SECAM)	50	720×576/720×432*	800×600	800×450	

<sup>\*</sup> Letterbox signal



# **Specifications**




## **Specifications**

Product name		EB-W6	EB-X6	EB-S6		
Dimensions		$327 \text{ (W)} \times 92 \text{ (H)} \times 245 \text{ (D)} \text{ mm}$				
Panel size		0.56"	0.63"	0.55"		
Display method			Polysilicon TFT active matrix			
Resolution		1,024,000 pixels WXGA	786,432 pixels XGA	480,000 pixels SVGA		
		$(1280 \text{ (W)} \times 800 \text{ (H) dots}) \times 3$	$(1024 \text{ (W)} \times 768 \text{ (H) dots}) \times 3$	$(800 \text{ (W)} \times 600 \text{ (H) dots}) \times 3$		
Focus adjustment			Manual			
Zoom adjustment		Manual (	(1 to 1.2)	Digital (1.0 to 1.35)		
Lamp		UHE lamp 170 W, Model No.: ELPLP41				
Max. audio output		7 W monaural 1 W monaural				
Speaker		1				
Power supply		100 to 240 V AC ±10%, 50/60 Hz 2.8 to 1.5 A				
Power consumption	100 to 120 V area		Operating: 246 W			
			Standby power consumption: 3.0 W			
	220 to 240 V area		Operating: 231 W			
		Standby power consumption: 4.3 W				
Operating altitude		Altitude 0 to 2286m (0 ft to 7500 ft)				
Operating temperature		5 to +35°C (No condensation)				
Storage temperature		-10 to +60°C (No condensation)				
Mass		Approx. 2.8 kg	Approx. 2.8 kg	Approx. 2.7 kg		

Product na	me		EB-W6	EB-X6	EB-S6	
Connectors	Computer input port	1	Mini D-Sub15-pin (female) blue			
	Audio input port	1		RCA pin jack		
	S-Video input port	1	Mini DIN 4-pin			
	Video input port	1	RCA pin jack			
	Audio input port	1	RCA pin jack			
	HDMI input port	1	HDMI	-		
	Monitor Out port	1	-	Mini D-Sub15-pi	n (female) black	
	USB port (Type A)*1*3	1	USB connector (Type A)	-		
	USB port (Type B)*2*3	1	USB connector (Type B)			
	Card slot	1	SD card x 1	_		

<sup>\*1</sup> USB Type A supports USB1.1.

Angle of tilt



If you use the projector tilted at an angle of more than 30° it could be damaged and cause an accident.



SDHC logo is a trademark.



<sup>\*2</sup> USB Type B supports USB2.0.

<sup>\*3</sup> USB ports are not guaranteed to operate all devices that support USB.

#### **DECLARATION of CONFORMITY**

According to 47CFR, Part 2 and 15 Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B **Personal Computers** 

We:

Epson America, Inc.

Located at:

3840 Kilroy Airport Way

MS: 3-13

Long Beach, CA 90806

Tel:

562-290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR 2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC Compliance Statement** For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification or Declaration of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Trade Name:

FixYourDLP.com **EPSON** 

-Merchant.com (800) 281-8860

Type of Product:

Projector

Model:

H285C/H284C/H283C


## **Operating Requirements of Supplied Software**

The following computer requirements must be satisfied to operate USB Display supplied with this projector.

	Requirements
OS	Windows 2000 SP4
	Windows XP SP1
	Windows XP SP2
	Windows Vista
	Windows Vista SP1
CPU	Mobile Pentium III 1.2GHz or greater
	Recommended: Pentium M 1.6 GHz or
	greater
Memory capacity	256 MB or greater
	Recommended: 512 MB or greater
Hard disk space	256 MB or greater
Display	$XGA(1024 \times 768)$ or greater resolution
	16 bit color or greater display color
	Approx. 32,000 color display

## **Appearance**

External dimensions are the same for the EB-W6/X6/S6, but the EB-S6 differs only in the distance from the lens center to the ceiling mount. The illustration is of the EB-W6.

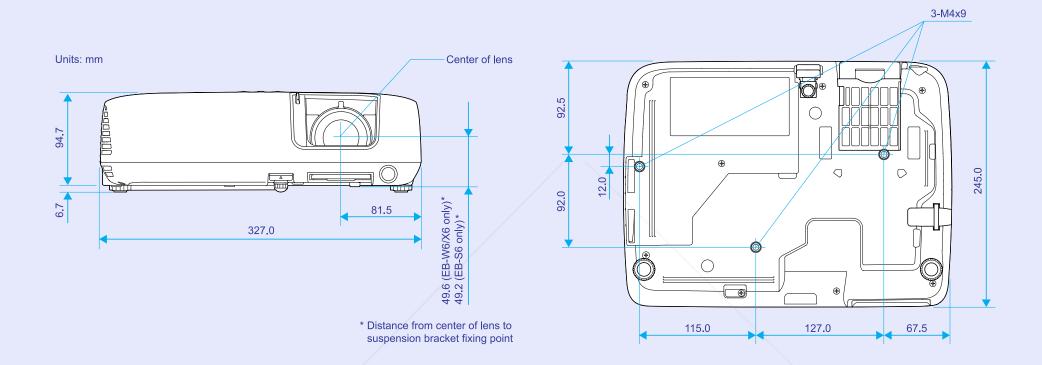



Α		E		L	
A/V Mute	22	ESC/VP21	100	Lamp cover	
A/V mute slide	6	Extended menu		Lamp Hours	
Air exhaust vent	6	External dimension diagram	113	Lamp indicator	
Air filter	15	External monitor	78	Lamp replacement period	6
Air filter replacement period	71	E-zoom	29	Language	4
Air intake vent	15			Low brightness	4
Angle of tilt	110	F			
Audio input port	7, 8			M	
Auto Setup	41	Focus ring	6		
		Freeze	23	Menu	37, 38, 39
В		Front	44	Messages	
		Front adjustable feet	6	Monitor Out port	
Blackboard		Full lock	34	Mouse pointer	88
Brightness					
Brightness Control	43	G		N	
С		Game	19	Numeric buttons	11, 1
		Glossary			,
Ceiling	44			0	
Cleaning the air filter and air intake	e vent65	Н /			
Cleaning the projector's surface				Operating temperature	109
Color Adjustment		Help function	49	Operation	
Color Mode	19, 40	High Altitude Mode:	45	Optional accessories	9 <sup>-</sup>
Color Saturation		How to replace the air filter		Overheating	52
Computer input port	7, 8	How to replace the lamp	68		
Configuration menu	37			P	
Connecting a USB Cable		1			
Connecting a USB Device	79			Part names and functions	
Consumables	97	Image menu	40	Password protect	3 <sup>.</sup>
Contrast	40	Indicators	51	Password protect sticker	3 <sup>.</sup>
Control panel	9	Info menu		Photo	
Control Panel Lock	34, 43	Input Signal	41, 46	Position	4 <sup>-</sup>
Cross	FixYour29_P.o	om		Power indicator	5 <sup>-</sup>
	Sponsored	by Disk		Power inlet	
D	Discour	nt-Merchant com	(Root)	Presentation	
	DISCOUL	Keystone	43	Problem solving	
Direct Power On	THE T.45 ST	IED SOURCE FOR PROJECTOR LAN	IPS AND ACCE	SS Progressive	
Display				Projection	4
Display Background				Projection distance	

Index

R	Т
Rear       44         Rear foot       15         Rear screen       64         Refresh rate       46         Remote control       13         Remote control light-emitting area       12, 14         Remote receiver       6, 7, 8	Temp indicator
Replacing batteries       66         Request code       33         Reset All       47         Reset menu       47         Resetting the lamp operating time       47, 70         Resolution       41, 46, 102	USB port
Screen size       75         SD card       80         Settings menu       43         Sharpness       40         Sleep Mode       45	Video port       .7, 8         Video Signal       .41, 46         Volume       .43         Z         Zoom ring       .6
Source	

Specifications ......109 sRGB ......19 Startup Screen ......44 Storage temperature ......109 Sub Menu ......37, 38, 39 Supported monitor displays ......102 Suspension bracket fixing points ......15 Sync Info .....FixYour46.P.com All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice.

Illustrations in this guide and the actual projector may differ.

#### General Notice:

Macintosh, Mac, and iMac are registered trademarks of Apple Computer, Inc.

IBM is a registered trademark of International Business Machines Corporation.

Windows, Windows NT, and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the U.S and/or other countries. Dolby is a trademark of Dolby Laboratories.

HDMI and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This product uses open source software.





This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

#### About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

# Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com

