

This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com




3M

MP8780 Multimedia Projector

Operator's Guide

MP8780 Projecteur multimédia Guide de l'opérateur
MP8780 Multimedia-Projektor Benutzerhandbuch
Proyector de Multimedia MP8780 Manual del Usuario
MP8780 Proiettore Multimediale Manuale dell'operatore
MP8780 Bruksanvisning för multimediaprojektor
MP8780 Multimedia Projector Gebruiksaanwijzing

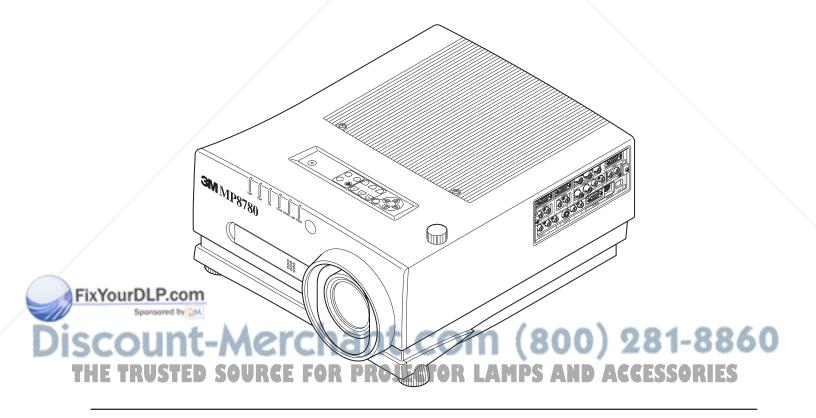

MP8780 Table of Contents

Safeguards	3					
Warranty	•••••••••••••••••••••••••••••••••••••••	5				
Section 1:	Unpack	6				
1.1	Contents of Shipping Box					
1.2	Optional Accessories ·····					
1.3	Keep Your Packing Materials	6				
1.4	What's Next? ·····	··· 6				
Section 2:	Product Description	··· 7				
2.1	Machine Characteristics	7				
2.2	Part Identification List ·····					
2.3	System Setup - Connecting Various Equipment	9				
2.4	Remote Control Transmitter Identification	··· 11				
Section 3:	Basic Operations	12				
3.1	Projector Startup ·····	··· 12				
3.2	Projector Shutdown	··· 12				
Section 4:	Adjustments and Functions	13				
4.1	Menu Navigation ·····					
4.2	How To Use Height Adjustment Feet					
4.3	SETUP					
4.4	IMAGE ·····	··· 15				
4.5	OPT	··· 16				
Section 5:	Maintenance	18				
5.1	Cleaning the Air Filter	··· 18				
Section 6:	Lamp	19				
6.1	Lamp					
6.2	Display Lamp Operation Hours					
6.3	Reset Lamp Hours					
Section 7:	Troubleshooting					
7.1	Symptom/Solution Table					
XYourDLP.20 Sponsored b	Message/Solution Table	··· 21				
Section 8: 8.1	Accessories Service Information	22 22				
HE TRUST	ED SOURCE FOR PROJECTOR LAMPS AND ACCESSO	RIE				
Appendix:	Technical Information	··· A-1				



Safeguards

INTENDED USE


Before operating the machine, please read the entire manual thoroughly. The 3MTM Multimedia Projector 8780 was designed, built and tested for use indoors, using 3MTM brand lamps, 3MTM brand ceiling mount hardware and nominal local voltages. This projector is not intended for household use. The use of other replacement lamps, outdoor operation or different voltages has not been tested and could damage the projector or peripheral equipment and/or create a potentially unsafe operating condition.

IMPORTANT SAFEGUARDS

- Read and understand all instructions before using.
 Pay particular attention to areas where this symbol is shown.
- **A WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
- **Caution** Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It may also be used to alert against unsafe practices.
 - ✓ **Note** Used to emphasize important conditions or details.
- 2. Close supervision is necessary when any appliance is used by or near children. Do not leave appliance unattended while in use.
- 3. Never look directly into the projector lens when the lamp is on. The high pressure mercury lamp produces a strong light which could damage your eyesight.
- 4. Care must be taken as burns can occur from touching hot parts.
- 5. Do not operate appliance with a damaged cord or if the appliance has been dropped or damaged until it has been examined by a qualified service technician.
- 6. Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
- 7. If any extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat.
- 8. Always unplug appliance from electrical outlet before cleaning and servicing and when not in use. Grasp plug and pull to disconnect.
- 9. To reduce the risk of electric shock, do not immerse this appliance in water or other liquids.
- 10. To reduce the risk of electric shock, do not disassemble this appliance, but take it to a qualified technician when service or repair work is required. Incorrect assembly can cause electric shock when the appliance is subsequently used.
- 11. Connect this appliance to a grounded outlet.
- 12. Do not expose this projector to direct sunlight, or use it outside.
- 13. Keep all ventilation openings free of any obstructions.
- 14. Always open the lens shutter or remove lens cap when the projection lamp is on.
- 15. Do not look directly into light beam of laser pointer. The pointer produces a strong light which could damage your eyesight.
 - 16. The projection lamp contains mercury. Always dispose of it in a proper manner according to local regulations.
 - 17. To avoid premature lamp failure, do not change the mounting position of the projector
 - (desktop 🖒 ceiling mount or ceiling 🖒 desktop mount) and continue to use the same lamp.
 - 18. Always operate machine on a flat, sturdy surface.

LOCATION OF PRODUCT SAFETY LABELS

Safety labels are used on or within the 8780 projector to alert you to items or areas requiring your attention.

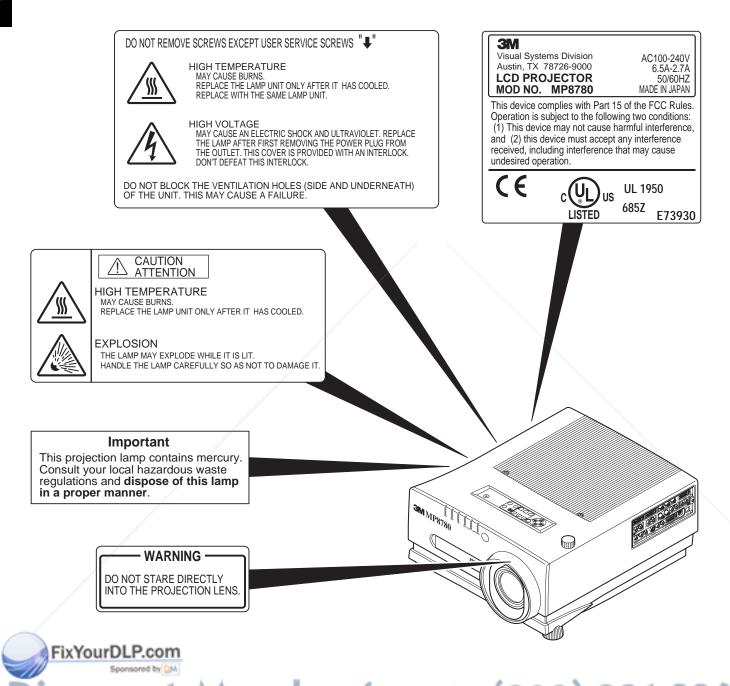

SAVE THESE INSTRUCTIONS AND ACCESSORIES THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

The information contained in this manual will help you operate and maintain your 3M MP8780 Multimedia Projector.

Warranty

LIMITED WARRANTY

3M warrants this product against any defects in material and workmanship, under normal usage and storage, for a period of two years from date of purchase. Proof of purchase date will be required with any warranty claim. In the event this product is found to be defective within the warranty period, 3M's only obligation and your exclusive remedy shall be replacement of any defective parts (labor included).

To obtain warranty service, immediately notify the dealer from which you purchased the product of any defects. In the USA call 1-800-328-1371 for warranty or repair service.

LIMITATION OF LIABILITY

THE FOREGOING WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND 3M SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTIBILITY AND FITNESS. 3M SHALL NOT BE LIABLE FOR ANY DAMAGES, DIRECT, CONSEQUENTIAL, OR INCIDENTAL, ARISING OUT OF THE USE OR INABILITY TO USE THIS PRODUCT.

Important: The above warranty shall be void if the customer fails to operate product in accordance with 3M's written instruction. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

FCC STATEMENT - CLASS A: This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual may cause interference to radio communications. It has been tested and found to comply with the limits for a Class "A" computing device pursuant to Subpart B of Part 15 of the FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his/her own expense will be required to take whatever measures may be required to correct the interference.

EEC STATEMENT: This machine was tested against the 89/336/EEC (European Economic Community) for EMC (Electro Magnetic Compatibility) and fulfills these requirements.

Video Signal Cables: Double shielded coaxial cables (FCC shield cable) must be used and the outer shield must be connected to the ground. If normal coaxial cables are used, the cable must be enclosed in metal pipes or in a similar way to reduce the interference noise radiation.

Video Inputs: The input signal amplitude must not exceed the specified level.

PATENTS, TRADEMARKS & COPY RIGHTS

IBM is a registered trademark of International Business Machines Corporation. Apple Macintosh and Apple Powerbook are registered trademarks of Apple Computer, Inc. Microsoft and Windows 95 & Windows 98 are registered trademarks, and Windows and Windows for Workgroups are trademarks of the Microsoft Corporation. Toshiba is a registered trademark of Toshiba Corporation. All other products are trademarks or registered trademarks of their respective companies.

iscount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Section 1: Unpack

1.1 Contents of Shipping Box

The 3M[™]MP8780 Multimedia Projector is shipped with the necessary cables required for standard VCR, PC, MAC[™] II or laptop computer connections. Carefully unpack and verify that you have all of the items shown below in Figure 1.1. If any of these items are missing, please contact your place of purchase.

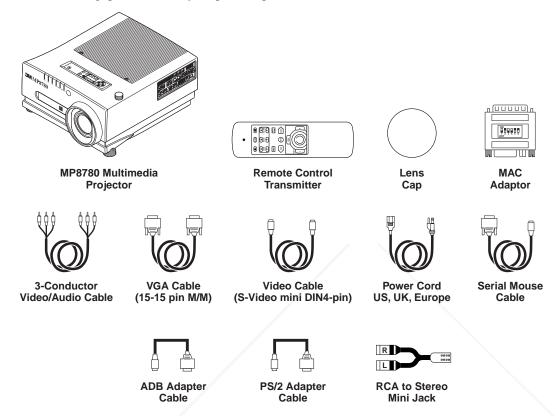


Figure 1.1 Inventory of Shipping Box

1.2 Optional Accessories

- RS-232 control cable(1)
- Gender Change SVGA MAC Monitor Adaptor(1)
- USB mouse cable(1)

1.3 Keep Your Packing Materials

✓ Important

Tave the shipping box and packing materials in the event the MP8780 should require shipping to a 3M Service enter for repair.

Sponsored by DN

145 What's Next?-Merchant.com (800) 281-8860

After you have unpacked the MP8780 system and identified all the parts, you are ready to set up the projector.

We hope you will enjoy using this high performance product in your meetings, presentations and training sessions.

This product has been produced in accordance with 3M's highest quality and safety standards to ensure smooth and trouble free use in the years to come.

Section 2: Product Description

2.1 Machine Characteristics

The MP8780 Multimedia Projector integrates ultra-high bright lamp and polysilicon LCD display technology into a single unit. It accepts input from three different computer sources and three video/audio sources and projects a bright, super crisp image. Switching your presentation from a computer input to a video input, and then back to a computer input simply requires the push of a button on the remote control keypad or control panel keypad.

The MP8780 Multimedia Projector offers the following features:

- Ultra-high brightness projection lamp
- Real XGA (1.8 inch XGA HTPS LCD panels with high aperture ratio)
- Intelligent scaling for UXGA, SXGA,XGA, SVGA, VGA
- Automatic optimum source selection display
- USB, Serial, PS/2 and Apple Desktop Bus (ADB) mouse emulation
- Manual lens shift without keystone correction
- Power zoom and focus
- Freeze and Magnify Functions
- Picture-in-picture (PIP)
- Timer function
- Two internal stereo speakers (3W x 2)
- Three computer inputs: RGB1, RGB2, RGB3 (BNC)

- Three video inputs: Video1, Video2, Video3
- Easy to set up and use
- Ability to display 16.7 million colors
- Digital Gamma Correction
- High resolution and component video compatible
- Higher resolution for video by de-interlacing
- Full function remote control
- Volume control for external speakers
- RS-232 control capability
- Horizontal and vertical image inverting
- Horizontal and vertical image position control
- Automatic keystone correction
- On screen menus in seven languages
- IR remote control sensor in front/rear
- Color balance control for data/video
- Optional ceiling mount kit

✓ Note

The MP8780 is one of the brightest projectors in the marketplace. The brightness of your machine will vary depending on the ambient room conditions and contrast/brightness settings.



2.2 Part Identification List

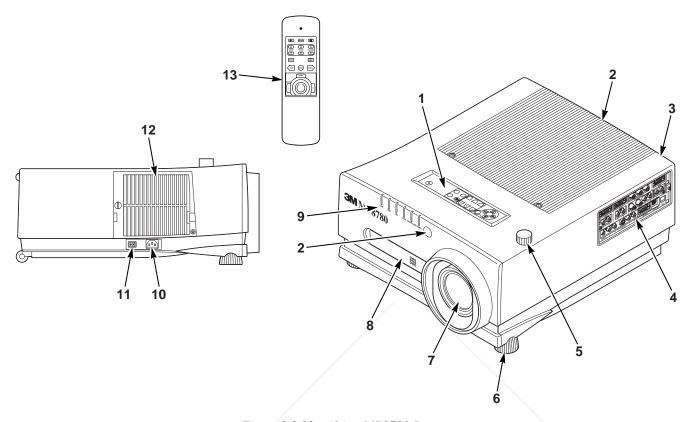


Figure 2.2 Identifying MP8780 Parts

5.

6.

7.

8.

9.

- 1. **Operation Panel**
 - a) STANDBY/ON button
 - b) Input Source: RGB/Video
 - c) Mute, Blank, Volume, Zoom, Focus
 - d) Display Menu (On/Off)
 - Select button (select displayed value)
 - Arrow Direction buttons (left/right or up/down)
- 2. Remote Control Sensors (front/back)
- 3. Stereo Speakers
- 4. **Terminal Connection Panels**
 - S-Video, Video, Audio inputs
 - b) RGB1, RGB2 and RGB3 inputs
- FixYog) DRGB coupput
 - d) Audio L/R input, Audio output (RCA jack)
 - RS-232 Control
 - **UBS** Port

- 10. AC Power Cord Input
- Main Power Switch (On/Off) 11.

Image Shift Control

Projection lens

Carry Handle

Fan

b)

c)

d)

LED Indicators Lamp

Temperature

Cover open

Power On

Change lamp

Height Adjustment Feet

Lamp Access Door


Remote Control Transmitter GG ISSOR IS g) Mouse control port (serial/PS/2/ADB)

h) RGB3 or component video (BNC)


2.3 System Setup - Connecting Various Equipment


It only takes a few minutes to connect the 3MTM Multimadia Projector MP8780 to your computer, VCR, or other device. Always disconnect the projector power before connecting any cables.

Connection Terminals

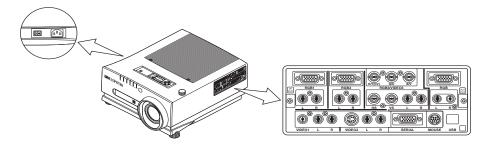


Computer Connections

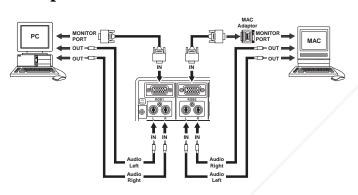


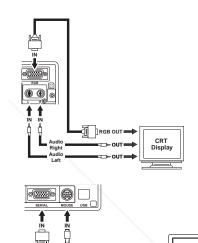

Video Connections

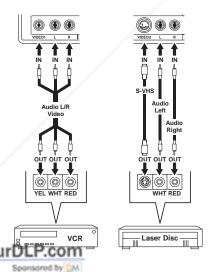

BNC Connections



count-Mercharcation (800) 281-8860

Turn power off to all devices before making connections. Never plug anything into the projector or computer while any device is in operation.

The MP8780 must be powered down when making connections. The mouse emulation (except USB) may not work if the unit is not powered down before the mouse cable connections are made.

2.3 System Setup - Connecting Various Equipment (continued)

BNC Connections

There are four kinds of usage for BNC connectors:

	Purpose		Usage of BNC			Menu S	Menu Selection	
		R/Y(CV)	G/U	B/V	HS	vs	Selection1	Selection2
Usage 1	RGB Input	Red	Green	Blue	HS	VS	RGB3	
Usage 2	Component Input	Y	U	V	NC	NC	VIDEO3	YUV
Usage 3	CV	CV	NC	NC	NC	NC	VIDEO3	CV/S
Usage 4	S-video	Y	С	NC	NC	NC	VIDEO3	CV/S

(Note): NC No Connection

Usage 1: Selecting "RGB" determines the usage of BNC as RGB Input.

Usage 2: Selecting "VIDEO3" and "YUV" determines the usage of BNC as Component Input.

Usage 3/4: Selecting "VIDEO3" and "CV/S" determines the usage of BNC as CV or S. Usage of BNC as CV or S is determined automatically by detecting input signal by the projector.

On the above table, "Selecting 1" is done by direct "RGB" or "VIDEO" button of Oeration Panel or Remote Controller. Selection 2 is done by "MENU" button and selecting "OPTION"-1st layer, "BNC"-2nd layer and "YUV/CV/S"-3rd layer.

AppleTM **Desktop Mouse** - The Macintosh operating system should recognize the MP8780 as a mouse without any drivers being loaded.

VirtualMouse for PC Computer - For IBMTM compatible computers, the operating systems will need to be set to "Serial Mouse," "PS/2 Mouse" or "USB Mouse" to recognize the projector as a mouse pointer device.

Change mouse driver information to "Serial Mouse", "PS/2 Mouse" or "USB Mouse".

- a) WindowsTM 95/WindowsTM 98 Click "Start;" select "Settings;" select "Control Panel." Click on "Mouse;" select the "General" tab; (see what driver is currently loaded and make note of it); select "Change;" select "Show all devices;" (make note of the current Manufacturer and Model); select "Standard Mouse Type" for Manufacturer; then select "Standard Serial Mouse" or "Standard PS/2 Mouse". Click OK to change and apply the new driver. Restart Windows if prompted.
- b) WindowsTM 3.1 From "Program Manager" click "Main;" then click "Windows Setup," (make note of what the current mouse driver is); Click "Options;" then "Change Systems Settings." Choose "Mouse." It should be listed as "Microsoft or IBM PS/2."

✓ Note

proper mouse operation, always turn the projector power on first and then power up the computer.

For some laptop computers you may need to disable the internal pointing device (IPD). This is done through the BIOS level set up of the particular machine, or it could be listed in a "Utilities" program group, i.e., "Toshiba Utilities™" or "Thinkpad Features™"

2.4 Remote Control Transmitter Identification

MUTE STANDBY/ON Press button to turn the mute function Set main power switch to ON. Press (speaker sound) ON/OFF. STANDBY/ON button to begin projection mode (lamp on) To turn lamp off, press STANDBY/ON MUTE **FOCUS** STAND/ON then select YES on Shut Down (D) (BLANK) (**4**X) screen. Select NO to continue running. Press (+) or (-) to adjust the image sharpness. + (+) $\overline{+}$ **BLANK** FOCUS VOLUME ZOOM **VOLUME** Press button to turn ON/OFF the screen Press (+) to increase or (-) to decrease blanking function. speaker volume. ZOOM VIDEO RGB TIMER **VIDEO** Press (+) to increase or (-) to decrease the Press the VIDEO button to select the input size of the displayed image source. Press again to select the next source FREEZE MENU MAGNIFY (Video1 - Video2 - Video3 - Video1). RGB -Press the RGB button to select the input DRAG source. Press again to select the next **MENU** source (RGB1 - RGB2 - RGB3 - RGB1). Press to display the menu screen. Q ⊕ TIMER -**MAGNIFY** R Press button to turn the menu screen timer L Press to enter the Magnify Mode. Operate ON/OFF. The timer does not display when mini-joy stick or press L or R button to the blank function is active. Second press SELECT control magnify function. stops timer. Third press deletes timer from screen display. R FREEZE -Press for right mouse button function, Mouse Press button to turn ON/OFF the freeze Mode. Press to reduce size of magnified image function. Allow background to refresh image, Magnify Mode. in PIP Mode1. **MINI-JOY STICK** DRAG -Operate for normal mouse functions. Mouse In mouse mode, press button to hold, Mode, Operate for select function, Menu reposition and drop an object on the Mode. Operate to change the image area to screen. In MAGNIFY mode, press be magnified, Magnify Mode. MAGNIFY button then press the DRAG

L-SELECT -

Press for left mouse button function, Mouse Mode. Press for select function, Menu Mode. Press for magnify function, Magnify Mode.

button and change the magnifying position

by moving the MINI-JOY stick.

FixYourDLP.com

scount-Merchant.com (800) 281-8860 HE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Section 3: Basic Operations

3.1 Projector Startup

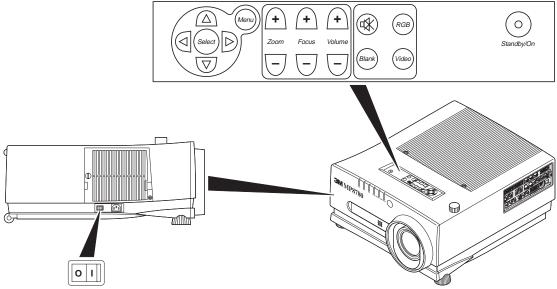


Figure 3.1 Projector Controls

- 1. Make all cable connections and line hookups with the power off.
- 2. Turn the POWER SWITCH of the projector on. The ON indicator will light up orange.
- 3. Press the STANDBY/ON button . The ON indicator blinks (green) and then lights (green). The ON indicator will blink green during warm-up and lamp ignition. When power is turned off, there is a 90 second reset period before the STANDBY/ON button will function again.
- 4. Adjust the screen size by pressing the ZOOM +/- button.
- 5. Adjust the sharpness by pressing the FOCUS +/- button.
- **6.** Turn on all connected equipment. Refer to section 2.3.
- 7. Press the RGB/VIDEO button on the projector or remote to select the source of the signal to be projected on the screen. The selected signal input is displayed at the top right of the screen. The display will show the last selected input source before power was turned off.

3.2 Projector Shutdown

1. In projection mode, press the STANDBY/ON button. The Shut Down screen will display. Select the

YES option (press arrow button or mini-joy stick) to turn off. The fan will continue to run for approximately 90 seconds.


Turn the MAIN POWER SWITCH of the projector off.

Do not turn off the POWER SWITCH before pressing the STANDBY/ON button. After the STANDBY/ON button is pressed, the fan rotates for about 90 seconds to cool the projector.

- 3. Attach lens cap to protect projection lens.
- 4. Disconnect cables if moving projector to new location.

Section 4: Adjustments and Functions

4.1 Menu Navigation

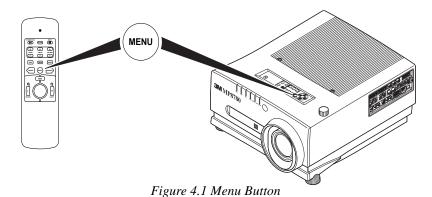

- 1. Press MENU button on projector or remote control. On-screen menus are displayed on the screen.
- 2. Select the sub-menu (SETUP, IMAGE, OPTION) to be adjusted using the SELECT () buttons or MINI-JOY STICK. Selected Menu is highlighted.


✓ Note

Separate settings are provided for the VIDEO1, VIDEO2, RGB1, RGB2 and RGB3 input terminals. Adjustments are saved after power off.

4.2 How To Use Height Adjustment Feet


Adjust the image elevation using the height adjustment at the front of the projector.

- 1. Raise the front end of the projector so the feet are not touching the table top.
- 2. Rotate or retract each foot to the desired height.

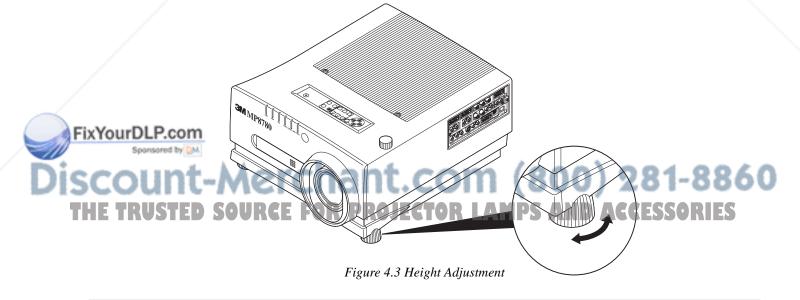

4.3 SETUP

The SETUP sub-menu is used to adjust and move the image position. The projector will display either the RGB (Figure 4.4) or Video (Figure 4.5) menu according to the input source being projected.

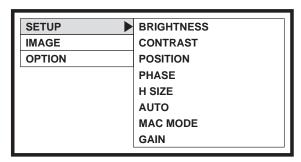

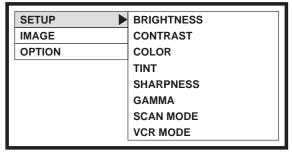


Figure 4.4 RGB Signal

Figure 4.5 Video Signal

Set Menu - RGB Input/Video Input

RGB Screen	Video Screen	Value/Position	Factory Setting
BRIGHTNESS	BRIGHTNESS	±00 (-10~+10)	±00
CONTRAST	CONTRAST	±00 (-10~+10)	±00
POSITION		H±000 (±127)	±000
		V±000 (±127)	±000
PHASE	/	00 (0~19)	00
H SIZE		±00 (±64)	±00
AUTO		✓ H SIZE	yes
		✔ POSITION	yes
		✔ PHASE	yes
		GAIN	no
MAC MODE		On=MAC has priority	off
		Off=VESA has priority	
GAIN	/	R ±00 (±64)	R ±00
		G ±00 (±64)	G ±00
		B ±00 (±64)	R ±00
	COLOR	±00 (-10~+10)	+00
		, , ,	
	TINT	±00 (-10~+10)	±00
	SHARPNESS	±00 (-10~+10)	±00
	GAMMA	±00 (-10~+10)	±00
	SCAN MODE	Movie (video)	movie
		Photo (still photo)	
	VCR MODE	On (VCR mode)	Off
		Off (normal)	



✓ Note

TINT cannot be adjusted with a PAL, M-PAL or SECAM video signal input.


TINT, COLOR and SHARPNESS cannot be adjusted with an RGB signal input.


V. POSIT, H. POSIT, H. PHASE and H. SIZE cannot be adjusted with a VIDEO signal input.


Menu operation is not possible during magnify or freeze functions.


4.4 IMAGE

The IMAGE sub-menu is used to change the image characteristics.

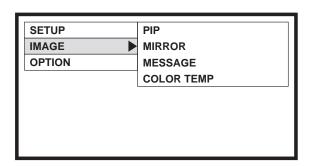

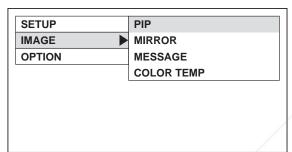

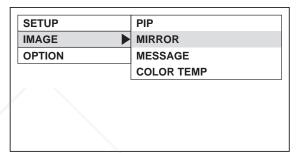

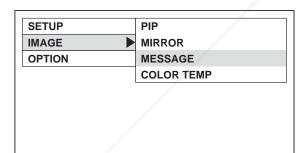

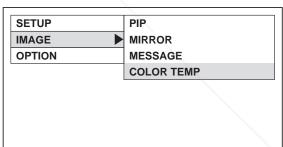



Figure 4.6 Image Adjustment Screens


IMAGE MENU


Adjustment Screen	Value Description	Default
PIP	OFF – Reset PIP mode	OFF
	ON1 – Computer input frozen, no screen updates occur	
	ON2 – Screen Refreshed	
MIRROR	NORMAL – Standard tabletop projection (no inversion)	NORMAL
	H INVERT – Rear projection application	
FixYourDLP.com	ON – display messages	ON
FIX YOURDLP.COM	OFF – do not display messages	
COLOR TEMP	NATIVE - Maxiun brightness	COMPUTER: NATIVE
iccount AA	COOL - High temperature	VIDEO: MEDIUM
ISCOUIIL-M	MEDIUM - Medium temperature	/ ZO 1-000
THE EDUCTED CAN	WARM - Low temperature	ACCECCADIEC


4.5 OPTION


The OPT. sub-menu allows you to control communication function.

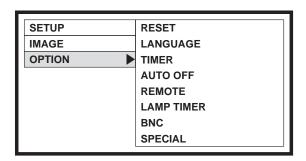


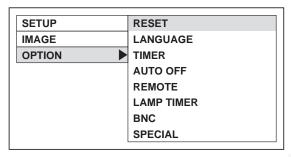


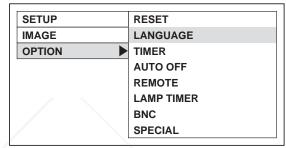


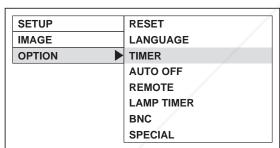

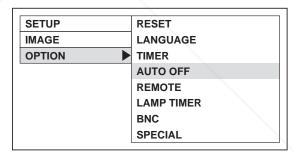

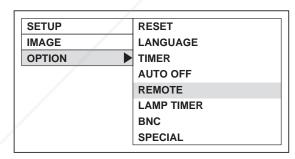

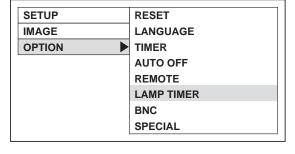

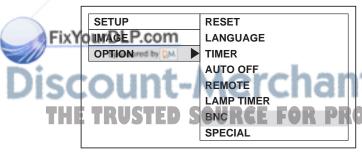

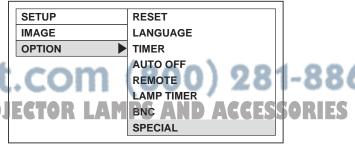


Figure 4.7 OPTION Adjustment Screens

4.5 OPTION (continued)

OPTION MENU

Adjustment Screen	Value Description	Default
RESET	DEFAULT – Reset to factory default settings	
	LAMP TIMER – Reset lamp timer hours to zero	
LANGUAGE	ENGLISH	
	FRANCAIS	
	DEUTSCH	
	HOLLANDS (NEDERLANDS)	ENGLISH
	DUTCH	
	ITALIANO	
	SVENSKA	
TIMER	POSITION 1 – Display timer in lower right of screen	POSITION 1
	POSITION2 – Display timer in center of screen	
AUTO OFF	YES – automatic power off after 10 minutes of no input	NO
	NO – manual power off	
REMOTE	Both – Enable front & rear sensors	
	FRONT – Enable front sensor only	BOTH
	REAR – Enable rear sensor only	
	OFF – Turns off sensors	
LAMP TIMER	CURRENT TIMER – Displays current lamp	
	operating hours	
BNC	YUV – Selects component video	YUV
	CV/S – Selects composite or S-video	
SPECIAL	FIRMWARE REV – Display revision level of Firmware,	
	Input type, horizontal/vertical frequency	




Section 5: Maintenance

5.1 Cleaning the Air Filter

✓ Note

Clean the air filter about every 50 hours, if air is restricted due to dust accumulation on filter, the projector may shut down due to overheating.

- 1. Turn off the MAIN POWER switch of the projector and pull out power cord. Let cool for 20 minutes.
- 2. Remove the air filter from the bottom of projector. Push down on tabs (1), open cover (2) and slide cover off (3).
- 3. Turn cover over and carefully remove foam air filter screen (4).
- 4. Clean foam screen and metal screen using a vacuum cleaner.
- 5. Re-install air filter and replace air filter door.

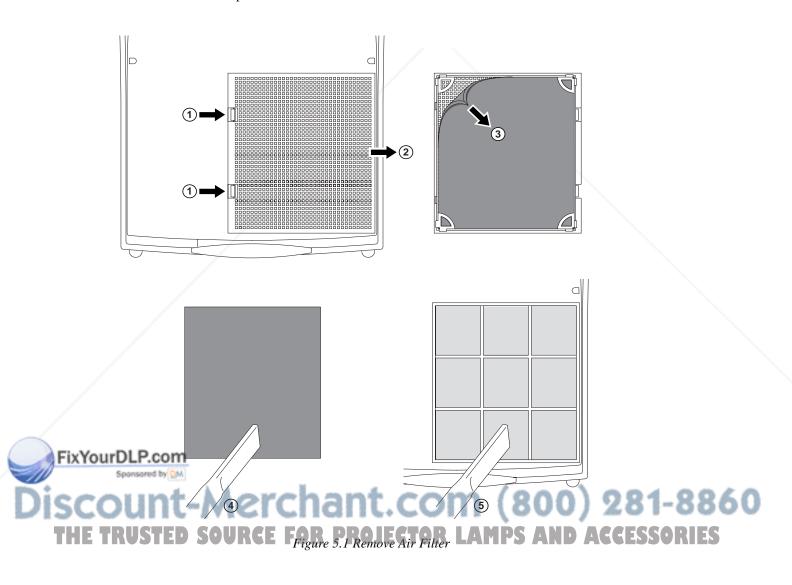

Section 6: Lamp

6.1 Lamp

The following symptoms may indicate a lamp in need of replacement:

- LAMP indicator lights up red.
- "CHANGE THE LAMP" message appears on the screen.

✓ Note

This lamp contains mercury. Consult your local hazardous waste regulations and **dispose of this lamp in a proper manner**.

6.2 Display Lamp Operation Hours

The lamp operating hours will display when the projector is powered up.

When the lamp operating hours reach 950 hours, the message "CHANGE LAMP" will display and the change lamp indicator will flash red. When the operating hours exceed 1000 hours, the message "CHANGE LAMP NO LIFE" will display and the projector power will automatically turn off after 10 minutes.

✓ Note

After normal lamp operating time has expired, the projector will only run for 10 minute intervals when restarted until the lamp is replaced and the lamp timer is reset. The message "CHANGE LAMP" will display in red at projector start up to remind you to change the lamp.



6.3 Replacing the Lamp

♠ WARNING

To reduce the risk of electrical shock, always turn off projector and disconnect power cord before changing lamp.

Caution

To reduce the risk of severe burns, allow the projector to cool for at least 45 minutes before replacing the lamp.

To reduce the risk of cuts to fingers and damage to internal components, use caution when removing lamp glass that has failed and shattered into sharp pieces.

✓ Note

For maximum lamp life, do not apply shock, handle or scratch the lamp glass when it is hot. Also, do not use an old or previously used lamp as a replacement lamp.

- **Loosen cover retaining screws:** The lamp access cover is located on the side of the projector. Use a screwdriver to uncrew the retaining screws (1) on the left and right side of the cover.
- **Remove lamp cover:** Press the spring tabs on each side of the cover and gently remove the lamp cover (3).
- Loosen lamp retaining screws: Use a screwdriver to unscrew the lamp module retaining screws (4).
- **Remove lamp module:** Carefully slide the lamp module out (5) of the projector.

Caution

To reduce the risk of cuts to fingers and/or decreasing image quality by touching the lens, do not insert hand into the empty lamp compartment when the lamp has been removed.

- Insert lamp module: Carefully insert the new lamp module (5). Ensure that it is fully seated. Tighten the lamp module retaining screws (4) to secure the lamp module in place.
- **Insert lamp cover:** Position the lamp cover and depress the spring tabs (2) on each side of the cover to lock it in place.
- 7. **Tighten retaining screw:** Tighten the cover retaining screws (1) to the cover. After replacing the projection lamp, always reset the lamp operation hours to zero.

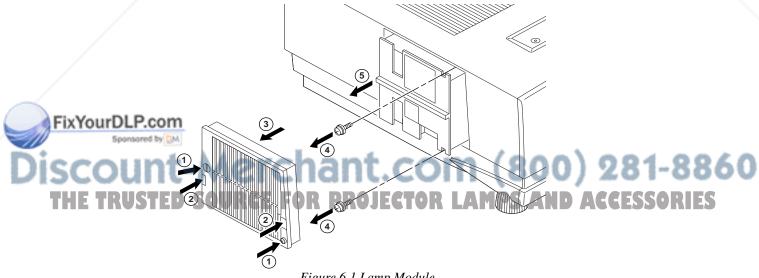


Figure 6.1 Lamp Module

Section 7: Troubleshooting

7.1 Symptom/Solution Table

Symptom	Cause	Solution
Power cannot be turned on.	 The Main power is not turned on. The power cord is disconnected. 90 seconds have not elapsed since the power was turned off. 	 Turn the MAIN POWER switch on. Insert the power cord into an AC socket. Wait 90 seconds before turning on power.
No picture and sound.	 The setting of the input source is not correct. RGB/Video/Audio wiring to projector is not correct. 	 Set the correct input using the input select button of the projector or the remote control. Connect the cable to correct input/output source.
Sound is heard with no picture.	RGB/Video/Audio wiring to projector is not correct. Lens cap is on.	Connect the cable to correct input/output source. Remove lens cap.
Picture is displayed with no sound.	 Audio wiring to projector is not correct. The volume is set to minimum. The unit is muted. 	 Connect the cable to correct input/output source. Press the VOL button to increase Volume. Press the MUTE button.
Color is weak and tint is incorrect.	The color and tint have been adjusted incorrectly.	Adjust the color and tint correctly.
Picture is dark.	The brightness and contrast has not been adjusted incorrectly. The lamp needs to be replaced.	Adjust the brightness and contrast correctly. Replace the lamp with a new one.
Picture is not clear	Projector is out of focus.	Adjust the focus and PHASE.
LAMP indicator lights red.	Lamp will not ignite.	• Turn off power and let cool for 20 minutes, then restart. • If problem persists call your dealer.
Cover indicator red.	Air filter door on bottom of case is open.	Ensure air filter door is closed.
TEMP indicator red.	Temperature inside projector is too hot.	Clear blocked ventilation holes. Clean air filter.

7.2 Message/Solution Table

Error Message Displays	Cause	Solution
NO SIGNAL IS DETECTED.	The projector is not detecting a signal.	Check cable connections to input device. Input device not connected to this input mode, switch to next mode.
INVALID.	The horizontal frequency of input signal exceeds projector capability.	Switch projector to correct resolution. See Appendix A.5
CHANGE THE LAMP. LIFE: 50 HS	Lamp operation time is greater than 950 hours.	Change the projector lamp and reset the lamp operation hours to zero.
CHANGE THE LAMP. NO LIFE.	Lamp operation time is greater than 1,000	Change the projection lamp and reset the lamp operation hours to zero.

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Section 8: Accessories

8.1 Service Information

For product information, product assistance, service information, or to order accessories, please call:

In U.S. or Canada: 1-800-328-1371

In other locations, contact your local 3M Sales office.

-Accessories	Part Number
Metal Halide lamp module, 440 W · · · · · · · · · · · · · · · · · ·	
Power cord (US)·····	
Power cord (UK) · · · · · · · · · · · · · · · · · · ·	
Power cord (Germany) · · · · · · · · · · · · · · · · · · ·	DY-0205-1354-4
VGA cable · · · · · · · · · · · · · · · · · · ·	
MAC adapter · · · · · · · · · · · · · · · · · · ·	78-8118-3391-8
S-video cable · · · · · · · · · · · · · · · · · · ·	78-8118-3238-1
3-conductor video/audio cable · · · · · · · · · · · · · · · · · · ·	78-8118-3234-0
Serial mouse cable · · · · · · · · · · · · · · · · · · ·	78-8118-3243-1
PS/2 mouse cable · · · · · · · · · · · · · · · · · · ·	78-8118-3387-6
ADB mouse cable	78-8118-3388-4
Remote Control · · · · · · · · · · · · · · · · · · ·	
Gender changer·····	78-8118-3239-9
Not Included with Basic Packet	Part Number
Ceiling mount · · · · · · · · · · · · · · · · · · ·	78-6969-8921-5
Adjustable height suspension · · · · · · · · · · · · · · · · · · ·	
Shipping case · · · · · · · · · · · · · · · · · · ·	
RS-232 control cable · · · · · · · · · · · · · · · · · · ·	
USB mouse cable	

How to Order

Please order these parts through your dealer, or contact 3M Customer Service at the following number:

In U.S. or Canada: 1-800-328-1371

In other locations, contact your 3M Sales office.

The contents of this manual are subject to revision without prior notice.

3M assumes no responsibility for the infringement of special rights of a third party or other rights that may arise out of the information contained in this manual.

production of this manual in any form without prior permission is strictly prohibited.

3M will replace the manual if any pages are missing or collated incorrectly.

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Appendix: Technical Information

Table of Contents

- **A.1** Technical Specifications
- **A.2** Dimensions
- **A.3** Projector-to-Screen Distance
- A.4 Connection to the Video Signal Terminal
- A.5 Connection to the RGB Signal Terminal
- **A.6** Indicator Status
- **A.7** Connection to the Control Signal Terminal


A.1 Technical Specifications

✓ Note

All specifications are subject to change without notice.

Product name Model Name Display system		Multimedia projector		
		MP8780		
		3 LCD panels, strip pixel configuration.		
Panel size		46 mm (1.8 in.)		
Liquid crystal panel	Drive system	TFT active matrix		
F 4 6.	Number of pixels	786,432 pixels (V768 × H1024) per panel. 2.36 million total pixels with 3 panels.		
Lens		F/Number: $F/2.7 - F/3.4$ Focal Length: $F = 72 - 108 \text{ mm}$ (2.8 in. -4.3 in		
Lamp	/	Metal Halide lamp 440W		
Speaker (stereo)		2 x 3 watt		
Power supply		AC100 ~ 240V, 6.5A ~ 2.9A, 50/60 Hz (Automatic)		
Power consump	tion	630W typical		
Operating temper	erature range	32° ~ 95°F (0° ~ 35°C)		
Dimensions		17.2 in. (W) x 8.9 in. (H) x 19.8 in. (D) 430 mm (W) x 222 mm (H) x 495 mm (D)		
Weight		16.0 kg (35 lbs.)		
	video signal input terminal	S VIDEO: Mini DIN 4pin terminal VIDEO: RCA Jack termina + BNC AUDIO: RCA Jack terminal		
Your Olputco	RGB input/output signal terminal	RGB signal : D-sub 15pin (Female) AUDIO : RCA Jack + BNC		
terminal	Control terminal	D-sub 9pin (Male)		
coun	Mouse	MD 9pin (serial/PS2/ADB)		
		TAR BRAILGHAR LAWRE AND ACCIDED		

A.2 Dimensions

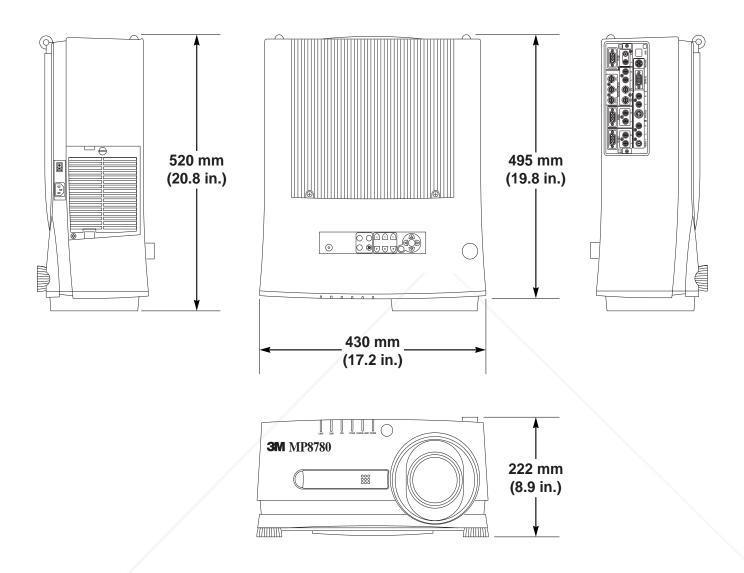



Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES


Example of the Multimedia projector and screen installation. Determine picture size and projection distance as shown below.

	Screen Size	Distance t	o Screen	
Width	Height	Diagonal	Minimum	Maximum
81 cm	61 cm	102 cm	145 cm	226 cm
(32 in.)	(24 in.)	(40 in.)	(4.7 ft)	(7.4 ft)
130 cm	91 cm	152 cm	226 cm	347 cm
(48 in.)	(36 in.)	(60 in.)	(7.4 ft)	(11.4 ft)
180 cm	122 cm	203 cm	306 cm	468 cm
(64 in.)	(48 in.)	(80 in.)	(10 ft)	(15.3 ft)
230 cm	152 cm	254 cm	386 cm	588 cm
(80 in.)	(60 in.)	(100 in.)	(12.7 ft)	(19.3 ft)
280 cm	183 cm	305 cm	467 cm	709 cm
(96 in.)	(72 in.)	(120 in.)	(15.3 ft)	(23.3 ft)
354 cm	229 cm	381 cm	587 cm	890 cm
(120 in.)	(90 in)	(150 in.)	(19.3 ft)	(29.2 ft)
179 cm	305 cm	508 cm	788 cm	1193 cm
(160 in.)	(120 in.)	(200 in.)	(25.8 ft)	(39.1 ft)
728 cm	457 cm	762 cm	1190 cm	1197 cm
(287 in.)	(180 in.)	(300 in.)	(39 ft)	(58.9 ft)

✓ Note

These sizes are \pm 1%. This is due to variations in the manufacture of the lens. If you are close to one of the endpoints you should verify with your unit that the image is the proper size at the proper distance.

The image can be shifted up or down without distortion (keystoning) by turning the Image Shift Control knob on the top of the projector.

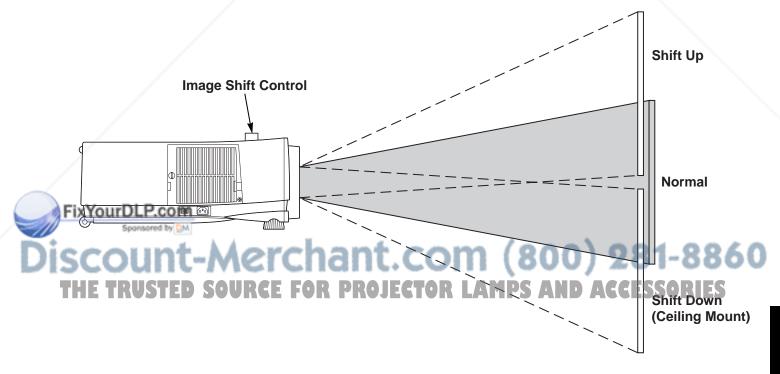


A.4 Connection to the Video Signal Terminal

a) Input signal

S-VIDEO signal		Luminance signal Chrominance signal	1.0Vp-p, 75 Ω termination 0.286Vp-p (burst signal), 75 Ω termination
VIDEO signal			1.0Vp-p, 75 Ω termination
AUDIO signal	Input		140mVrms, 46 k Ω (MAX 7.0Vp-p)
/ to b to digital	Output		0-140mVrms, 680 Ω

b) Signal input terminal



S VIDEO input (Mini DIN 4pin)

✓ Note

Video input signal terminals have priority in the following order:

- 1. S-VIDEO input terminal
- 2. RCA jack (composite) input terminal

Audio sound from input devices is output to the RGB/Video out jack.

A.5 Connection to the RGB Signal Terminal

a) Input signal / Output signal

Video signal		Analog 0.7Vp-p 75 Ω termination (Positive polarity)
Horizontal sync signal		TTL level (Positive/negative polarity)
Vertical sync signal		TTL level (Positive/negative polarity)
Composite sync signal		TTL level (Negative polarity)
Audio signal	Input	140mVrms, 46k Ω (MAX 7.0Vp-p)
Addio Signal	Output	0 ~ 140mVrms, 680 Ω

b) Signal input terminal / output terminal

	1	Video signal (Red)	9	No Connection
	2	Video signal (Green)	10	Ground
	3	Video signal (Blue)	11	Ground
	4	No Connection	12	No Connection
ťΥ	OFII	6 Pucom	13	Horizontal/Composite sync signal
	6	Ground (for R)	14	Vertical sync signal
C	7	Ground (for G)	15	No Connection
	8	Ground (for B)	RC	F FOR PROIFCTOR

M (800) 281-8860
LAMPS AND ACCESSORIES

Scan Frequency


			Scan F	requency			
					Dot Clock		
Mode No.	H-Size	Resolution	H (kHz)	V (Hz)	(MHz)	Computer	
1	780	320x480i	15.7	59.9	12.270	NTSC(RGB)	RGB-NTSC
2	940	384x576i	15.6	50.0	14.687	PAL(RGB)	RGB-PAL
3	848	640x400	24.8	56.4	21.053	640X400	TEXT56
4	900	720x400	31.5	70.1	28.322	720X400	TEXT70
4	800	640x400	31.5	70.1	25.175	720X400	TEXT70
4	800	640x350	31.5	70.1	25.175	720X400	TEXT70
5	936	720x400	37.9	85.0	35.500	720X400	TEXT85
5	832	640x400	37.9	85.1	31.500	720X400	TEXT85
5	832	640x350	37.9	85.1	31.500	720X400	TEXT85
6	800	640x480	31.5	59.9	25.175	640X480	VGA60
7	896	640x480	35.0	66.6	31.334	MAC13	MAC13
8	832	640x480	37.9	72.8	31.500	640X480	VGA72
9	840	640x480	37.5	75.0	31.500	640X480	VGA75
10	832	640x480	43.3	85.0	36.000	640X480	VGA85
11	1024	800x600	35.2	56.3	36.000	800X600	SVGA56
12	1056	800x600	37.9	60.3	40.000	800X600	SVGA60
13	1040	800x600	48.1	72.2	50.000	800X600	SVGA72
14	1056	800x600	46.9	75.0	49.500	800X600	SVGA75
15	1048	800x600	53.7	85.1	56.250	800X600	SVGA85
16	1152	832x624	49.7	74.6	57.283	MAC16	MAC16
17	1344	1024x768	48.4	60.0	65.000	1024X768	XGA60
18	1328	1024x768	56.5	70.1	75.000	1024X768	XGA70
19	1312	1024x768	60.0	75.0	78.750	1024X768	XGA75
20	1376	1024x768	68.7	85.0	94.500	1024X768	XGA85
21	1312	1024x768	48.8	60.0	64.000	MAC19A	MAC19A
22	1328	1024x768	60.2	74.9	80.000	MAC19B	MAC19B
23	1264	1024x768i	35.5	87.0	44.900	1024X768I	XGAi
24	1472	1152x864	54.1	60.1	79.648	1152X864	
25	1472	1152x864	64.0	70.0	94.178	1152X864	
26	1600	1152x864	67.5	75.0	108.000	1152X864	
27	1568	1152x864	77.3	84.9	121.268	1152X864	
28	1456	1152x870	68.6	75.0	99.931	MAC21	MAC21
29	1500	1152x900	61.8	66.0	92.707	1152X900	SUN
30	1800	1280x960	60.0	60.0	108.000	1280X960	
31	1680	1280x960	75.0	75.0	126.000	1280X960	
32	1728	1280x960	85.9	85.0	148.500	1280X960	
33	1688	1280x1024	64.0	60.0	108.000	1280X1024	SXGA60
34	1688	1280x1024	80.0	75.0	135.000	1280X1024	SXGA75
xYou•DLP	CO1728	1280x1024	91.1	85.0	157.500	1280X1024	SXGA85
36 Sponsor		1280x1024i	47.7	88.8	80.534	1280X1024I	SXGAi
37	2160	1600x1200	75.0	60.0	162.000	1600X1200	UXGA60
38	2160	1600x1200	81.3	65.0	175.500	1600X1200	UXGA65
39	2200	1920x1080i	33.7	59.9	74.176	HDTV1080I	HDTV1080
39	1100	960x1034i	33.5	59.0	36.851	HDTV1080I	HDTV1034
40	1650	1280x720	45.0	59.9	74.176	HDTV720P	HDTV720P
41	2200	1920x1080	67.4	59.9	148.352	HDTV1080P	HDTV1080P
,	•	•		•	•	•	•

c) Example of computer signal (continued)

Note 1: MAC adapter is necessary to set the resolution mode. Projector is compatible with 13 inch mode and 16 inch mode.

Set all dip switches OFF except those indicated below.

MAC 13" mode = switch 1 and 2 are ON MAC 16" mode = switch 2 and 4 are ON

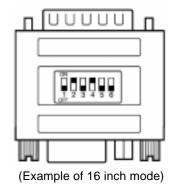

Note 2: Some input sources may not be displayed properly because they are not compatible with the projector.

A.6 Indicator Status

The indicators lamps will light or flash to indicate the following operating conditions:

POWER	CHANGE LAMP	COVER	FAN	TEMP	LAMP	Meaning	Remedy
Lights						3	
Orange	Off	Off	Off	Off	Off	Standby mode	Normal
Flashes							
Green	Off	Off	Off	Off	Off	During warm up	Normal
Lights	Off	Off	Off	Off	Off	During operation	Normal
Green	Flash RED	Off	Off	Off	Off	The lamp operating hours have reached 950 hours or more	Replace lamp
	Lights RED	Off	Off	Off	Off	The lamp operating hours have reached 1000 hours or more	Replace lamp
Lights Orange	Off	Lights RED	Off	Off	Off	Bottom cover is open	Attach the Bottom cover
	Off	Off	Lightd RED	Off	Off	Cooling fan not operating	Contact your dealer
	Off	Off	Off	Flashes RED	Off	Operating temperature is above normal range	Check the air filter
	Off	Off	Off	Lights RED	Off	Operating temperature is above normal range and projector has overheated	objects blocking ventilation. Lower the ambient temperature.
FixYour	DLP.com Spansared by DM						Contact your dealer
isco	unt-	Off	Off	Off	Lights RED	Lamp or internal power failure	Change lamp. Contact your

When the LAMP indicator lights or flashes, turn the power off. If the problem persists, contact your dealer.

A.7 Connection to the Control Signal Terminal

a) Mouse emulation

- (1) While the projector and computer are turned OFF, connect the projector and the mouse terminal of computer using an appropriate cable (PS/2, Serial or ADB).
- (2) Turn ON the projector.
- (3) Turn ON the computer.
- (4) Select the correct mouse driver for the application. See computer's User Manual for this procedure.


✓ Note

In some Notebook computers with an internal pointing device, mouse emulation will not work unless the internal pointing device is disabled. In this case, disable the internal pointing device in BIOS setting. Check the computer's manual for procedure to follow to disable internal pointing device in BIOS setting.




Turn off the power to both the projector and computer before connecting. Connect the computer to the control terminal of the projector using the appropriate cable.

PS/2 mouse

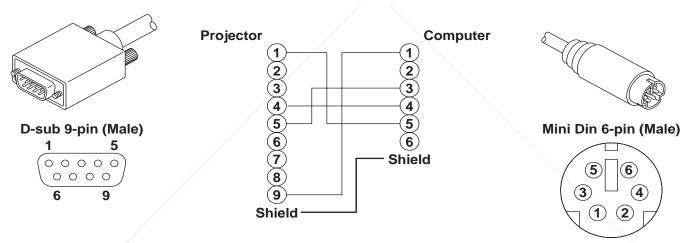


ADB mouse

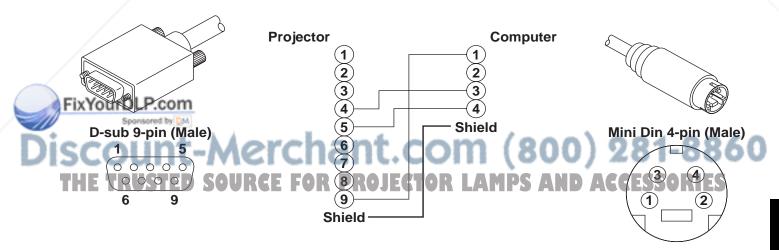

A.7 Connection to the Control Signal Terminal (continued)

Serial mouse

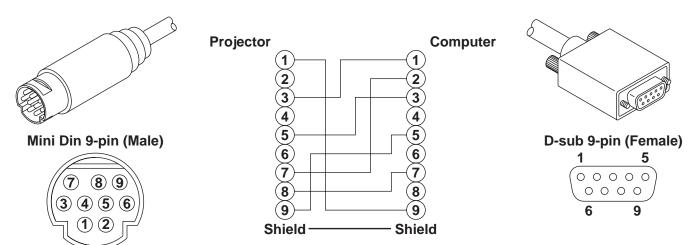

RS-232 Control Cable (not included with basic packout)

This cable is used to directly control the projector without using the Remote Control or Operator's Panel.

Not available for this printing.




Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

A-8

A.7 Connection to the Control Signal Terminal (continued)

USB Mouse Cable

This cable is used to connect the projector and computer to allow computer mouse control via the projector's remote control buttons. Connect the cable, select the input source where the computer is to be connected and start the mouse functions.

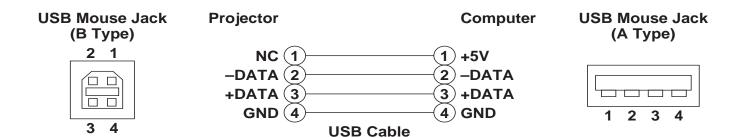

✓ Note

Some laptop computers with a built-in pointing device (track ball) may not recognize the external mouse. In this case, change the BIOS (system setup) so that an external mouse can be selected. Some computers may not have the necessary utility program to operate a mouse. Refer to the computer hardware manual.

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

A.8 Serial Inferface Command Codes

Command Code Formats

All codes in this document are in ASCII Text. In order to get this to work you must send at the same communication setting as the projector.

This should be 9600 8N1.

For the rest of this document CR is a carriage return which is code 13.

There are two types of commands that can be sent to the projector. They are Write or Read commands.

Write Command Format

User:

Code	CR
------	----

Projector (if it worked):

О	K	CR
---	---	----

Projector (if it did not work):

N G CR

Read Command Format

User:

Code	CR
------	----

Projector (if it worked):

Data O K CR

Projector (if it did not work):

N	G	CR



Discount-Merchant.com (800) 281-8860
THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Function	Code	Meaning
Power On/Off	Write Codes	
	D00W00	Power On
	D00W01	Power Off
	D000001	Fower On
	Read Codes	Returns:
	D00R	
	DOOR	00 - Standby
		01 - Power on but no lamp
		02 - Power on and lamp
		03 - Power off but fan running
Source Selection	Write Codes	
	D02W01	RGB 1
	D02W02	RGB 2
	D02W03	RGB 3
	D02W11	Video 1
	-	
	D02W12	Video 2
	D02W13	Video 3
	D03W00	Shows what input is selected on-screen
	Read Codes	Returns:
	D02R	01 – RGB 1
		02 – RGB 2
		03 – RGB 3
		7-1
		11 – Video 1
		12 – Video 2
		13 – Video 3
Volume Control	Write Codes	Sets volume level to a value between 00 and 14 hex.
	D04W00 to	This corresponds to 20 possible settings.
	D04W14	3.
	20	
	Read Codes	Returns:
	D04R	00 to 14 hex
Focus Control	Write Codes	oo to T Hox
Focus Control		200ma Claduvia
	D05W00	300ms Clockwise
	D05W01	300ms Counterclockwis
	D05W10	Continuous Clockwise
	D05W11	Continuous Counterclockwise
	D05W20	Turn off motor
Zoom	Write Codes	
	D06W00	300ms Clockwise
	I D06\\/01	
	D06W01	300ms Counterclockwise
	D06W10	Continuous Clockwise
	D06W10 D06W11	Continuous Clockwise Continuous Counterclockwise
	D06W10	Continuous Clockwise
Mute	D06W10 D06W11	Continuous Clockwise Continuous Counterclockwise
Mute	D06W10 D06W11 D06W20	Continuous Clockwise Continuous Counterclockwise
Mute	D06W10 D06W11 D06W20 Write Codes	Continuous Clockwise Continuous Counterclockwise Turn off motor
Mute	D06W10 D06W11 D06W20 Write Codes D07W00	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off
Mute	D06W10 D06W11 D06W20 Write Codes D07W00	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off
	D06W10 D06W11 D06W20 Write Codes D07W00 D07W01 Read Codes	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off Mute on Returns:
Mute ourDLP.com	D06W10 D06W11 D06W20 Write Codes D07W00 D07W01	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off Mute on Returns: 00 - mute is off
ourDLP.com	D06W10 D06W11 D06W20 Write Codes D07W00 D07W01 Read Codes D07R	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off Mute on Returns:
	D06W10 D06W11 D06W20 Write Codes D07W00 D07W01 Read Codes D07R Write Codes	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off Mute on Returns: 00 - mute is off 01 - mute is on
ourDLP.com	D06W10 D06W11 D06W20 Write Codes D07W00 D07W01 Read Codes D07R	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off Mute on Returns: 00 - mute is off 01 - mute is on
ourDLP.com	D06W10 D06W11 D06W20 Write Codes D07W00 D07W01 Read Codes D07R Write Codes D08W00	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off Mute on Returns: 00 - mute is off 01 - mute is on
ourDLP.com	D06W10 D06W11 D06W20 Write Codes D07W00 D07W01 Read Codes D07R Write Codes D08W00 D08W01	Continuous Clockwise Continuous Counterclockwise Turn off motor Mute off Mute on Returns: 00 - mute is off 01 - mute is on Blank is off - image is shown Blank is on - black screen is shown

Function	Code	Meaning
Contrast	Write Codes D12W00 to D12W14	Set contrast level to a value between 00 and 14 hex. This corresponds to 20 possible settings.
	Read Codes D12R	Returns: 00 to 14 hex
Brightness	Write Codes D13W00 to D13W14	Sets brightness level to a value between 00 and 14 hex. This corresponds to 20 possible settings.
	Read Codes D13R	Returns: 00 to 14 hex
Fint (Hue)	Write Codes D14W00 to D14W14	Sets tint (hue) level to a value between 00 and 14 hex. This corresponds to 20 possible settings.
	Read Codes D14R	Returns: 00 to 14 hex
Color (Saturation)	Write Codes D15W00 to D15W14	Sets color (saturation) level to a value between 00 and 14 hex. This corresponds to 20 possible settings.
	Read Codes D15R	Returns: 00 to 14 hex
Sharpness	Write Codes D16W00 to D16W14	Sets sharpness level to a value between 00 and 14 hex. This corresponds to 20 possible settings.
	Read Codes D16R	Returns: 00 to 14 hex
Gamma	Write Codes D17W00 to D17W14	Sets sharpness level to a value between 00 and 14 hex. This corresponds to 20 possible settings.
	Read Codes D17R	Returns: 00 to 14 hex
PC Mode	Read Codes D30R	Returns: 0 to 41 hex See Computer (RGB) Signal Connection (Section A–5) 00-Shows no input
MAC Mode	Write Codes D32W00 D32W01	MAC MODE "OFF" MAC MODE "ON" Default is "OFF"
	Read Codes D32R	Returns: 00-MAC MODE is OFF 01-MAC MODE is ON
Phase FixYourDLP.com Sponsored by [34]	Write Codes D34W00 to D34W13 D35W00	Set phase to a value in the range of 00 to 13 hex. Reset phase to default
scount-A	Read Codes D34R	Returns: 00 to 13 hex

THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Function	Code	Meaning
Display Position	Write Codes	
. ,	D36W00 to D36WFE	Change vertical display position (up/down) from reset
		position by 00 to FE.
	D37W00 to D37WFE	Change horizontal display position (left/right) from reset
		position by 00 to FE.
	D38W00	Resets display position
	Read Codes	Returns:
	D36R	00 to FE vertical position
	D37R	00 to FE horizontal position
H-Size	Write Codes	The 00 to 80 denotes the deviation of clock numbers from
	D39W00 to D39W80	the standard in one horizontal period. "40" is zero, "00" is -
		64 and "80" is +64 decimal. Default value is "40"
	Read Codes	Returns:
	D39R	00 to 80 hex
On-Screen Displays	Write Codes	
	D51W00	Disables on–screen display except "WARNING"
	D51W01	Enables on–screen display
	Read Codes	00-On-screen display is disabled
	D51R	01-On-screen display is enabled
Language Selection	Write Codes	
	D52W00	English
	D52W01	French
	D52W02	Spanish
	D52W03	German
	D52W04	Dutch
	D52W05	Italian
	D52W06	Swedish
	5 10 1	
	Read Codes	Returns:
	D52R	00 - English
		01 - French
		02 - Spanish
		03 - German
		04 – Dutch
		05 – Italian
Naimen (LLO) (Income in a)	Weite Oade	06 - Swedish
Mirror (H/V Inversion)	Write Codes	NORMAL
	D53W00	NORMAL
	D53W01	H-INVERT
	D53W02	V-INVERT
	D53W03	H&V-INVERT
	Read Codes	Returns:
		00-NORMAL
	D53R	
		01-H-INVERT
ourDLP.com		02-V-INVERT
Auto Offered by DM	Write Codes	03-H&V-INVERT
Auto OII	Write Codes D55W00	Disables auto off
count-Me	D55W00 D55W01	Disables auto off Enables auto off Default is "NO" auto off
E TRUSTED SOUR	FOR PROJECT Read Codes	TOR LAMPS AND AGGESSORIES Returns:
	D55R	00-Auto off is disabled
	200.1	01-Auto off is enabled
	1	I OT AUTO OILIO OILUDIOU

Function	Code	Meaning
IR receiver selection	Write Codes D5AW00 D5AW01 D5AW02	Selects Front and Rear IR Receiver Selects Front IR Receiver Selects Rear IR Receiver
	Read Codes D5AR	Returns: 00-Front and Rear Receiver is selected 01-Front receiver is selected 02-Rear receiver is selected
Magnify	Write Codes D5BW00 D5BW01XY to D5BW07XY Read Codes D5BR	01:x1, 02:x2, 03:x4, 04:x8, 05:x16, 06:x32, 07:x64 XYdenotes magnifying portion (00 to FF) 00 - Off 01 to 07
PIP	Write Codes D5CW00 D5CW01 D5CW02 D5CW03 Read Codes D5CR	Off ON1 ON2 Refreshes the background for ON1 Returns: 00 - Off 01 - ON1 02 - ON2
Lamp Timer Reset	Write Codes D60W00 Read Codes D60R	Resets the lamp timer Returns: xxxx-shows lamp operating time in hours (decimal)
Temperature	Read Codes D61R	Returns: Shows the status of internal temperature 00-Temperature level 0 01-Temperature level 1 02-Temperature level 2 03-Temperature level 3 04-Temperature level 4 (Warning) 05-Temperature level 5 (Power Off)
Error Status	Read Codes D01R	Returns: 00-No error 01-Interlock error 02-Lamp error 04-Temperature error 08-Fan error 10-Memory error
FixYourDLP.com		Note: If there is more than one error, the resulting read code will be the surf the error codes listed above. Example: For Interlock-01 and Lamp-02, resulting read code is 03.

Discount-Merchant.com (800) 281-8860 THE TRUSTED SOURCE FOR PROJECTOR LAMPS AND ACCESSORIES

Important Notice

All statements, technical information, and recommendations related to 3M's products are based on information believed to be reliable, but the accuracy or completeness is not guaranteed Before using this product, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use. Any statements related to the product which are not contained in 3M's current publications, or any contrary statements contained on your purchase order shall have no force or effect unless expressly set forth in a written agreement signed by an authorized officer of 3M.

Warranty and Limited Remedy. This product will be free from defects in material and manufacture for a period of two years from the date of purchase. 3M MAKES NO OTHER WARRANTIES INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. If this product is defective within the warranty period stated above, your exclusive remedy shall be, at 3M's option, to replace or repair the 3M product or refund the purchase price of the 3M product.

<u>Limitation of Liability.</u> Except where prohibited by law, 3M will not be liable for any loss or damage arising from this 3M product, whether direct, indirect, special, incidental or consequential regardless of the legal theory asserted.

Let us help you make the most of your next presentation. We offer everything from presentation supplies to tips for better meetings. And we're the only transparency manufacturer that offers a recycling program for your used transparencies. For late-breaking news, handy reference and free product samples, call us toll-free in the continental United States and Canada, 24 hours a day, or visit our Internet Website.



3M Austin Center Building A145-5N-01 6801 River Place Blvd.

Austin, TX 78726-9000

3M Canada P.O. Box 5757 London, Ontario N6A 4T1 3M Mexico, S.A. de C.V. Apartado Postal 14-139 Mexico, D.F. 07000 Mexico **3M Europe**Boulevard de l'Oise
95006 Cerge Pontoise Cedex
France

Litho in USA Copyright © 1999 3M IPC. All Rights Reserved 78-6970-9001-3 Rev. A



This user manual is provided as a free service by FixYourDLP.com. FixYourDLP is in no way responsible for the content of this manual, nor do we guarantee its accuracy. FixYourDLP does not make any claim of copyright and all copyrights remain the property of their respective owners.

About FixYourDLP.com

FixYourDLP.com (http://www.fixyourdlp.com) is the World's #1 resource for media product news, reviews, do-it-yourself guides, and manuals.

Informational Blog: http://www.fixyourdlp.com Video Guides: http://www.fixyourdlp.com/guides User Forums: http://www.fixyourdlp.com/forum

FixYourDLP's Fight Against Counterfeit Lamps: http://www.fixyourdlp.com/counterfeits

Sponsors:

RecycleYourLamp.org – Free lamp recycling services for used lamps: http://www.recycleyourlamp.org

Lamp Research - The trusted 3rd party lamp research company: http://www.lampresearch.com

Discount-Merchant.com – The worlds largest lamp distributor: http://www.discount-merchant.com

